

EVERBILT™




LEAK TIGHT WASHERS
Arandelas Anti-filtraciones


S-TRAP

Sifón en S

1. Slide nut **(A)** and washer **(B)** on tailpiece
(Use 1 1/2 in x 1 1/4 in washer **(E)** if necessary).
2. Slide J-bend **(C)** onto tailpiece and tighten nut **(A)**.
3. Measure and cut floor tube **(D)** to length. Floor tube **(D)** should go into fitting 1 in minimum.
4. Slide nut **(H)** and washer **(G)** on end of floor tube **(D)** and attach to sink trap **(I)**.
5. Attach floor tube **(D)** and sink trap **(I)** to J-bend **(C)** by tightening nut **(F)**.
6. Tighten nuts. CHECK for LEAKS.

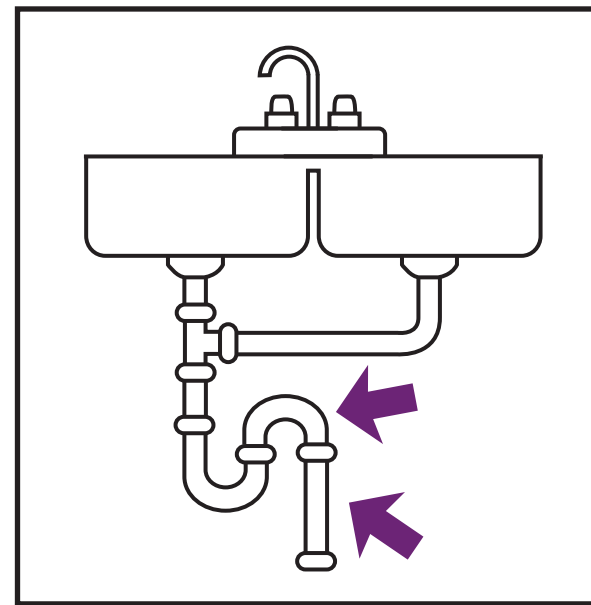

1. Desliza la tuerca **(A)** y la arandela **(B)** en el tubo de conexión (usa una arandela de 1 1/2 plg x 1 1/4 plg **(E)** si es necesario).
2. Desliza el codo en J **(C)** en el tubo de conexión y ajusta la tuerca **(A)**.
3. Mide y corta el tubo de piso **(D)** al largo requerido. El tubo de piso **(D)** debe entrar en el acoplamiento 2.5 cm, como mínimo.
4. Desliza la tuerca **(H)** y la arandela **(G)** en el extremo del tubo de piso **(D)** y conéctalo al sifón del fregadero **(I)**.
5. Conecta el tubo de piso **(D)** y el sifón del fregadero **(I)** al codo en J **(C)** ajustando la tuerca **(F)**.
6. Ajusta las tuercas. VERIFICA QUE NO HAYA FILTRACIONES.

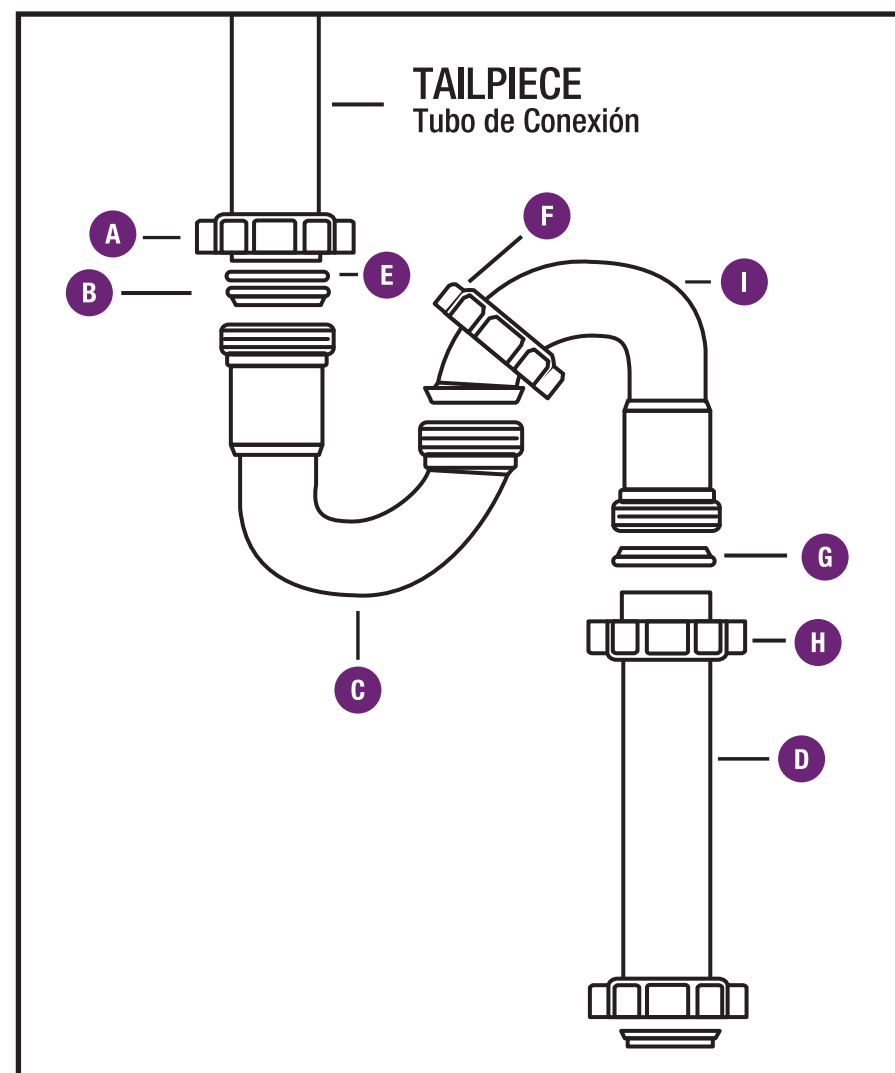

CONTENTS: (1) 1 1/2 in TRAP, (1) 1 1/2 in J-BEND, (3) 1 1/2 in NUTS, (2) 1 1/2 in WASHERS, (1) 1 1/2 in FLOOR TUBE, (1) 1 1/2 in x 1 1/4 in WASHER
Contenido: (1) Sifón de 1 1/2 plg, (1) Codo en J de 1 1/2 plg, (3) Tuercas de 1 1/2 plg, (2) Arandelas de 1 1/2 plg, (1) Tubo de Piso de 1 1/2 plg,
(1) Arandela de 1 1/2 plg X 1 1/4 plg

1000050140