
PROSOCOUSTIC

WAVE Panel Installation Guide

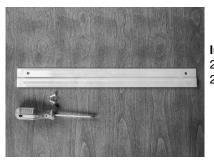

Included items per panel: 2x - Z Clips 2x - 8/24 machine screws Step 1.



Screw the Z-Clip to the panel using the included machine screws.

NOTE: If you ordered additional Z-Clips for the bottom of the panel for added security, repeat the process for the additional Z-Clip set.

Next, attach the brackets to the wall using appropriate anchors. The part of the clip that lays flat against the wall should be on the bottom. Drywall anchors maybe used if the total working load limit meets the panel weight requirements. Where possible, anchor to a stud or other internal wall structure.

When all of the clips are installed, position the panel against the wall with the panel clips slightly higher than the wall clips and slide the panel down until the clips are secure.


*For added security a dab of RTV adhesive in the clip track before mounting the panel can be used on the clips to keep them from sliding laterally.




View our youtube[™] installation video by scanning the code with a smartphone or tablet camera.

Step 2.



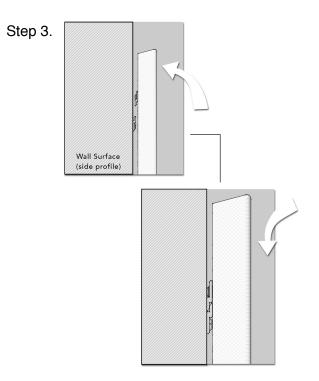

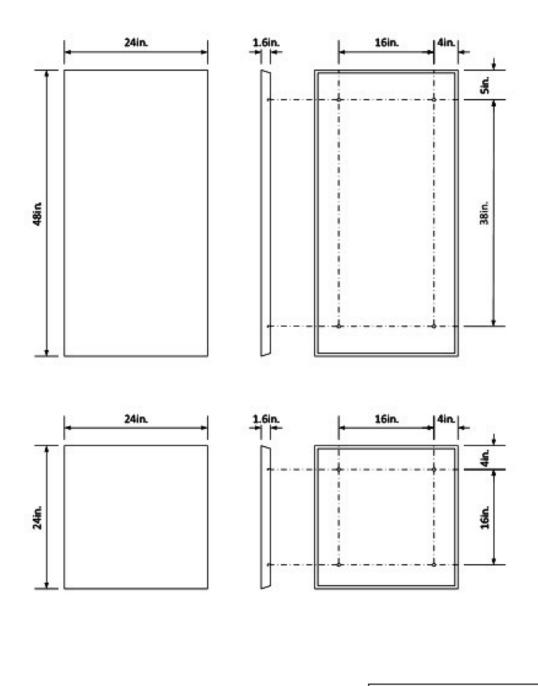

WAVE PANEL DIMENSIONS SCALE: 1:12

FullScaleAV: 1.615.833.1824 | info@fullscaleav.com | 5000 Linbar Drive. Suite 290 Nashville, TN 37211

www.prosocoustic.com

Packing List

WAVE 4x2x1	QTY
WAVE 4x2x2	QTY
WAVE 2x2x1	QTY
WAVE 2x2x2	QTY
BAFFLE 4x2x2	QTY
CUSTOM	QTY
Evolution 4x2x2	QTY
Evolution 12" Leg	QTY
Evolution 36" Leg	QTY
Evolution Straight Coupler	QTY
Evolution Angled Coupler	QTY
Evolution Right Angle Bracket	QTY
18" Z Clips (pair)	QTY
2" Z Clips (pair)	QTY

Total Number of Boxes _____

Each pair of Z Clips come with (2) Machine screws to mount clip to panel. Wall / Ceiling mounting screws / anchors NOT included.