



# INSTALLATION GUIDELINES


## SIDING CORNERS

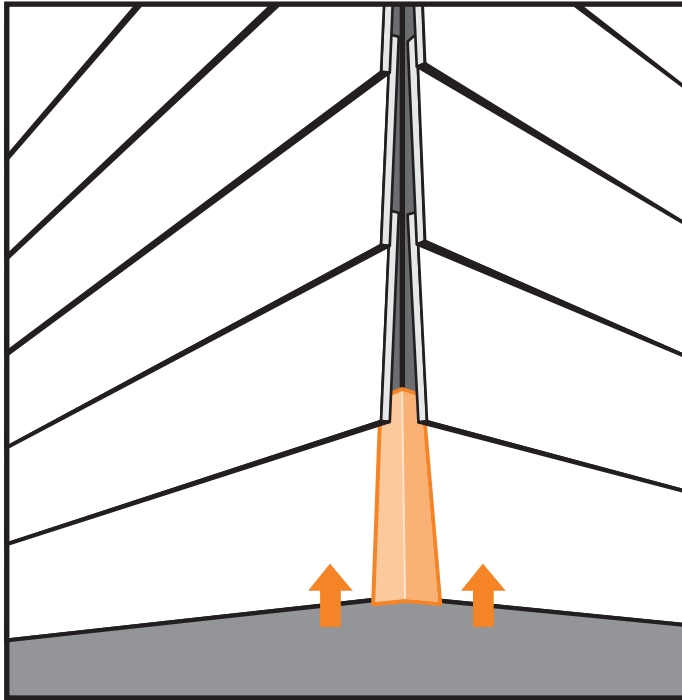

1. Start with the bottom course of siding. Carefully slide the first corner up and under the second course, and the bottom is flush to the bottom courses.

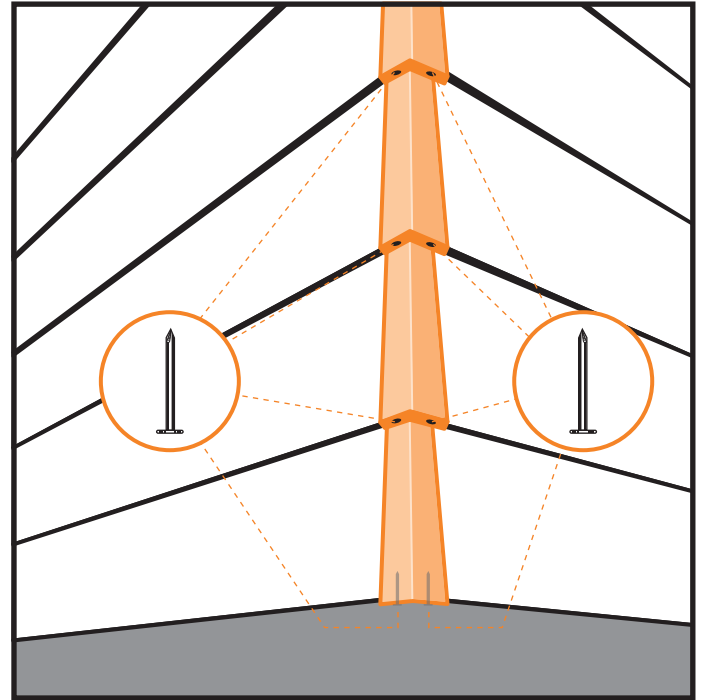

2. Continue working from the bottom up. Attach with two nails through the bottom nail holes. Trim the last corner to fit.

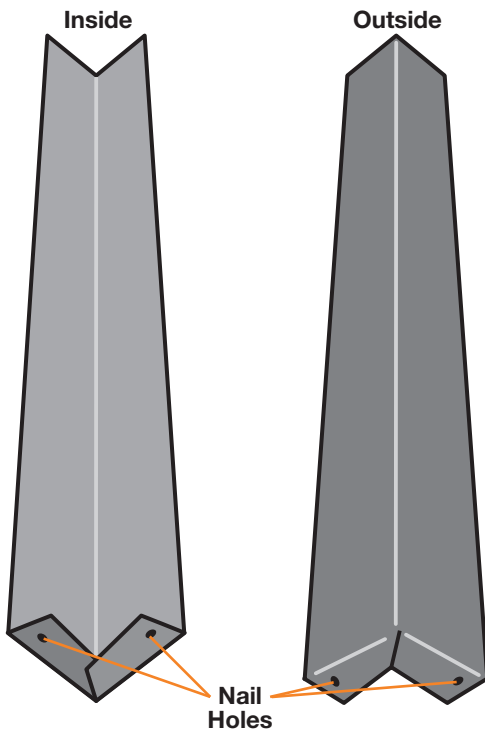

### CAUTION!

Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.