


MirrEdge® Easy Installation Instructions:



Step 1

Measure your mirror:

SIZE vertical height of mirror and mark strips accordingly with a pencil.

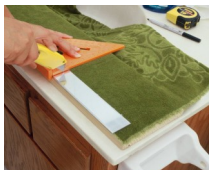

Step 2.

Place strip (finish side up) on a protected flat surface.

Where marked, **SCORE** a line with a razor knife.



Step 3.

Hold strip down with one hand with the scored line over the edge of flat surface.

Grasp strip with other hand and **SNAP** the strip with a downward motion.



Step 4.

Clean mirror surface and back of MirrEdge® Strips & Corner Plates with rubbing alcohol.

Place one double-faced adhesive square approximately every 8" - 10" apart on the back of each strip.

Peel off protective covering on tape squares.



Then apply a small pea-sized amount of MirrEdge® Adhesive or Liquid Nails® for Small Projects Adhesive Glue **next to** the double-faced tape squares. Install vertical strips onto the side surfaces of the mirror.



Step 5.

For horizontal strips, measure **between** the opening of the installed vertical strips and deduct 1/2" from the measurement.

Repeat the **SIZE, SCORE, SNAP** method and placement of double-faced adhesive squares and Adhesive Glue onto strip backs. Install horizontal strips onto the mirror edge surfaces between the vertical strips leaving a 1/4" gap on each end to accommodate for possible expansion.



Step 6.

Place 2-3 double-face adhesive squares on the back of each corner plate with small dabs of Adhesive Glue. Then place corner plates on top of strips where the horizontal and vertical strips meet at each corner.

(NOTE: For Acrylic Mirror strips and corner plates, after installing the strips onto the mirror, peel back approximately 4" of the protective film covering in each corner before placing the corner plates onto the strips in corner areas.)

**DO NOT USE CLEANERS
CONTAINING AMMONIA!**

•1/4" Metal Z Mirror Clips to be used to replace larger existing mirror clips if needed for easy installation.

www.mirredge.com