

## Inserting Drawer



1. Slide Drawer Box runners into side mounted units.



2. Push Drawer all the way to closed position to secure runners.



## Removing Drawer

First, open drawer to full extension position

**Right Side Drawer Runner**  
Push down the plastic lever to release

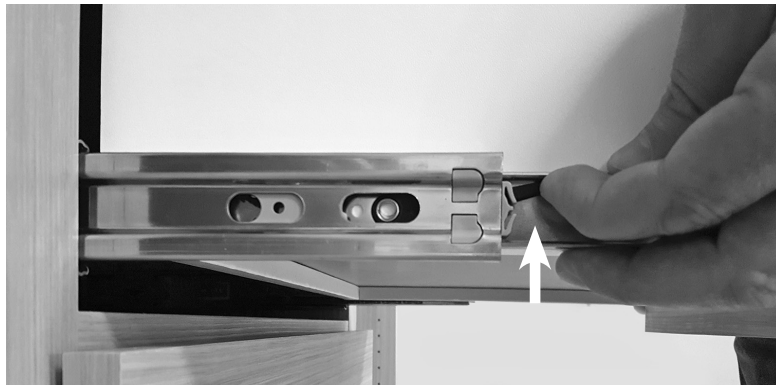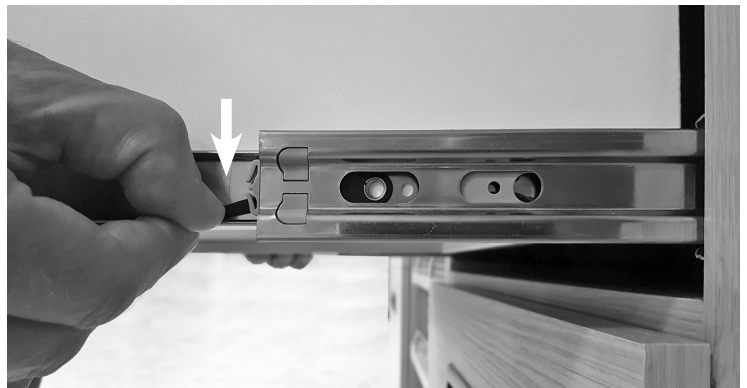

**Left Side DraweRunner**  
Lift up the plastic lever to release

## Decoration Hardware

Do not drill holes until you have determined the dimensions match the decorative hardware you have selected. Make sure any adjust to the alignment of drawer fronts is done prior to drilling holes for pulls or knobs - once the decorative hardware is installed it will be difficult to adjust the doors and drawer fronts.

1. Clamp a piece of wood to the front side of the door or drawer front, at handle location.
2. From the inside of the door use a 3/16" drill bit and be sure to drill completely through the door or drawer front into the block this allow for a clear hole. Push the bolt through the hole and apply the hardware. Tighten with a screwdriver.