


INDUSTRIAL BRACKET SHELF

24 & 36 INCH BOARD



STEP 1

At desired spot on your wall, using a level align the Industrial bracket and mark top & bottom holes, measure to 16" or 32" on center (depending of shelf size), with the second Industrial bracket using a level align and mark top & bottom holes.

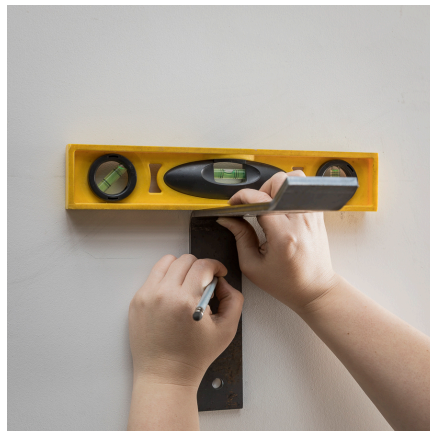

STEP 2

Pre-drill a pilot hole using a 11/64 drill bit. *(We recommend using a stud finder to make sure the Industrial bracket is secured into a wall stud) Mount Industrial bracket to the wall using a supplied #14, 3" phillips head screw.



STEP 3

Center shelf on top of wall mounted brackets. Use the supplied 1" #14 phillip's head screw to secure the shelf to the bracket.

