


#761 Deluxe Four Shelf Assembly Instructions

1. Identify the pieces

1. Top Shelf (4-1/2" x 40")
2. Upper Middle Shelf (28"long)
3. Lower Middle Shelf (16"long)
4. Bottom Shelf (6" x 40")
5. Left Vertical Side (labeled)
6. Center Vertical Side (labeled)
7. Right Vertical Side (labeled)

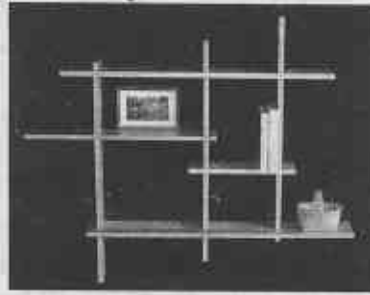

2. Assemble the shelf on a protected surface such as a carpeted floor. The notches on the back edge of the horizontal shelves fit over the notches in the front edges of the vertical sides.

3. Place the left (#5), center (#6) and right (#7) vertical sides with the open notches in the up position. The back edge of the side pieces have a keyhole mounting slot that needs to be oriented with the narrow portion of the keyhole slot of each piece pointing to the top of the shelf. The top and bottom open notches on the vertical side pieces should line up to receive the top and bottom horizontal shelves.

4. Align the upper middle horizontal shelf (#2) with the open notches on the back edge of the #2 shelf with the open notches on the front edge of the left (#5) and center (#6) vertical side pieces. The lower middle shelf (#3) and the right (#7) vertical side can be added next. Carefully slide each shelf notch down over the vertical side piece notches. Be very careful to not scuff up the finish. Repeat this step for the other shelves (#1 & #4). Refer to the photo for the orientation of the shelves.

Installation Instructions:

1. Determine the desired mounting location.
2. Find the wall studs nearest to your desired mounting location. If you are not able to screw into a wall stud at each keyhole slot location, consult your local hardware store for the proper hardware type for your particular wall type.

3. Hold the assembled shelf at the desired position, making sure the horizontal shelves are level, and make a pencil mark at the top of each vertical side piece (#5,6,&7). Then remove the shelf.
4. Measure the distance from the top of each vertical side piece (#5,6,&7) to the top of the keyhole slot in the back of each vertical side.
5. Measure the same distance down from your marks on the wall. Make sure the measurement from the left side piece is transferred to the wall for the left side. This will be your screw height.
6. Measure the distance from the center of one keyhole slot to the center of the other keyhole slot on the back shelf. Repeat for the remaining keyhole slot. Be very accurate.
7. Mark these keyhole spaces on the wall on the marks made in step 5 above. This will give your exact screw locations on the wall. Again, be very accurate.
8. If screwing into wall studs, screw the long screws provided into the wall as located. If not screwing into wall studs, use the hardware from your local hardware store. Leave approximately 1/2" from the wall to the back of the screw head.
9. Mount the assembled shelf by fitting the lower hole of the keyhole slot over the screw head and sliding down until the top of the keyhole slot rests on the screw. You may need to tighten or loosen the screws to allow the shelf to fit snug against the wall.

Cleaning and care:

Clean with any household furniture cleaner and a clean soft cloth. Wipe and dry any water spills right away. Moisture left on the finish may leave a discolored spot.

Woodform, Inc. recommends installation only by qualified persons. Woodform, Inc. disclaims liability for any consequential or incidental damage arising from the installation and/or use of this product.