


# REGENCY

## Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

**Organize your parts. You may need a rubber mallet.**

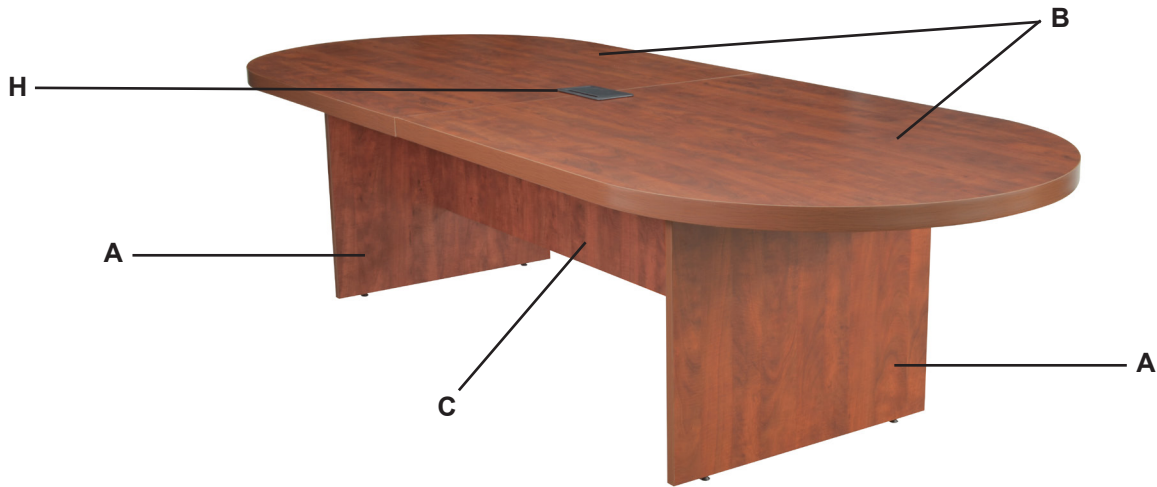

### Parts:

#### **A:** Legs



Quantity: 2

#### **B:** Tabletop



Quantity: 2

#### **C:** Stringer



Quantity: 1

#### **D:** EClip Bracket



Quantity: 2

### Hardware:

#### **E:** Flat Bracket



Quantity: 2

#### **F:** Thumb Screws



Quantity: 10

#### **G:** Corner Bracket



Quantity: 2

#### **H:** DPEL



Quantity: 1

### IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start to assemble. Keep all hardware parts and packaging out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822

# REGENCY

## Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

**Organize your parts. You may need a rubber mallet.**

**STEP 1a:** Attach **Stringer (C)** to one of the **Legs (A)** by lining up the Eclip with its corresponding holes, and sliding down into place (see figure 1). Please Note: The interior of **Legs(A)** have two EClip attachment holes and the exterior has just one.

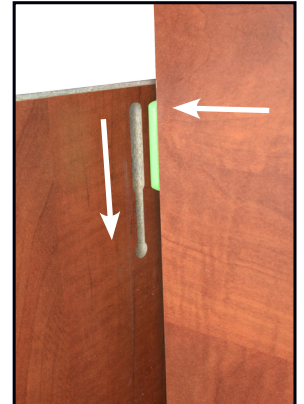



Figure 1

**STEP 1b:** Attach **Stringer (C)** to the other **Leg (A)** (see figure 2) by lining up the Eclip with its corresponding holes, and sliding down into place (see figure 1.) Please Note: The interior of **Legs (A)** have two EClip attachment holes.



Figure 2

**STEP 2:** Attach **Eclip Brackets (D)** to outside of **Legs (A)** by lining up Eclip with it's corresponding hole, and sliding down into place (see Figure 1 above).

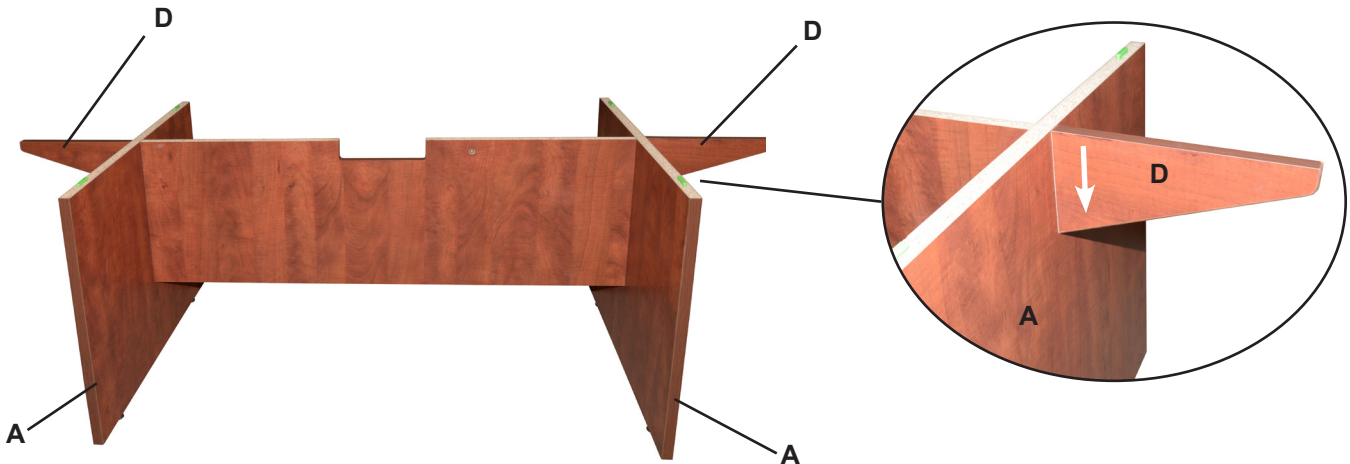


# REGENCY

## Legacy Racetrack Conference Table • INSTRUCTIONS

(LCTRT7135, LCTRT9543, LCTRT12047)

**Organize your parts. You may need a rubber mallet.**

**STEP 3:** Attach **Tabletops (B)** to assembled base by lining up pre-drilled holes on bottom with the EClips on **Legs (A)**. Then slide **Tabletops (B)** into place from opposite sides. *Please note: fit will be snug. You may need a rubber mallet to tap into place*

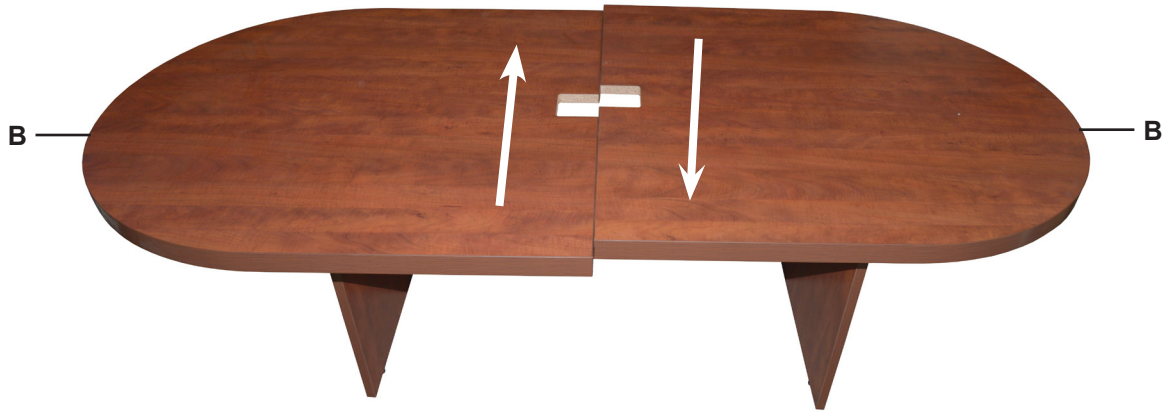

**STEP 4a:** From underneath the table, lock both Sash Locks on **Tabletops (B)** (see figure 3).

**STEP 4b:** From underneath the table, attach both **Flat Brackets (E)** and **Corner Brackets (G)** into pre-drilled holes by using **Thumb Screws (F)** (see figures 4 and 5).



Figure 3



Figure 4



Figure 5

**OPTIONAL STEP 5:** Insert **DPEL(H)** using provided screws.

