




STEP 1

When installing your barrier fence you want to make sure that your post (U-Post recommended for temporary applications and T-post recommended for more permanent applications) is at least 5 feet tall or higher to allow ample room for the post in the ground.



STEP 2

Once the posts are installed, attach the fence to the post clips to ensure they are secure.

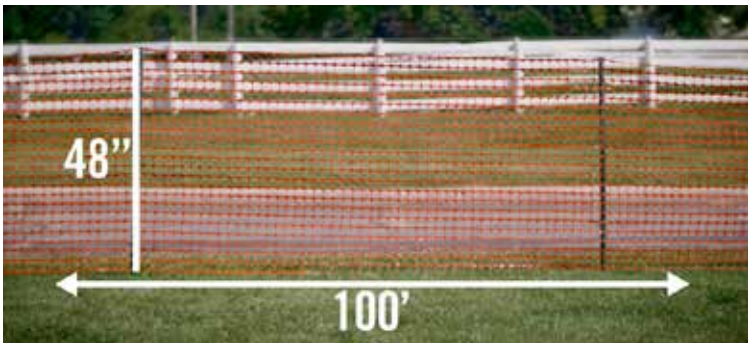

STEP 3

This bright orange fence stands out and offers 48 inches of height and 100 feet of length. It is light weight and easy to install and transport.