




FVN21-301230 CAMBRIDGE INSTALLATION GUIDE



FRESCA®

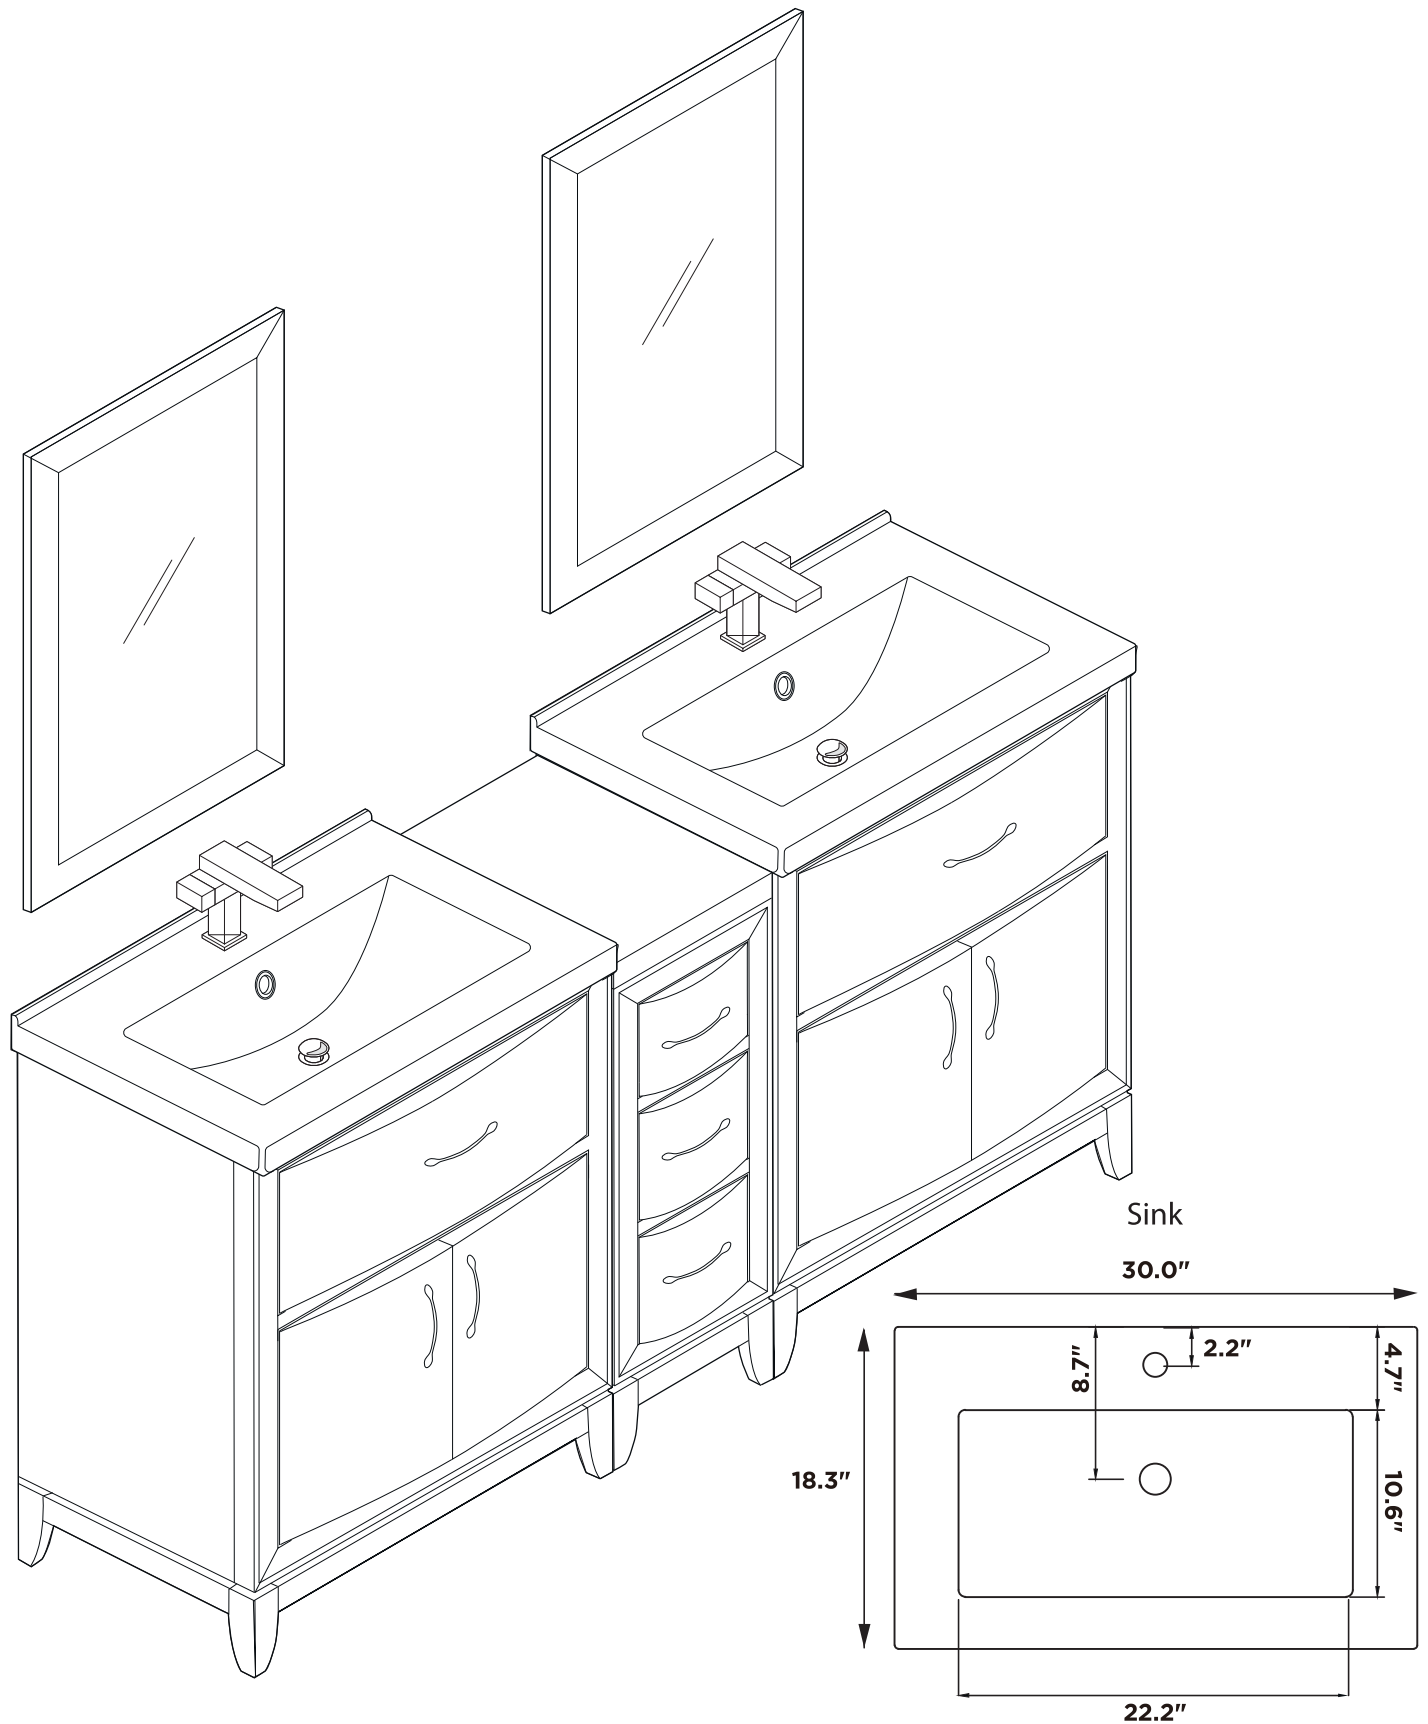

Note: All dimensions and specifications are approximate and subject to change without notice.



FVN21-301230 | CAMBRIDGE | **INSTALLATION GUIDE**

PAGE 1




FVN21-301230 CAMBRIDGE INSTALLATION GUIDE




FRESCA®




Vanity Front

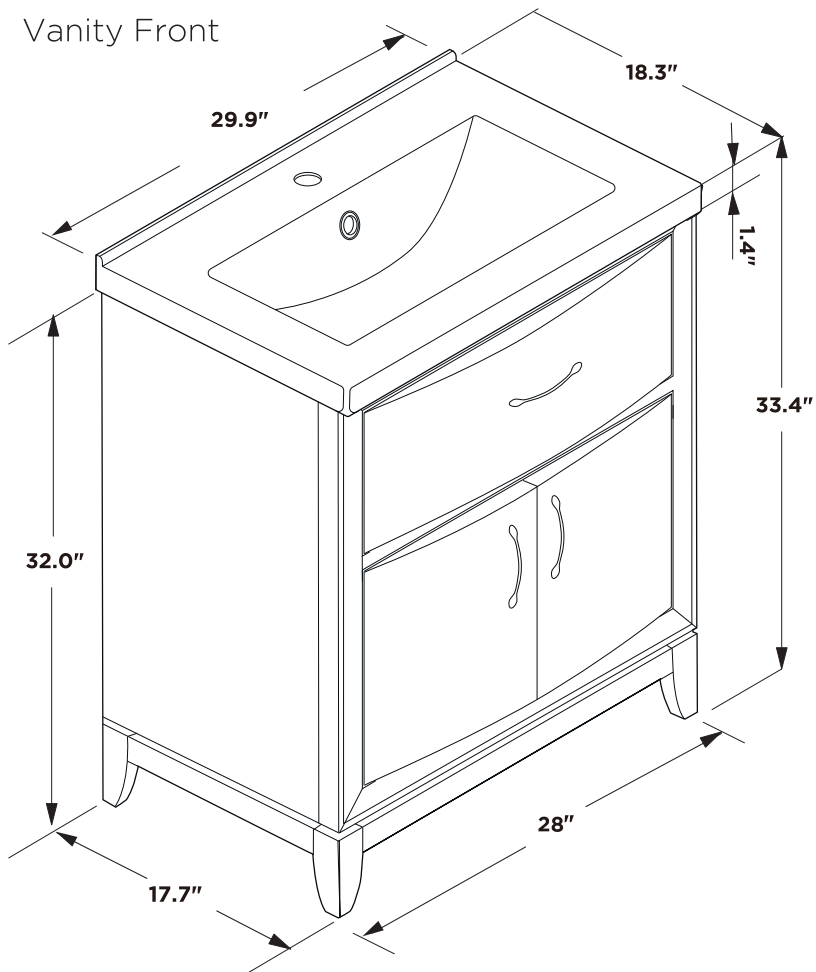

Vanity Back

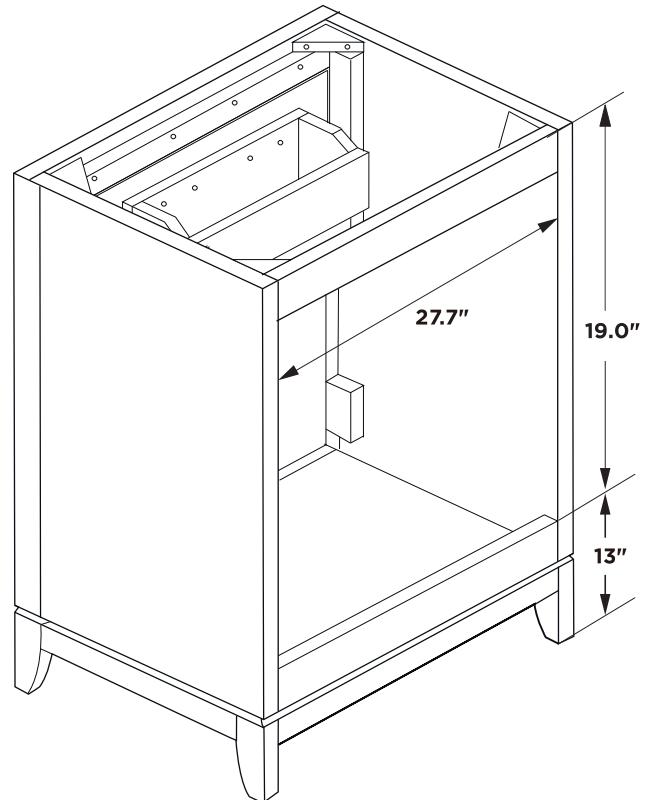


Side Cabinet Back

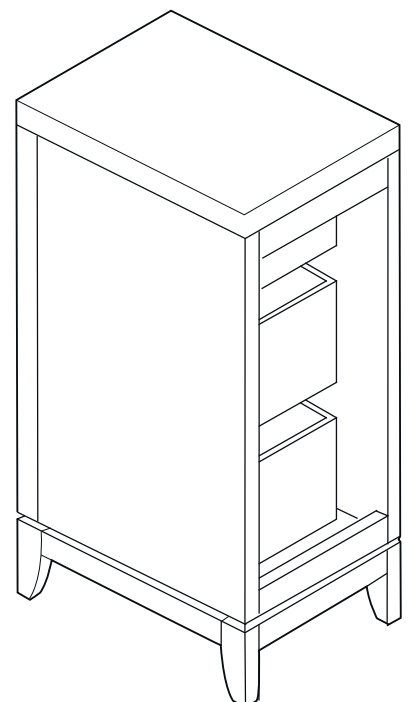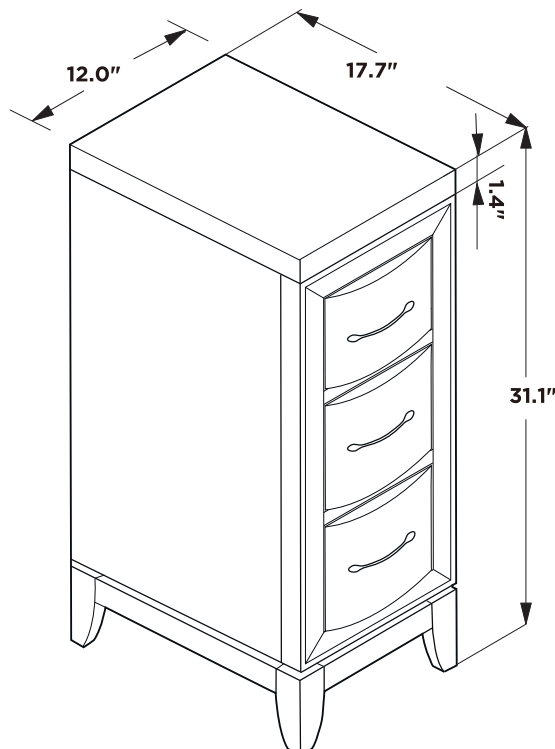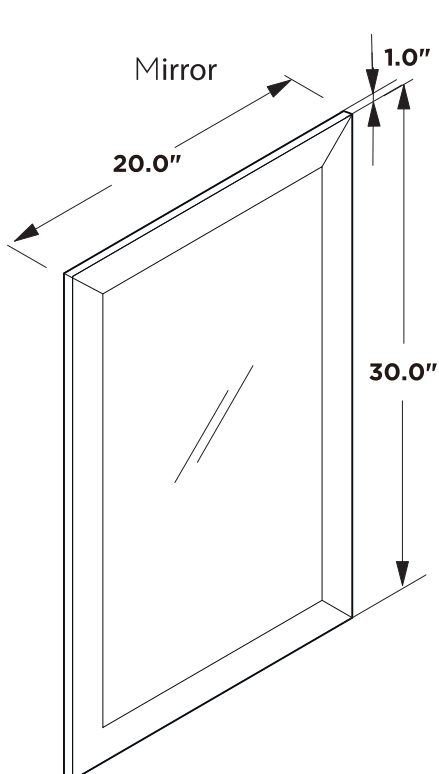


MIRROR INSTALLATION INSTRUCTION


TOOLS FOR ASSEMBLY

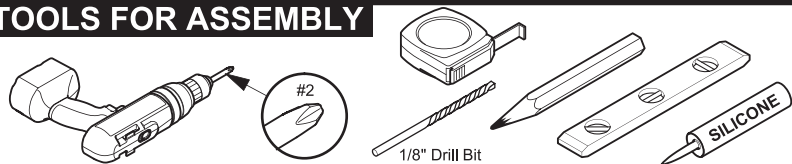


- 1 Measure the distance between the brackets on the back of the mirror

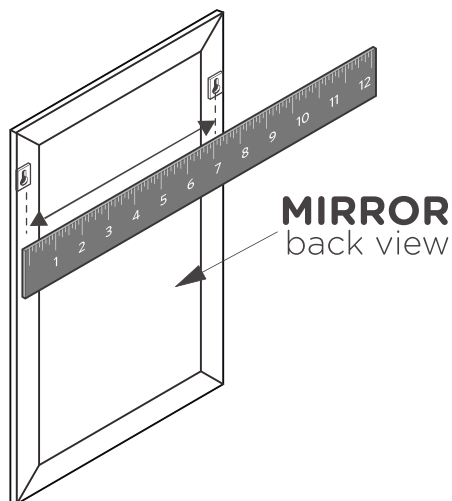


- 2 Mark the measured distance on the wall using a level

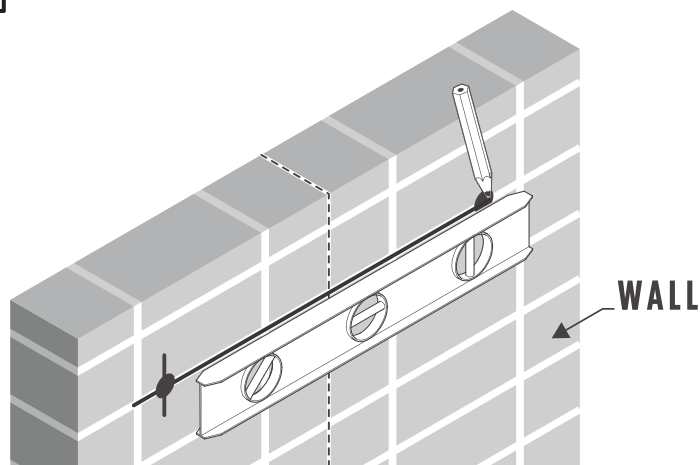

- 3 Once position is marked, drill 2 holes and insert anchors if stud is not available

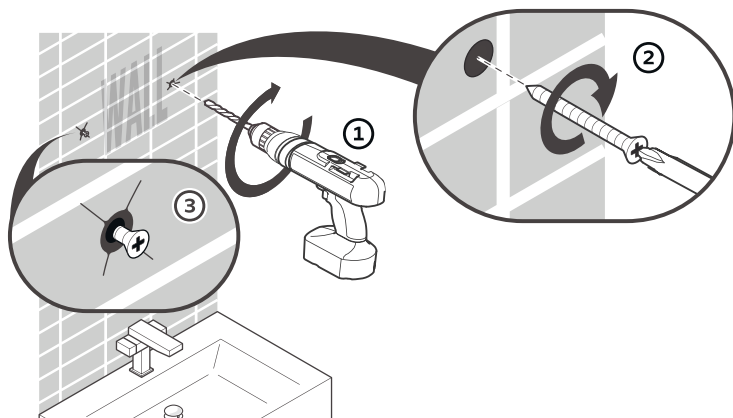


- 4 Hang mirror on the wall

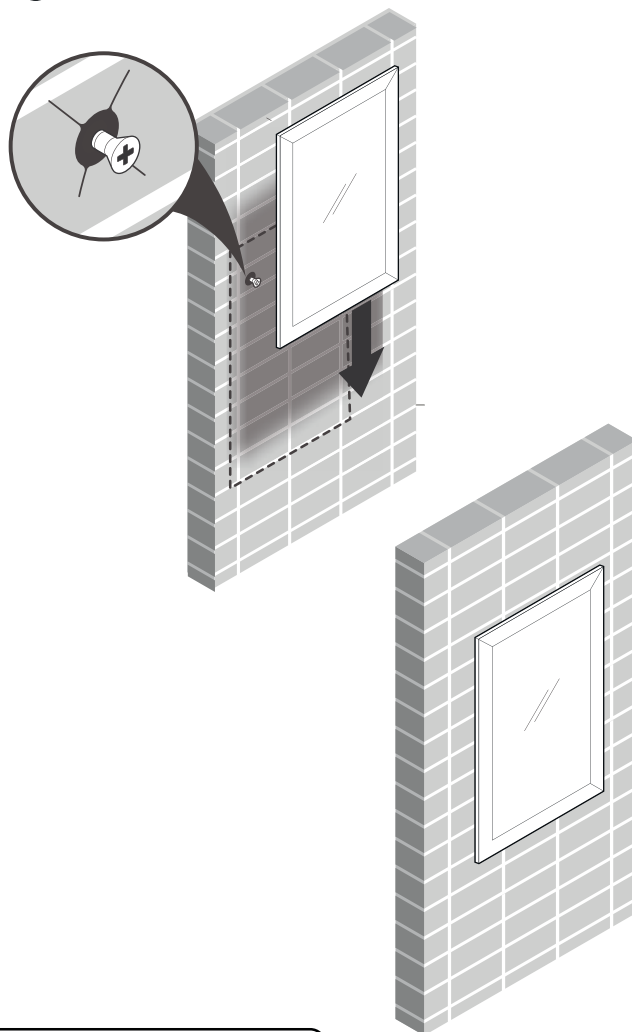


IMPORTANT:

CONSULT AN EXPERT FOR THE PROPER SCREWS/BOLTS TO USE WHEN ATTACHING TO VARIOUS WALL CONSTRUCTIONS. SCREWS PROVIDED **DO NOT ATTACH** TO ALL WALL CONSTRUCTION TYPES.

DRAWER REMOVAL

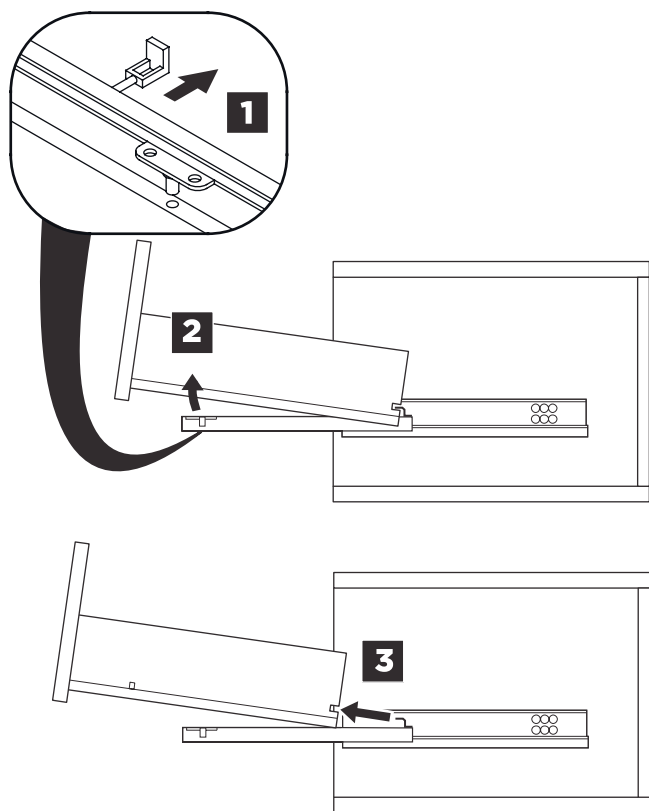


DRAWER INSTALLATION

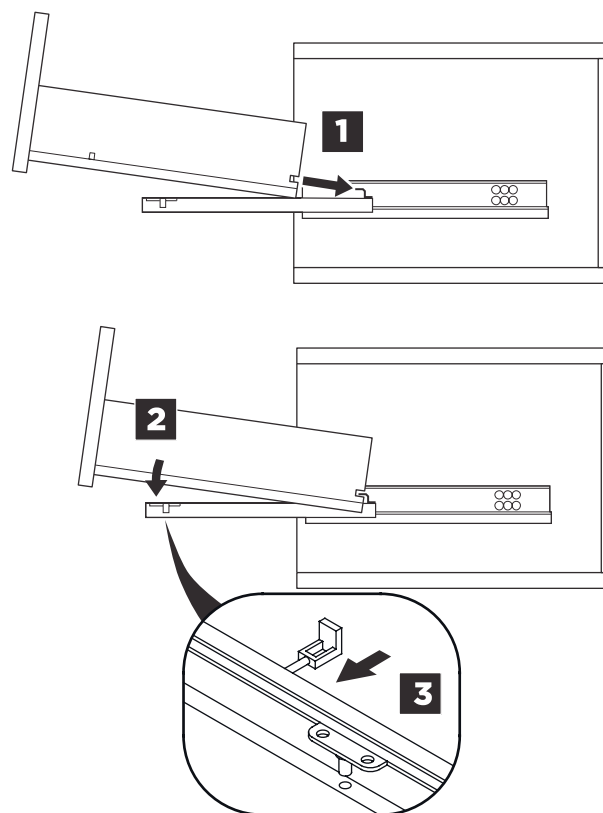


INSTALLATION INSTRUCTIONS

- 1** Secure cabinet to the wall

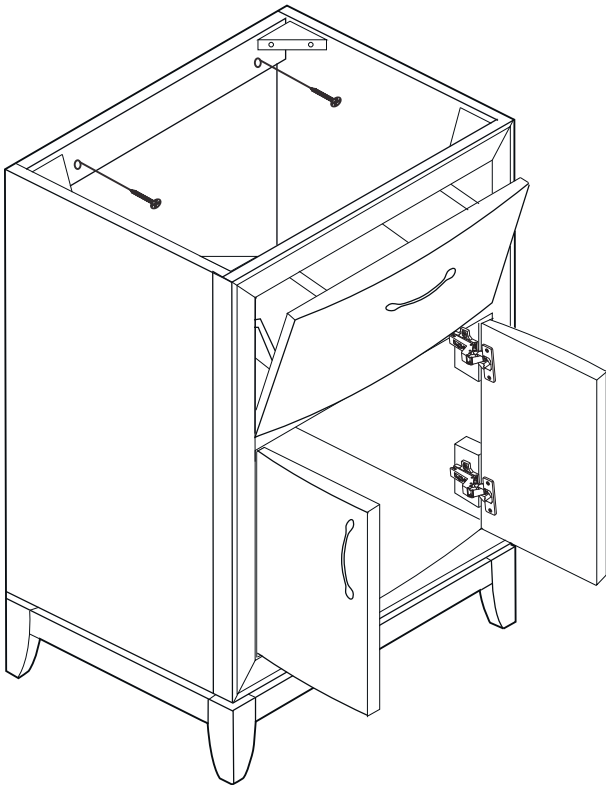


- 2** Apply a bead of silicone on the top of the cabinet and place the sink on top

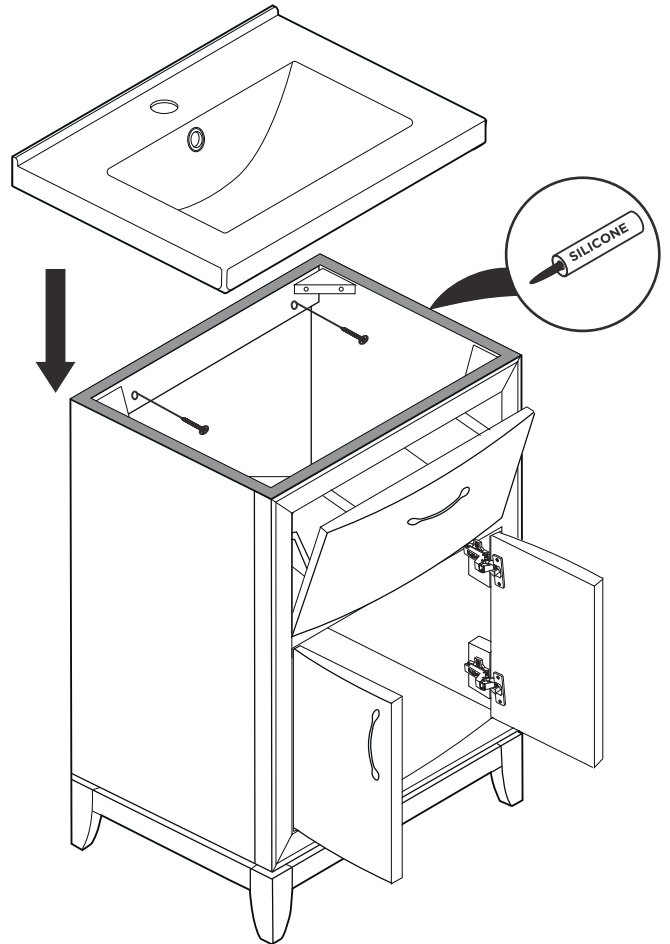


- 3** Remove side cabinet drawer

- 4** Secure cabinet to the wall

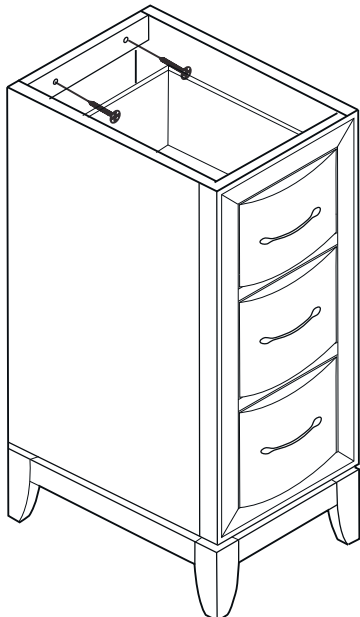

IMPORTANT:
Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.


- 5** Apply a bead of silicone on top of the cabinet and place the counter-top on top

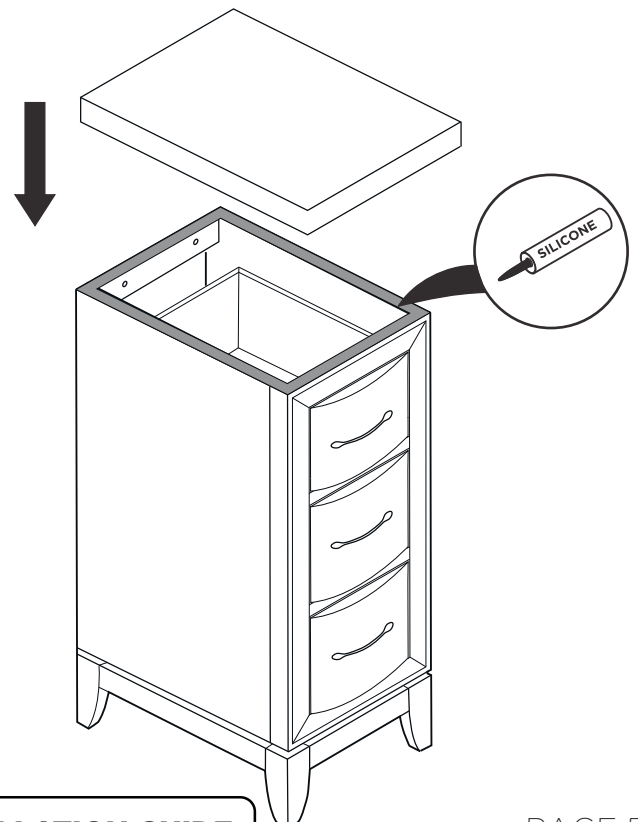

P-TRAP & POP-UP


INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration.

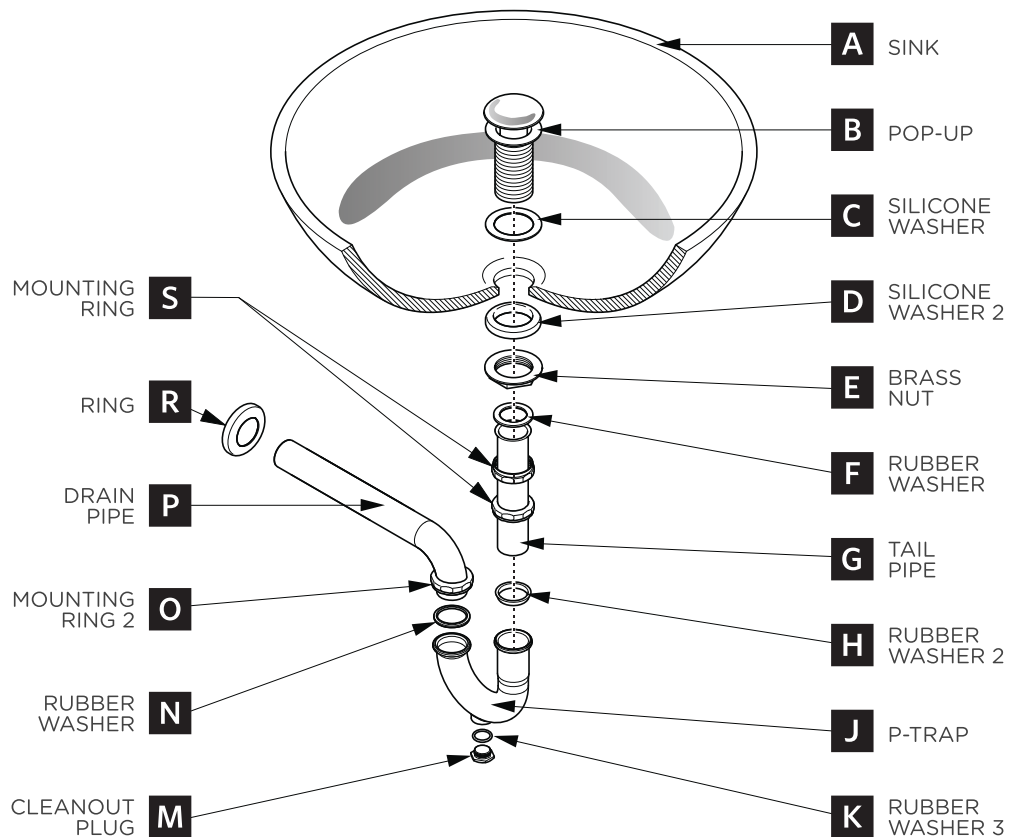


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

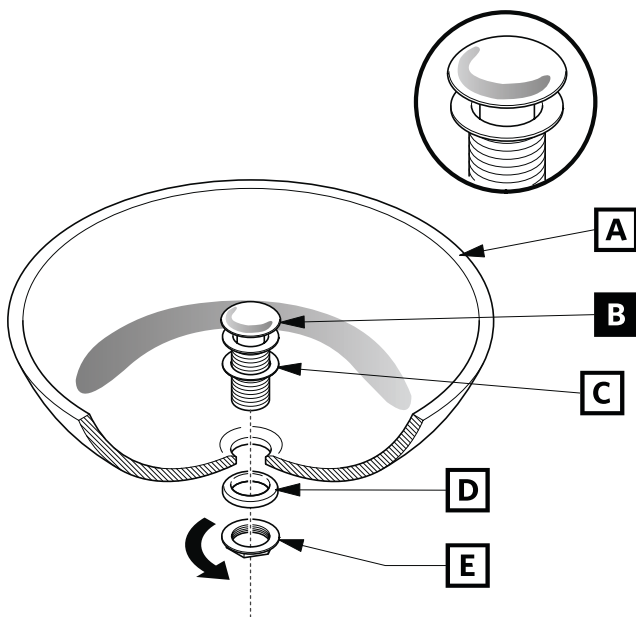

OR


FOR SINKS WITH OVERFLOW

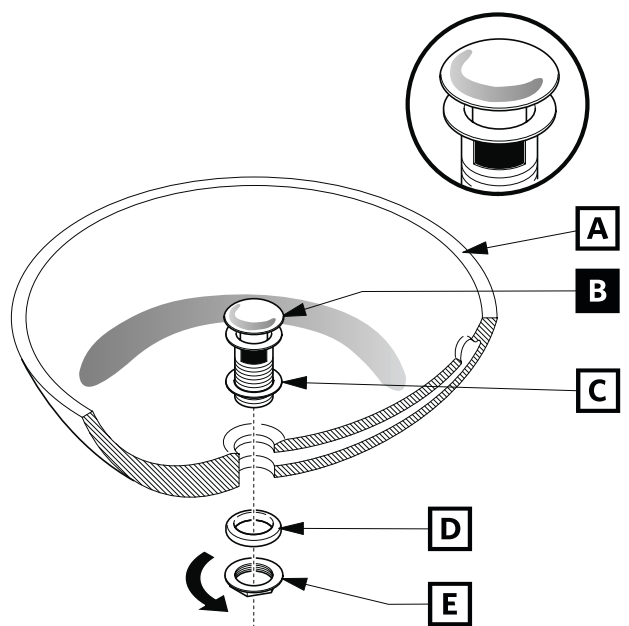

P-TRAP INSTALLATION

1

Install tail pipe (G)

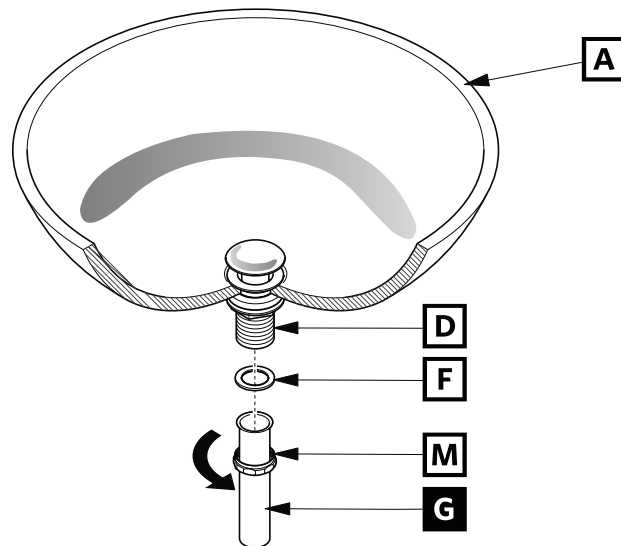

2

Install P-trap (J)

