


Mini Louvers are used to seal existing rafter/bird block vent holes to maximize airflow while protecting against rodent and insect invasion.

If there are no pre-existing birdblock holes, use a hole saw drill bit to cut holes to the nominal size of the Mini Louver Vent: 2, 3 or 4 inch.

Lightly tap in the vents to pressure fit.

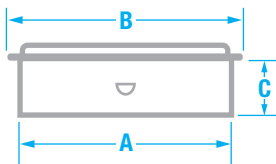

A: Stem diameter

B: Face diameter

C: Stem depth

| | A | B | C | N.F.V. |
|------------|-------|-------|-------|--------|
| ML2 | 1.88" | 2.31" | 0.5" | 0.47" |
| ML3 | 2.88" | 3.50" | 0.63" | 1.34" |
| ML4 | 3.88" | 4.31" | 0.63" | 2.88" |

Note: N.F.V. value is square inches.



CAUTION! Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.