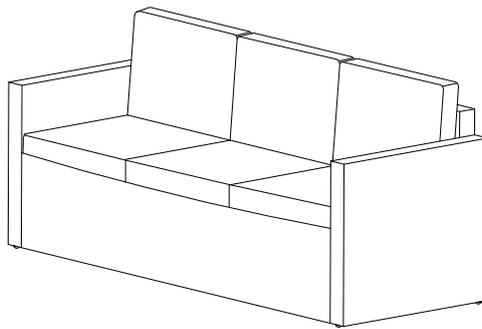





# Outdoor Wicker Sofa





## CO7156






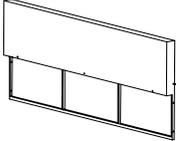
# PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Arm Panel 2 PCS	Back Panel 1 PC	Seat Panel 1 PC	Lower Front 1 PC	Cover of Seat Cushion * 3 PCS
<b>F</b> 	<b>G</b> 	<b>H</b> 	*Please note cushion covers will ship separately.	
Core of Seat Cushion 3 PCS	Cover of Back Cushion * 3 PCS	Core of Back Cushion 3 PCS		

# HARDWARE LIST


<b>#1</b> 	<b>#2</b> 	<b>#3</b> 	<b>#4</b> 	<b>#5</b> 
M6*25mm  Short Bolt 3 PCS	M6*40mm  Medium Bolt 4 PCS	M6*50mm  Long Bolt 11 PCS	M6mm  Nut 15 PCS	M6mm  Washer 33 PCS
<b>#6</b> 	<b>#7</b> 	<b>#8</b> 		
M6mm  Wrench 1 PC	M6mm  Allen Key 1 PC	Adjustable Leveler 6 PCS		

# EXTRA HARDWARE LIST

<p>#1</p>  <p>M6*30mm</p>	<p>#2</p>  <p>M6*40mm</p>	<p>#3</p>  <p>M6*50mm</p>	<p>#4</p>  <p>M6mm</p>	<p>#5</p>  <p>M6mm</p>
<p>Short Bolt 1 PC</p>	<p>Medium Bo It 1 PC</p>	<p>Long Bo It 3 PCS</p>	<p>Nut 3 PCS</p>	<p>Washer 3 PCS</p>
<p>#8</p>  <p>M6mm</p> <p>Adjustable Leveler 2 PCS</p>				


Step 1. Lay arm panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach back panel (part B) to arm panel (part A) using medium bolts (part #2), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

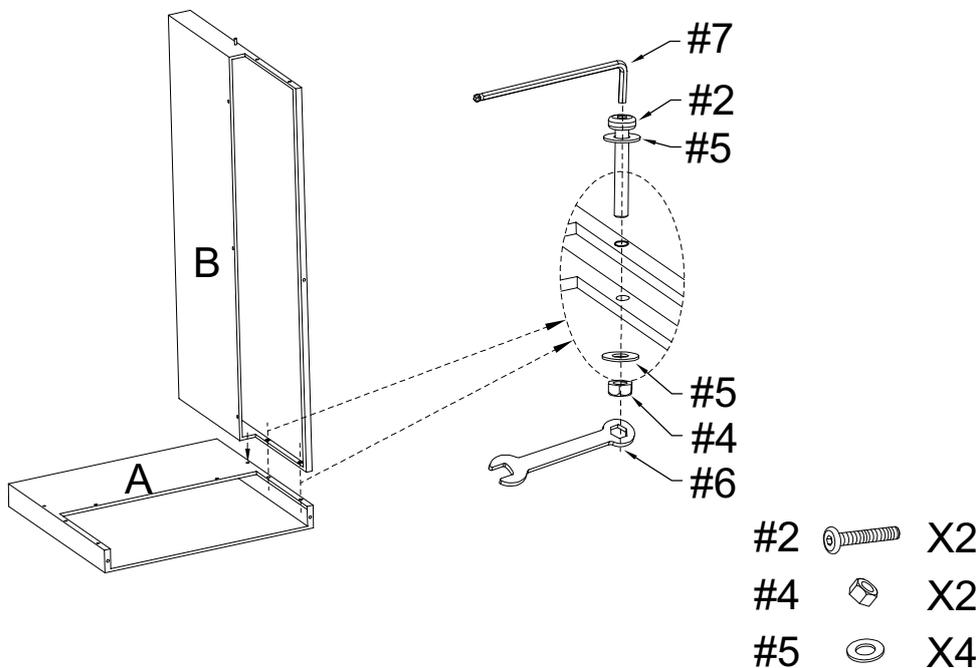NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 2. Attach seat panel (part C) to arm panel (part A) and back panel (part B) using long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

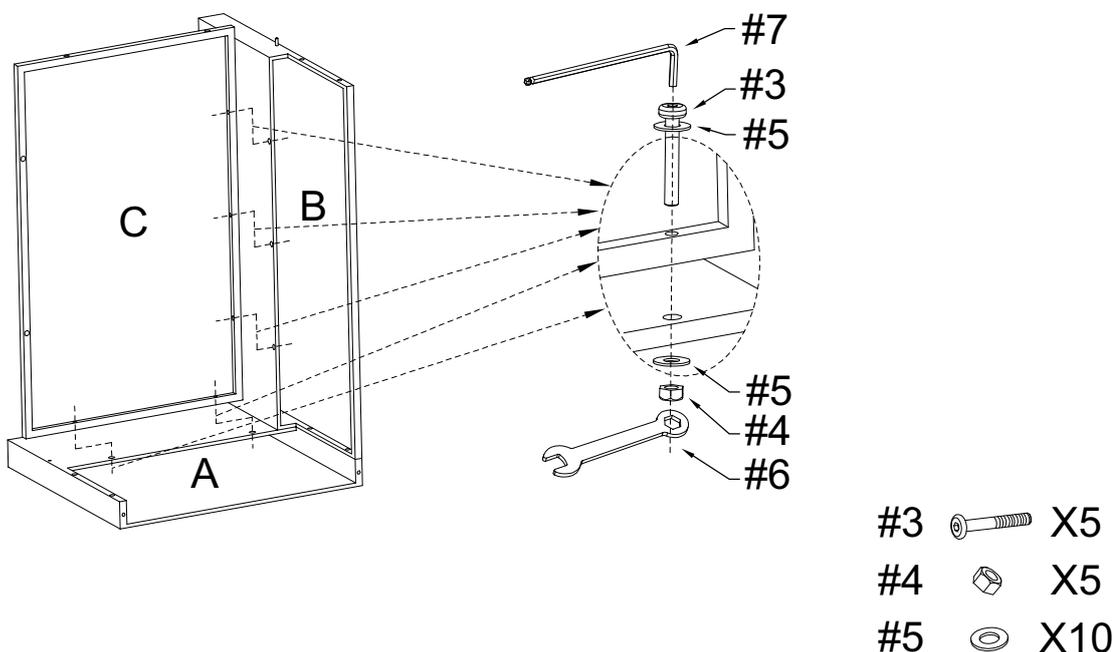NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 3. Attach lower front (part D) to arm panel (part A) and seat panel (part C) using short bolts (part #1), long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

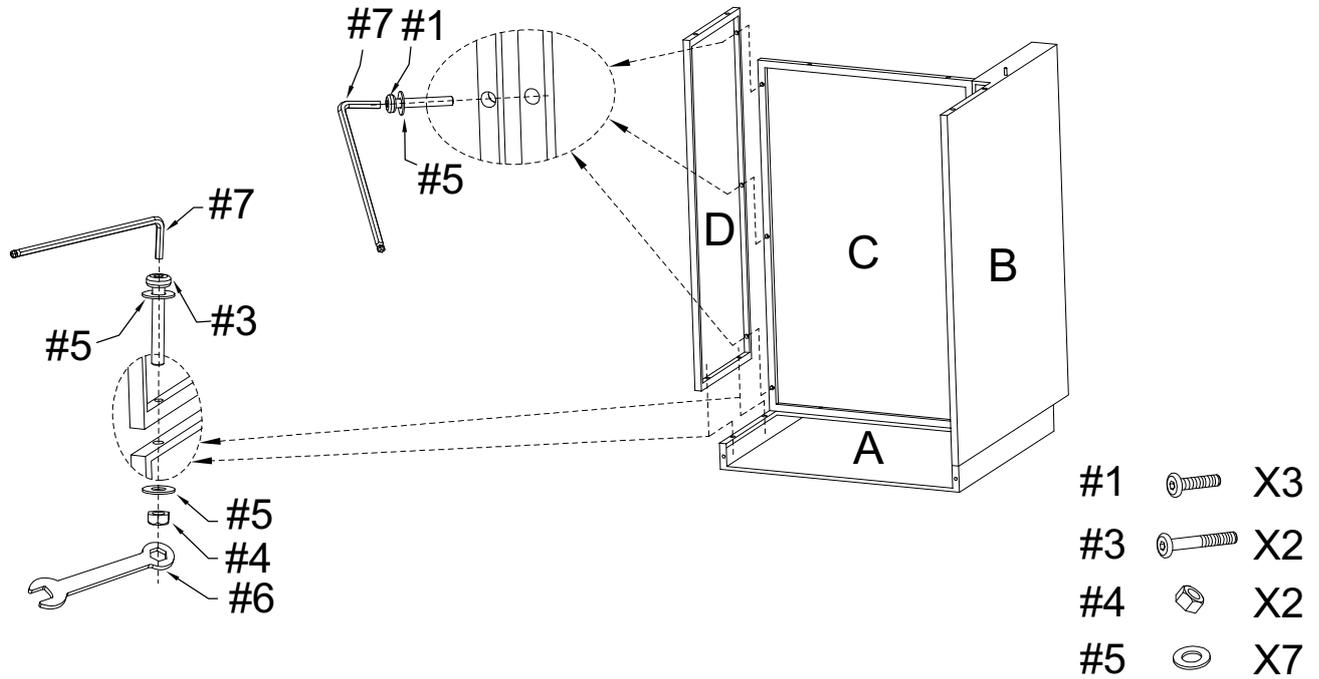NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 4. Attach arm panel (part A) to assembled unit (parts A,B,C&D) using medium bolts (part #2), long bolts (part #3), washers (part #5), nuts (part #4) wrench (part #6) and allen key (part #7) as shown.

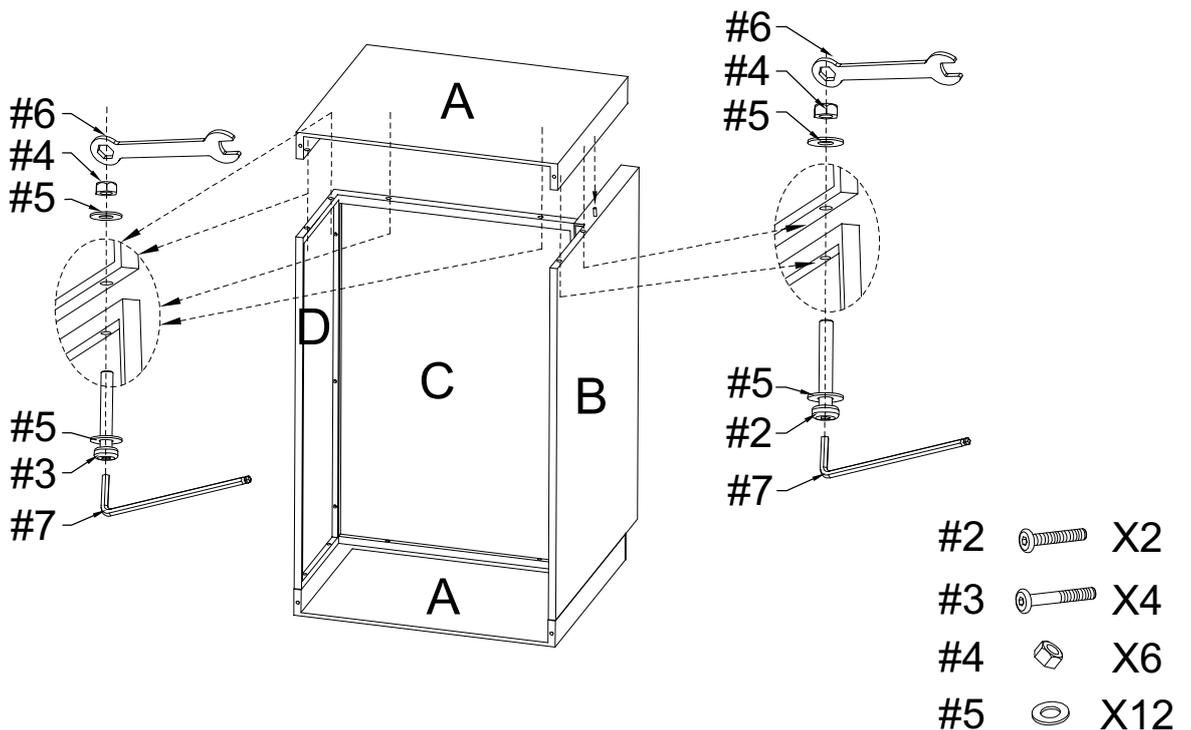NOTE: Please fully tighten all bolts at this time.




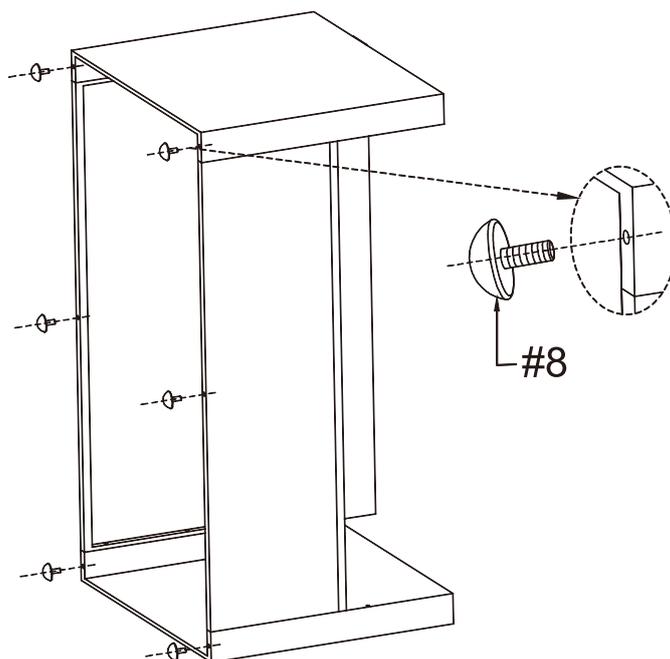Step 5. Screw adjustable levelers (part #8) to desired position in the pre-drilled holes on the bottom of the sofa where shown.



#8  X6

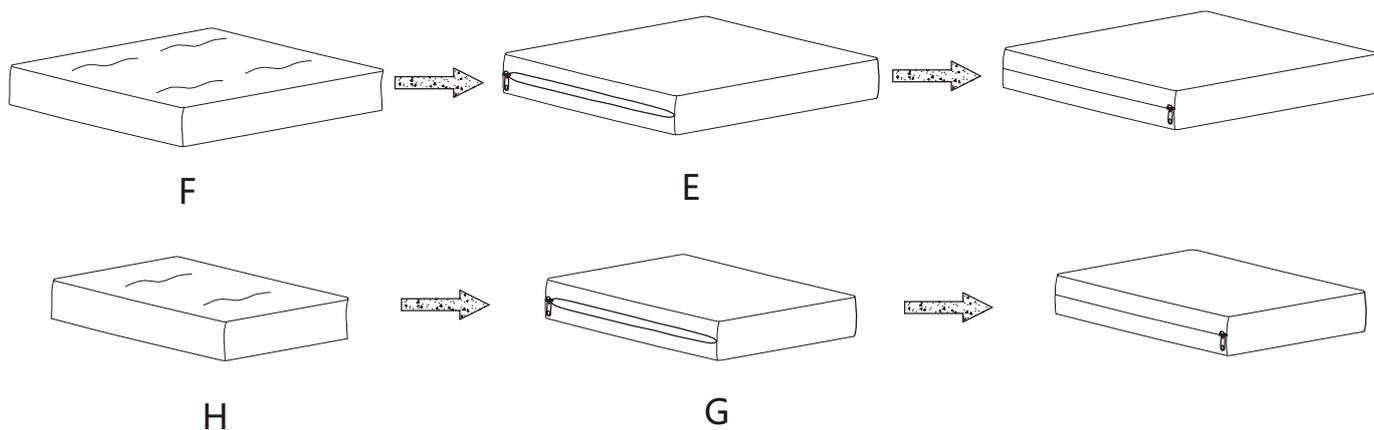Step 6. Insert core of seat cushion (part F) into cover of seat cushion (part E).  
Insert core of back cushion (part H) into cover of back cushion (part G).



Step 7. Carefully turn the assembled sofa upright and add cushions as shown below.

