

Surface Master


Installation Instructions

CAUTION: All electrical connections must be in accordance with state and local codes, ordinances, and the National Electrical Code. If you are unfamiliar with methods of installing electrical wiring and devices, secure the services of a qualified licensed electrician.

Note: Although the Octagon Surface Master is shown below, the same installation techniques are used for all styles of Surface Masters.

Step 1

Cut the desired opening in the Surface Master by cutting along the patterns provided on the back of the part. There's also a drilling support in the middle of the Surface Master. This is supplied for drilling custom sized round holes if needed. See figure at right.

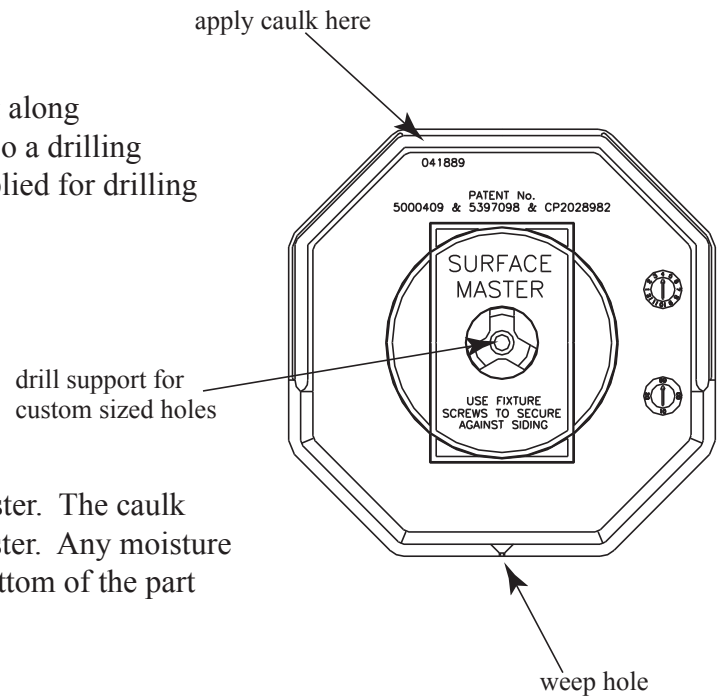

Step 2

Apply caulk in the groove in the back of the Surface Master. The caulk will create a seal between the siding and the Surface Master. Any moisture and condensation that does build up will drain out the bottom of the part from the weep hole. See figure at right.

Step 3

With the caulk applied, place the Surface Master over the desired location and hold in place. Make all wire connections to the fixture in accordance with electrical code. A second person may be needed to hold the Surface Master on the wall while these connections are being made.

Step 4

Once the connections have been made, the Surface Master can now be fastened to the wall. This is done by attaching the light fixture to the wall and using the fixtures mounting hardware to "sandwich" the Surface Master between the siding and light fixture.