



Poly-Set Installation

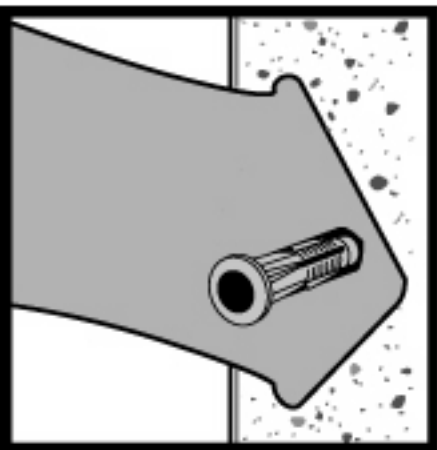


Drill...

Drill hole. In solid concrete, make sure the hole is at least 1/4" deeper than the anchor length. Insert anchor until flange is flush.

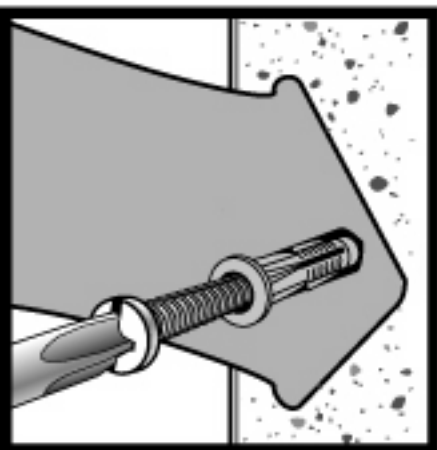

Fasten...

Fasten fixture by inserting sheet metal screw through fixture and into anchor.

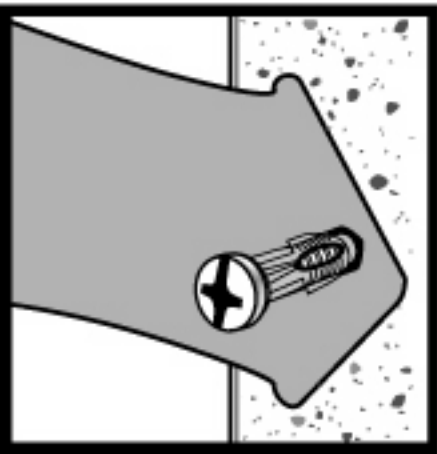

Tighten...

Tighten screw.