

FENCE ARMOR

484 Plains Rd. East Unit 10, Burlington, Ontario L7T 2E1 | www.fencearmor.ca | 1 905 331 3702 | 1 866 396 7481

INSTALLATION INSTRUCTIONS



Step 1: Identify posts that require Fence Armor protection, typically areas that are affected by grass trimmers.



Step 2: If your post is already damaged, it is best to waterproof, stain or paint the effected area before installing Fence Armor.




Step 3: Align Fence Armor so that it sits in the middle of the centre line of your grass trimmers path.



Step 4: If desired, use a hot dipped galvanized nail, 1 inch to 1 1/4 inch long. Hammer into place.



Step 5: Preferred method, fasten with a #8x1.5inch self-tapping stainless steel screw. For Vinyl installation pre-drill a hole then fasten with same screw with mild pressure so as not to deform Armor.

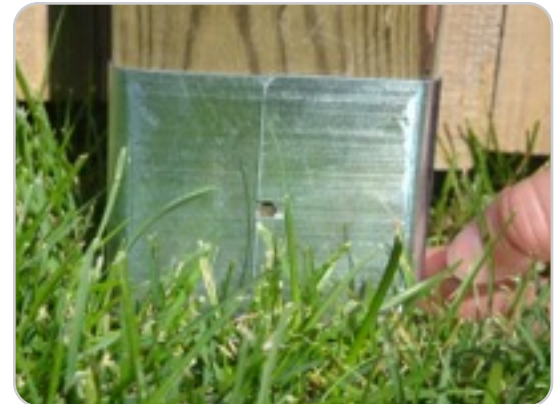

Step 6: Fence Armor can also be fastened from the sides, aligning hole to slot, if accessible. This is optional, in most cases this is not necessary.

FENCE ARMOR

484 Plains Rd. East Unit 10, Burlington, Ontario L7T 2E1 | www.fencearmor.ca | 1 905 331 3702 | 1 866 396 7481

INSTALLATION INSTRUCTIONS



Step 7: If a larger vertical area of protection is required, Fence Armor can be stacked until desired height is attained.



Step 8: If a low bottom rail prevents a Full piece of Fence Armor, we recommend our Demi Fence Armor. Or you can use shears or cutter to trim Fence Armor to suit your size needs.



Step 9: For your protection, always remember to round the corners. Using a files will also help in this.



Step 10: Also useful for inside corner installation.



Step 11: Cut Fence Armor down the centre to achieve a 90 degree corner. Again, do not forget to round the corners.



Step 12: To fasten, pre-drill a 1/8inch hole in an accessible location, & fasten as described in steps 4 or 5.