


# Assembly Instructions-Madison Avenue Corner Wall Cabinet

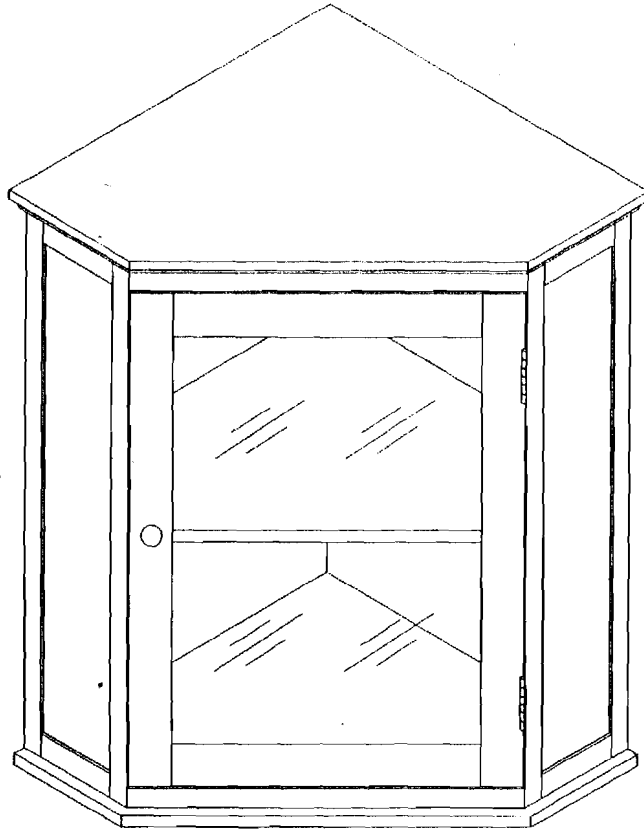

## **ASSEMBLY INSTRUCTIONS - IMPORTANT:**

Carefully unpack & identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts, please call 866-931-4207.

## **INSTRUCCIONES PARA ARMAR - IMPORTANTE:**


Desempaque cuidadosamente e identifique cada componente antes de tratar de empezar su ensambladura. Verifique la lista de partes. Por favor tenga cuidado cuando arme la unidad y siempre coloque las piezas sobre una superficie plana, suave y limpia. Si necesita ayuda con el armado, por favor llamada 866-931-4207.

## **DIRECTIVES DE MONTAGE - IMPORTANT**

Avant de commencer l'assemblage, déballez délicatement toutes les pièces et repérez les sur la liste des pièces. Procédez avec soins durant l'assemblage et posez toujours les pièces sur une surface propre, douce et lisse. Si vous avez besoin d'aide concernant l'assemblage Svp appel 866-931-4207.


**A. Top Shelf**  
Estante Superior  
Étagère Supérieure

1 PC

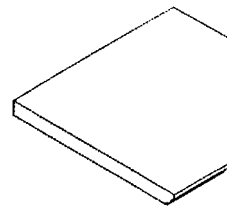


**B. Side Panel (Left / Right)**  
Panel Lateral (Izquierda / Derecho)  
Panneau Laterale (Gauche / Droite)

2 PCS

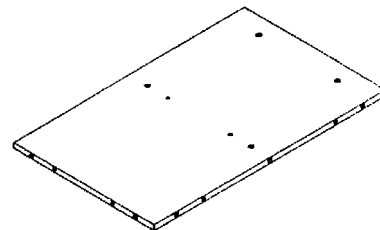


**C. Side Panel (Left / Right)**  
Panel Lateral (Izquierda / Derecho)  
Panneau Laterale (Gauche / Droite)

2 PCS

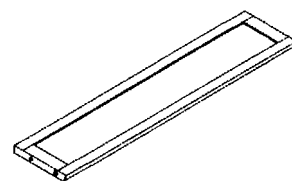


**D. Fixed Level Shelf**  
Estante De Nivel Fijo  
Étagère Fixée

1 PC

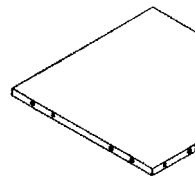

**E. Bottom Shelf**  
Estante Inferior  
Étagère Inférieure

1 PC

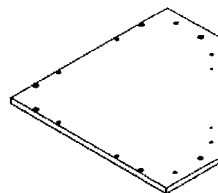


**F. Front Rail**  
Cubierta Frontal  
Charperte Par Devant










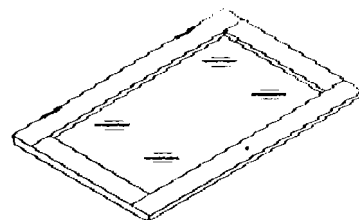


2 PCS




**G. Glass Door**  
Puerta De Vidrio  
Porte En Verre

1 PC




1. Cam Bolt Perno De Leva Boulon De Came	26 PCS	
2. Cam Lock Cerradura De Leva Serrure De Came	26 PCS	
3. Cam Lock Cover Tapa Para Cerradura Couverture Pour Serrure	26 PCS	
4. Wooden Dowel (Ø6mmx30mm) Clavija De Madera Goujon En Bois	24 PCS	
5. Wooden Dowel (Ø5mmx20mm) Clavija De Madera Goujon En Bois	4 PCS	
6. Phillips Screw (Ø3mmx12mm) Tornillo De Cruz Vis Cruciforme	6 PCS	
7. Knob Perilla Bouton	1 PC	
8. Phillips Bolt (Ø4mmx15mm) Perno De Cruz Boulon Cruciforme	1 PC	
9. Phillips Screw (Ø4mmx22mm) Tornillo De Cruz Vis Cruciforme	4 PCS	
10. Phillips Screw (Ø4mmx38mm) Tornillo De Cruz Vis Cruciforme	4 PCS	
11. Anchor Ancla Ancre	4 PCS	
12. Glue Pegamento Colle	1 PC	


STEP 1  
ÉTAPE 1  
PASO 1

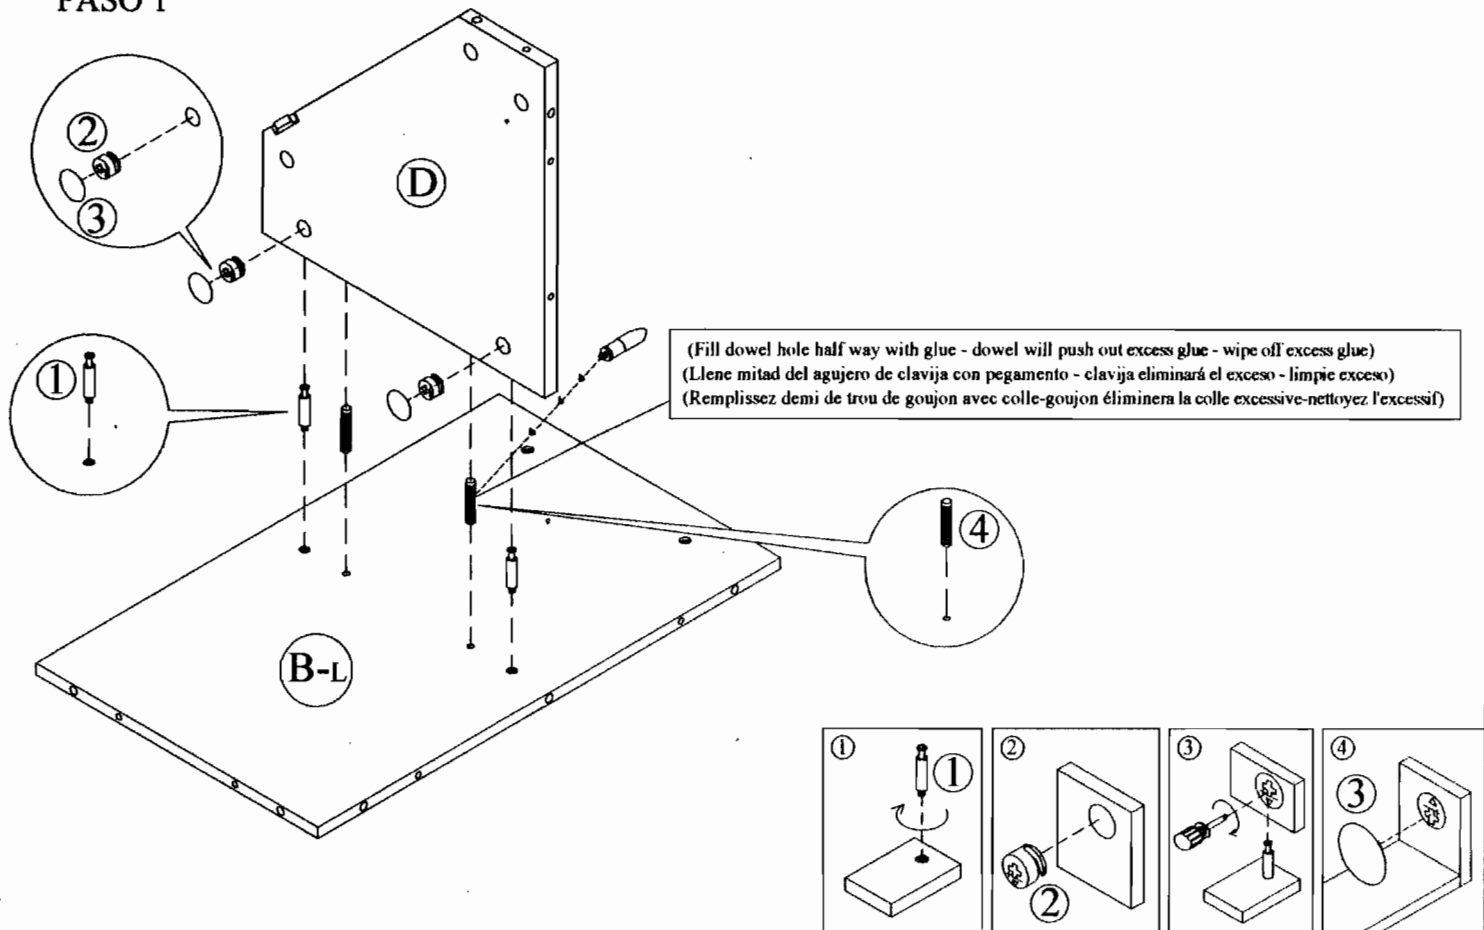


STEP 2  
ÉTAPE 2  
PASO 2

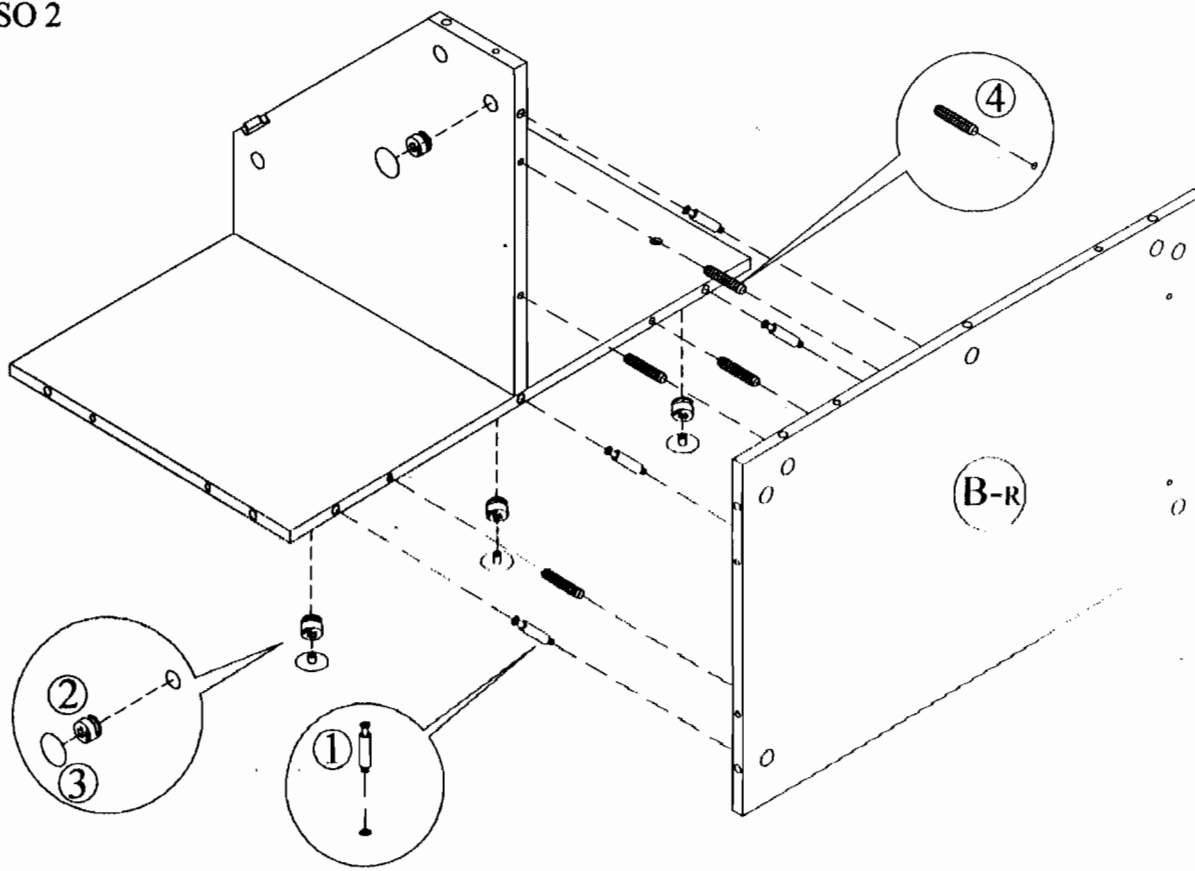


STEP 3  
ÉTAPE 3  
PASO 3

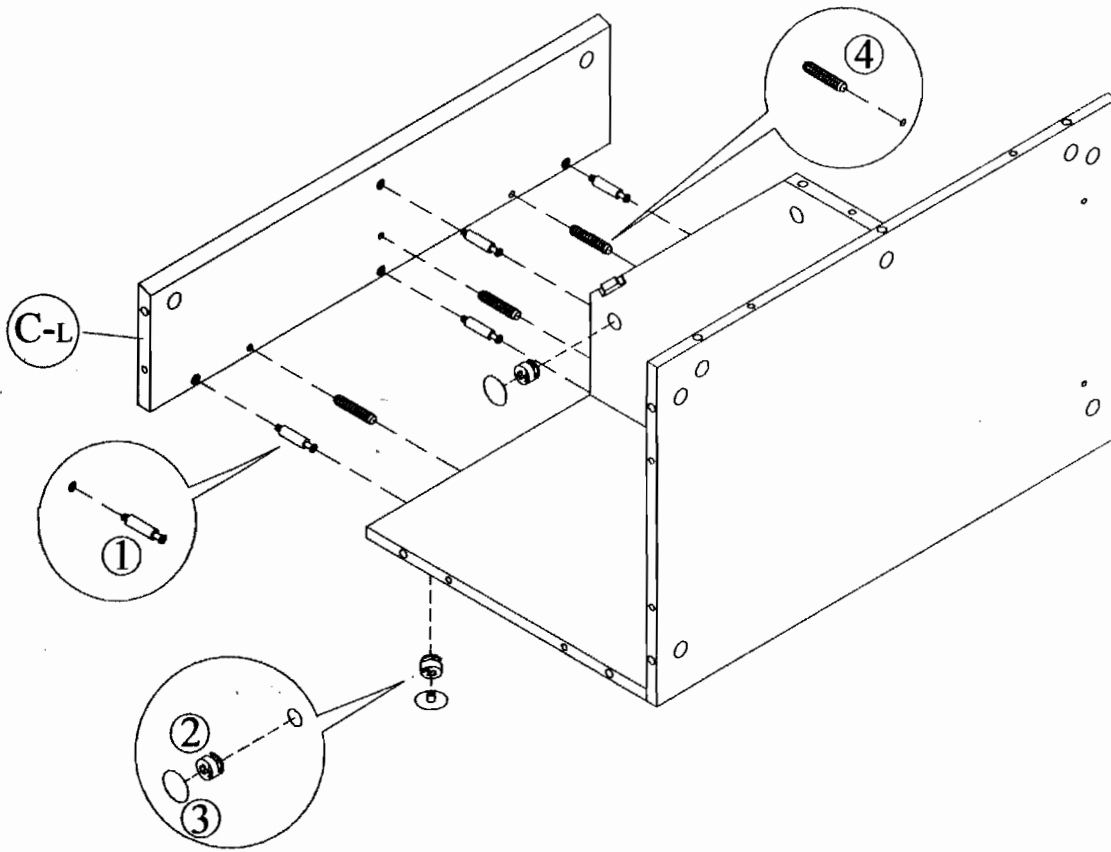


STEP 4  
ÉTAPE 4  
PASO 4

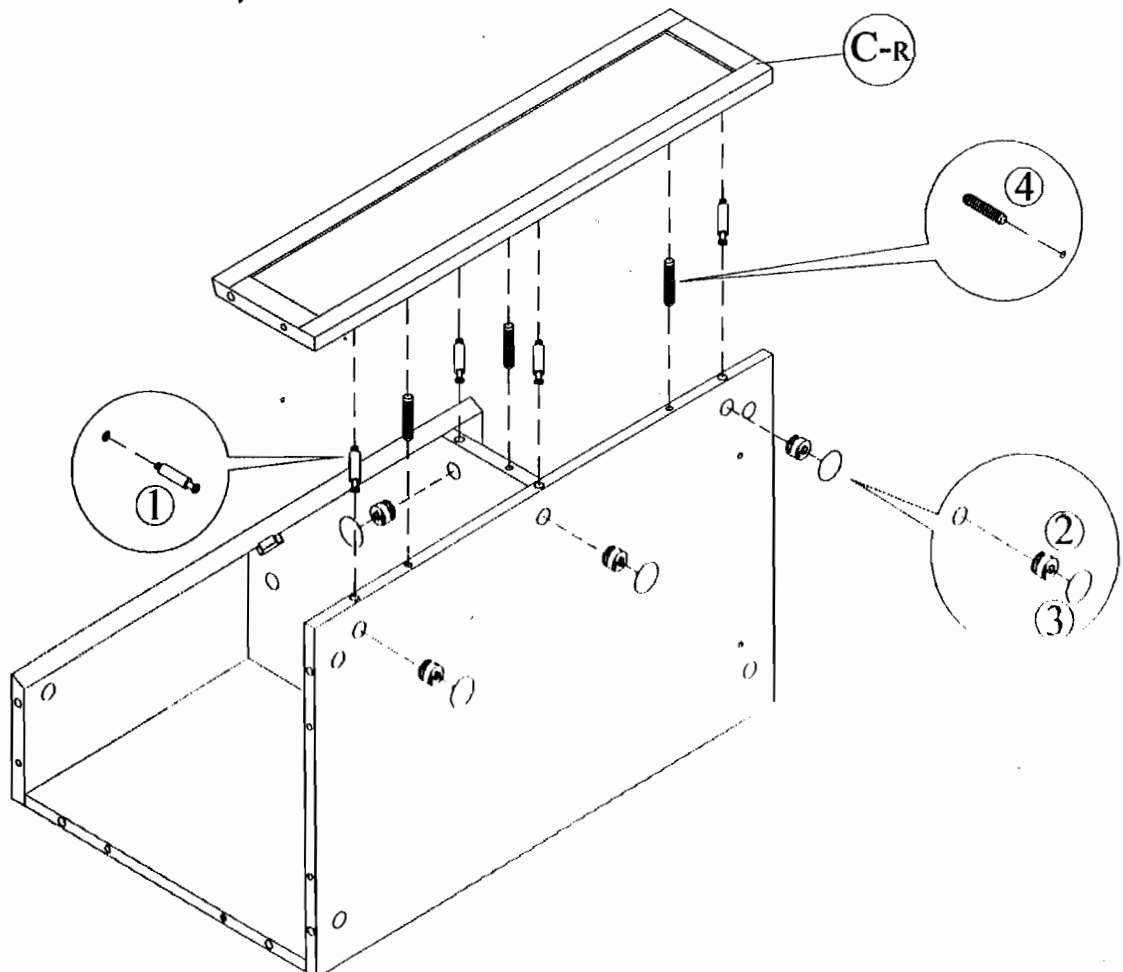


STEP 5  
ÉTAPE 5  
PASO 5

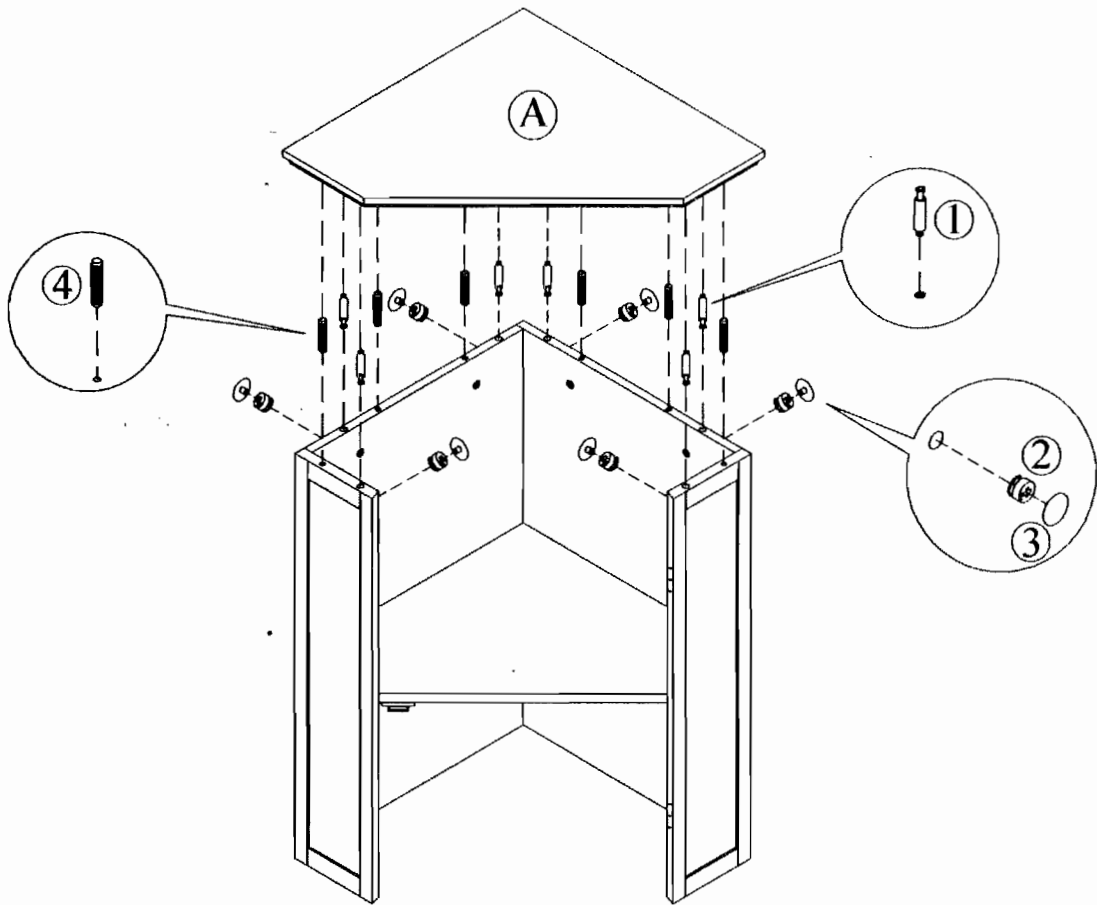


STEP 6  
ÉTAPE 6  
PASO 6

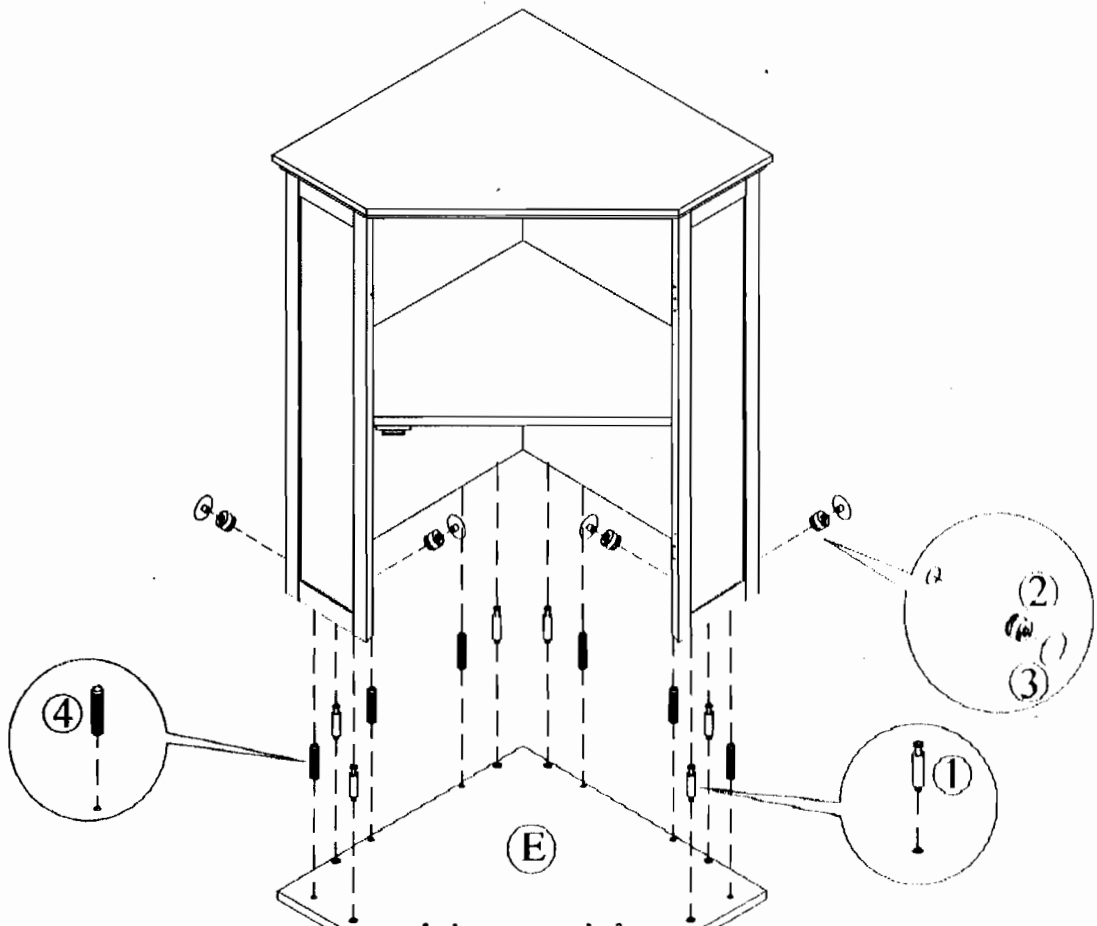


STEP 7  
ÉTAPE 7  
PASO 7

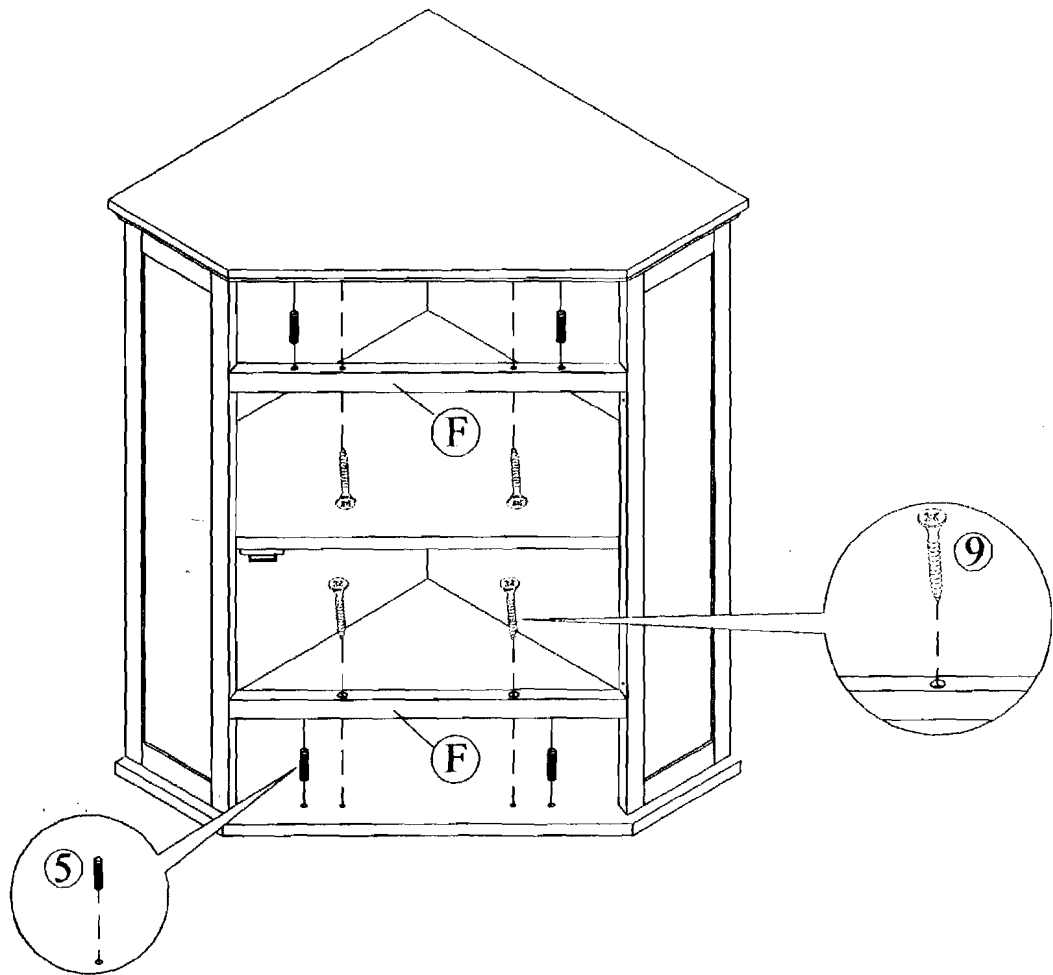

STEP 8  
ÉTAPE 8  
PASO 8

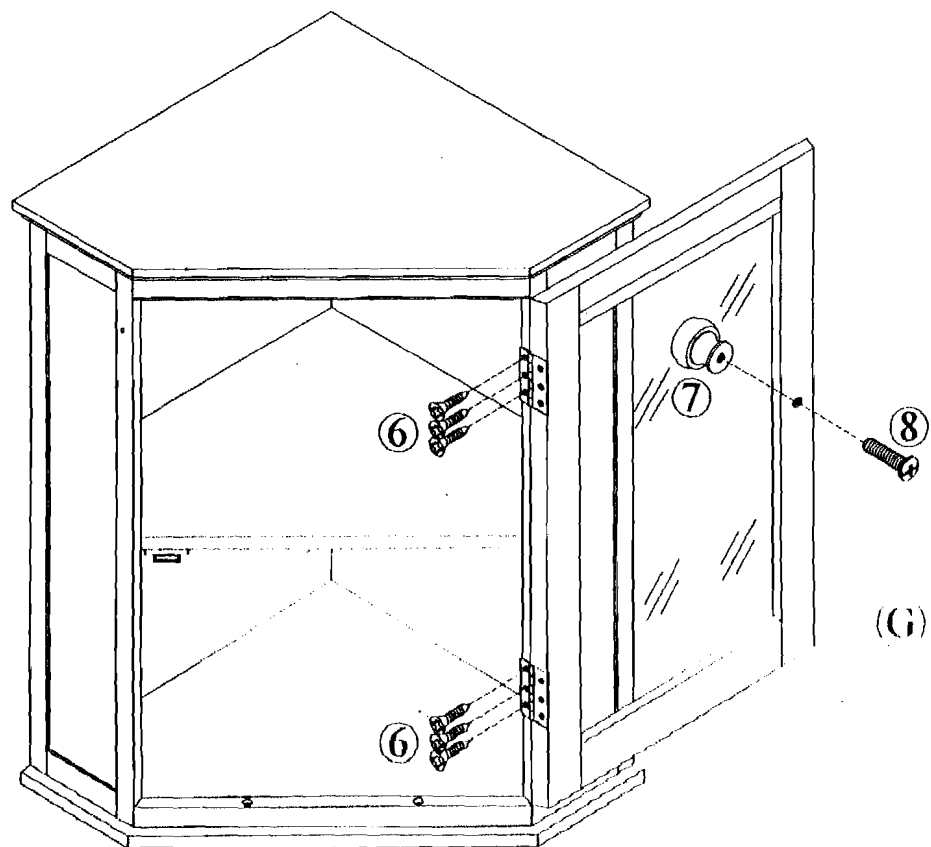

STEP 9  
ÉTAPE 9  
PASO 9

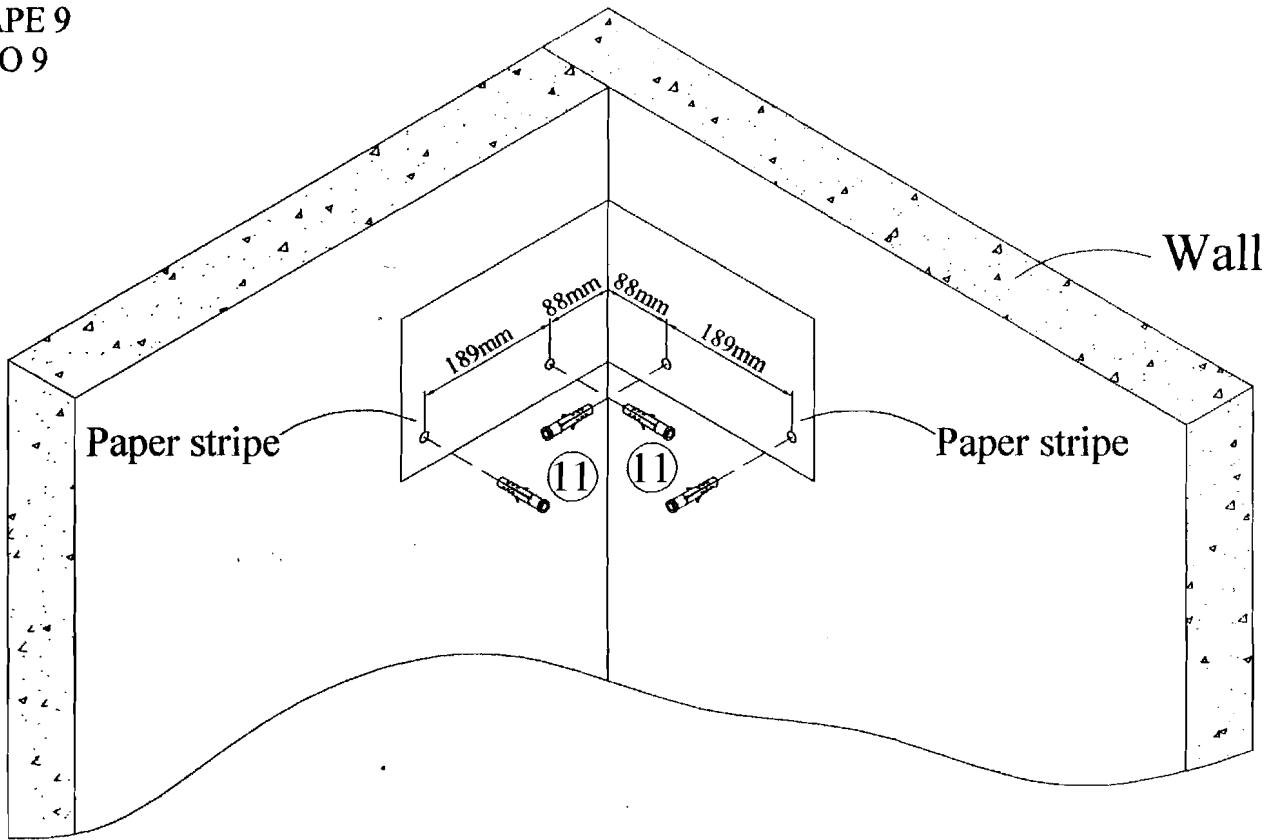

STEP 10  
ÉTAPE 10  
PASO 10

