




LOW PROFILE DESIGN

GRATE



DRAIN PIPE  
FLEXES AND  
HOLD IT'S

- 1 Before installation of the Stealth Drain, or any downspout diverter, make sure the grade around the foundation slopes away from the house. There should be a 6 inch fall in the first 10 feet from the house.

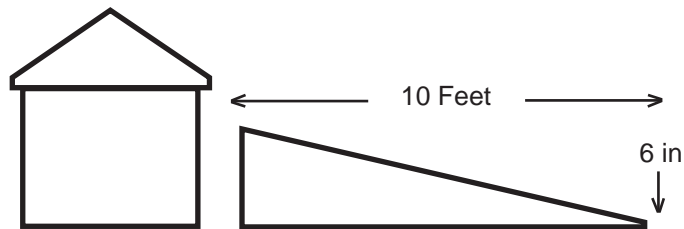


- 2 Expand drain pipe.



- 3 Cut drain pipe into two sections if draining from both sides of the Stealth Drain.



- 4 Cut a 3/4" slit on both sides of pipe for ease of installation into the drain hole.

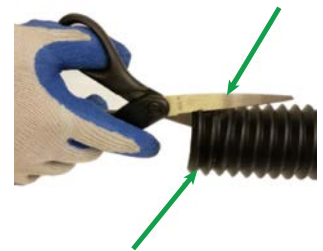

- 5 Insert into hole so the second ridge is inside.



- 6 Remove cap if draining with a second pipe.



- 7 No digging required. Place below downspout and make sure the drain pipe is draining away from the foundation. Cover with landscape material.

