

Note: Handlesets fit doors 1-3/4" to 2" thick.

A

USE INCLUDED DOOR PREPARATION TEMPLATE FOR NON-PREPARED DOORS.

USE INCLUDED PLASTIC TEMPLATE TO LOCATE AND DRILL THE 1/4" BOTTOM GRIP MOUNTING HOLE. (See note on reverse side.)

B

Install deadbolt and handleset latches.

C Latch Tongue Note

Bevel side of latch tongue should contact curved end of face plate, and curved end of strike plate.

D Deadbolt Latch Tongue Note

Deadbolt Tongue must be EXTENDED during installation.

E Install cylinder into plate

Tailpiece must be VERTICAL during installation.

F

Place cylinder assembly with plate on door exterior. Attach deadbolt adaptor plate with provided screws.

G

Attach thumbturn assembly with provided screws.

H Insert handleset spindle

- 1 Push down Button and Hold During Insertion
- 2 Insert Handleset Spindle (long end first, so that short end goes on door outside)

I

Install Exterior Handleset on Door Exterior. (part #16)

J

Install long plate with knob on door inside.


Insert bottom grip mounting screw.

K Install jamb strike plate

Exploded Drawing Single Cylinder Handleset Long Plate With Pre-Attached Knob

Part Number	Part Description
-------------	------------------

- | | |
|------|---|
| 1. | Deadbolt Latch |
| 1A. | Latch Tongue |
| 2. | 3/4" Latch & Strike Wood Screws (8) |
| 3. | Cylinder Assembly (W/Keys) |
| 3A. | Cylinder Body |
| 3B. | Tailpiece |
| 3C. | Spin Ring |
| 4. | Plate |
| 5. | Deadbolt Adapter Plate |
| 6. | 2" Machine Screws (2) for 1-3/4" thick doors. 2-1/4" Machine Screws (2) for 2" thick doors. |
| 7. | Thumbturn Assembly |
| 8. | 5/8" Thumbturn Machine Screws (2) |
| 9. | Dustbox for Deadbolt |
| 10. | Door Frame Reinforcer |
| 11. | 3" Reinforcer Wood Screws (2) |
| 12. | Strike Plate for Deadbolt |
| 13. | Handleset Latch |
| 13A. | Latch Tongue |
| 14. | Latch Faceplate |
| 15. | Handleset Spindle |
| 16. | Exterior Handleset |
| 17. | Adapter Plate |
| 18. | Adapter Plate Screws (2) |
| 19. | Long Plate |
| 20. | 1" Plate Mounting Screws |
| 21. | Knob |
| 22. | Screw Cover Adapter |
| 23. | 2-1/2" Bottom Grip Mounting Screw for 1-3/4" thick doors. 2-3/4" for 2" thick doors. |
| 24. | Mounting Screw Cover |

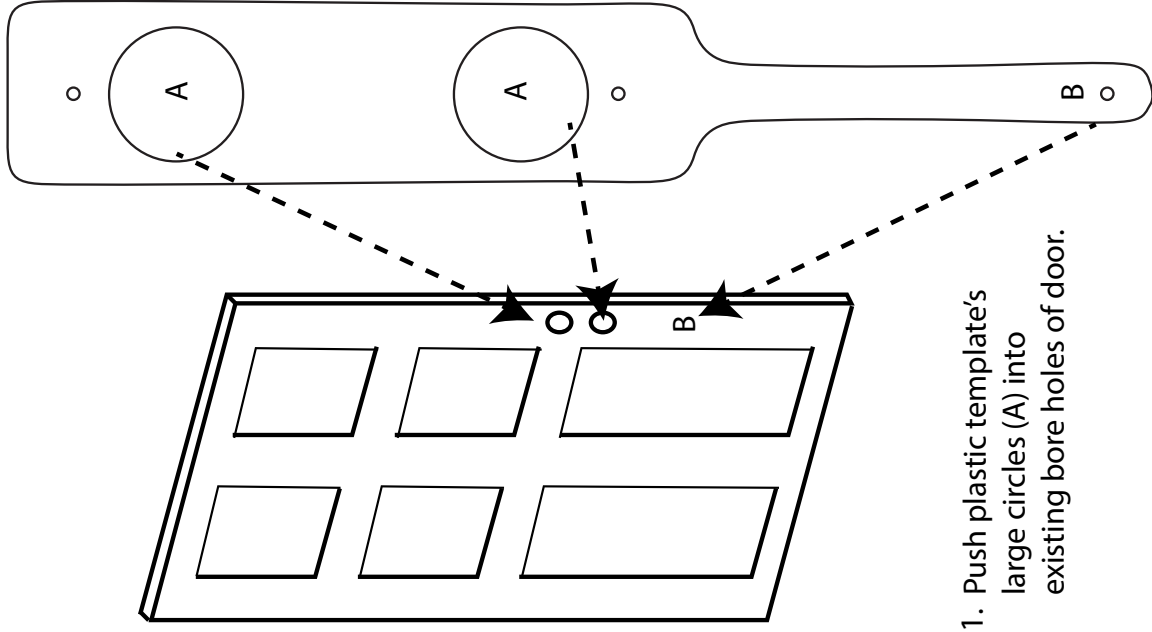

1. Push plastic template's large circles (A) into existing bore holes of door.

2. Use position of bottom hole (B) to mark and drill 1/4 inch bottom grip mounting hole.

