
STACKING DESKTOP SHELF

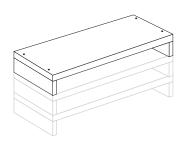




Included







Important

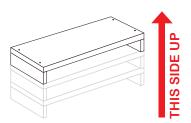

CAUTION placing unit on its side or back will compromise structural integrity. Use right side up.




- · Assemble your unit on a flat even surface
- · Make sure zBoard surfaces are clean and dry
- When moving your Way Basics unit, lift from the bottom
- Indoor use only. Not in bathroom.








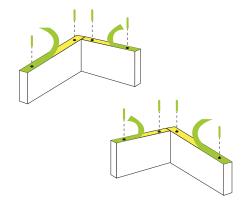

Carefully remove the rest of the 3M protective layers. Place alignment pins in Vertical zBoards.

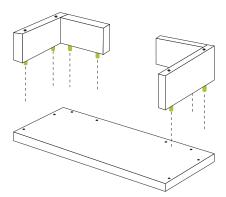

Connect the Horizonal zBoard with the assembled Back and Side zBoards. Enjoy building possibilities!

Note Use included decals to cover the connector holes if not stacking shelves.

