


Kits are supplied with technical data sheets in each package. The data sheets list components size, quantity and visual description. Additional assembly instructions are provided by dealers that are specific to building style: *gable roof, octagon, pentagon, sloped roof* and *multi-room* models. These 10 tips will improve the outcome of your assembly.

Top 10 Assembly Tips

- 1) Kits are designed for concrete slabs, but can be installed on skids to make portable. The base must be level & square before assembly. Continually check for level and square as you assemble.**



- 2) Kits include small treated floor joists. The technical details will indicate to lay them flat or stand on end. Laying them flat or on end will change the distance to the outside edge. The walls will overhang the treated joists by approximately 1/8" if done correctly**

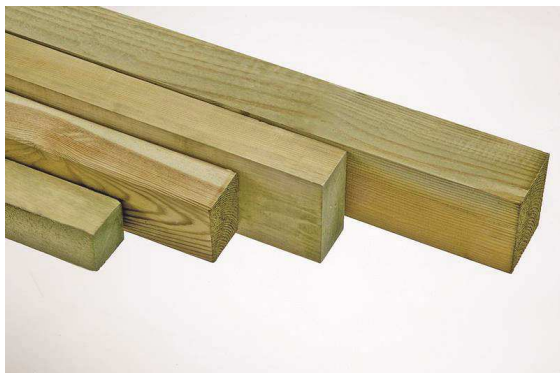

- 3) Counter sink and screw the first two rows to the base
- 4) Counter sink and screw gable ends to wall logs & screw purlins to gable ends
- 5) Use ratchet straps at all junctions and tighten down wall logs when fully assembled. Tap walls & tighten pulling joints tight. Leave in place as long as possible



- 6) Install storm straps to outside corners behind the horn. Place the single hole at the top log and secure and tighten the bolt. In the two lower slotted holes, install bolt **AT THE BOTTOM OF THE SLOT** and finger tighten only. Now remove ratchet straps and the logs will not open, but allow shrinkage.



7) Where there are double purlins, screw them together from the top or bottom



8) Exterior & Interior trim boards are not fastened to wall logs. (NO NOT NAIL OR SCREW TRIMS TO WALL LOGS) They trims create a trough only for the wall logs to move



9) Tongue & groove boards for roof and floor have a V-joint on one side & a flat joint on the other. When installing roof boards the V-joint is to face down into the room. Floor boards can be installed with V-joint up or down

10) Use construction adhesive when putting floor and roof boards down



NOTE: FOR LARGE OPEN GARAGE OR ONE ROOM MODELS, THE WALL MAY NEED TO BE SCREWED AS THEY ARE STACKED. THIS IS THE EXCEPTION TO THE STANDARD ASSEMBLY GUIDELINES.