


PARTS NEEDED

- Armour Screen

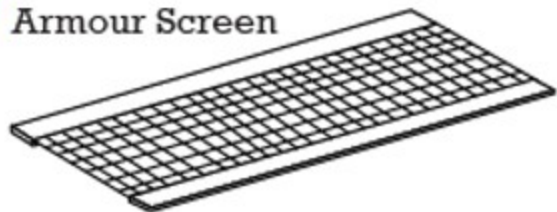


TOOLS

- Gloves
- Metal Cutting snips
- Tape measure

OPTIONAL PARTS

- 8 x 1/2 screws (2 per piece of ArmourScreen)
- Drill with a straight slot bit or a hex head bit

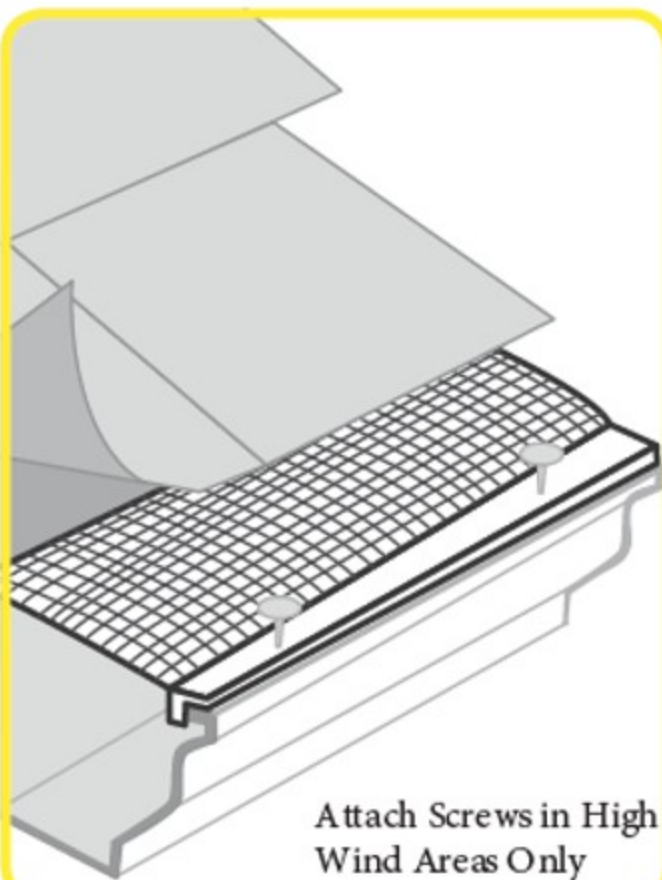

1. Clean gutter and place the Armour gutter screen on the gutter with the flat edge towards the house.
2. Push the front edge of the screen towards the front lip of the gutter, the "C" lock will snap in place. The back edge of the screen should be pushed down and even with the back of the gutter. Some upward bowing in the middle of the screen is normal. If the screen is bowing downward, please remove the screen and try placing it again.
3. Continue installing the gutter screens down the length of the gutter until you reach the end of the gutter. Cut the last piece to size and fasten as described.