




Tower Corner Mantel and Base Assembly Instructions

MODEL: ATC

Carton contents

PART	DESCRIPTION	QTY
PARTS		
A	TOP	1
B	UPSIDE PANEL	1
C	MIDDLE CLAPBOARD	1
D	UNDERSIDE PANEL	1
E	BASE	1
F	DRAWER ASSEMBLY	1
G	CLAPBOARD	2
H	LEFT & RIGHT PANEL	2
I	BACK PANEL	1
J	CONNECT PANEL	2
HARDWARE		
K	CAM DOWEL	38
L	CAM LOCK	38
M	WOOD DOWEL	14
N	SCREW 1	4
O	SCREW 2	8
P	PIN	8
Q	SCREW 3	10

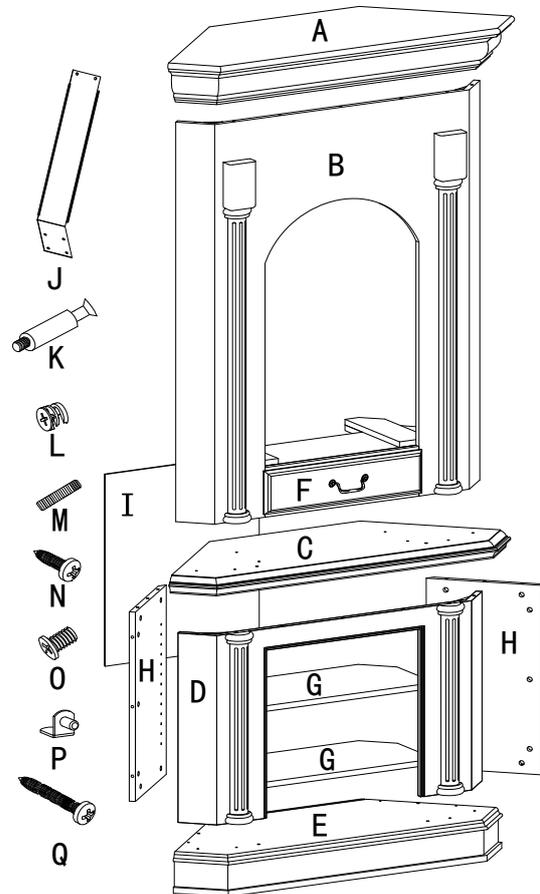

NOTE: Carefully inspect each part for shipping damage before beginning assembly. Compare the carton contents with the list above. All necessary hardware is provided to fasten the mantel parts together. When tightening screws, do not over tighten. This may cause threads to strip. For this reason, we recommend using a manual screwdriver rather than a power screwdriver. Do not force screws into holes.

- Put 6 Cam Dowels (K) onto Underside Panel (D), and connect Left & Right Panel (H) with Underside Panel (D). Then put 6 Cam Locks (L) onto Left & Right Panel (H) and fix these Cam Locks (L) with a manual screwdriver. (Figure 1)

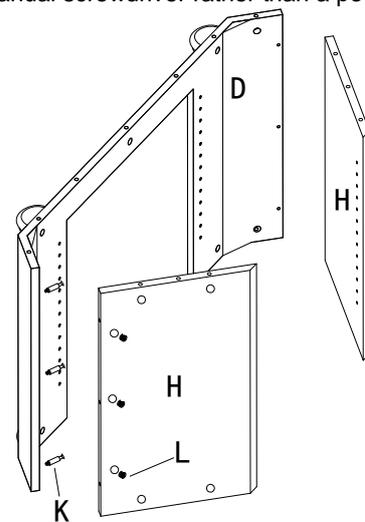


Figure 1

2. Put 8 Cam Dowels (K) and 4 Wood Dowels (M) onto Base (E), and place Underside Panel (D) and Left & Right Panel (H) assembly onto Base (E). Then put 8 Cam Locks (L) onto Left & Right Panel (H) and Underside Panel (D), and fix them with a manual screwdriver. (Figure 2)

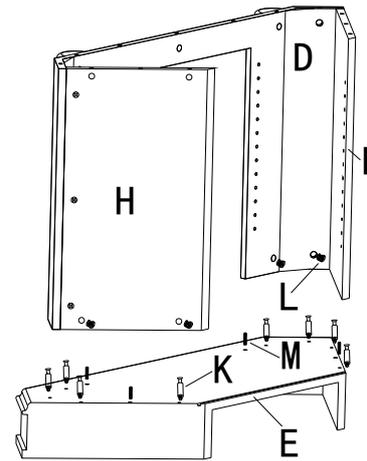


Figure 2

3. Put 8 Pins (P) onto Underside Panel (D) and Left & Right Panel (H) assembly, and lay 2 Clapboards (G) onto these Pins (P), leave proper space between two Clapboards (G).

Note: Space between two Clapboards (G) can be adjusted by changing the height of Pins (P). (Figure 3)

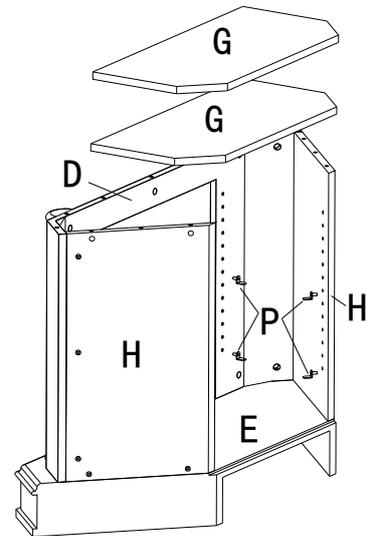


Figure 3

4. Put 9 CAM Dowels (K) and 4 Wood Dowels(M) onto Middle Clapboard (C), and lay Middle Clapboard (C) onto Underside Panel (D) and Left & Right Panel (H) assembly. Then put 9 Cam Locks (L) onto Underside Panel (D) and Left & Right Panel (H) assembly and screw them with a manual screwdriver. (Figure 4)

5. Connect Back Board (I), Middle Clapboard (C) and Base (E) with 10 screws(Q). (Figure 5)

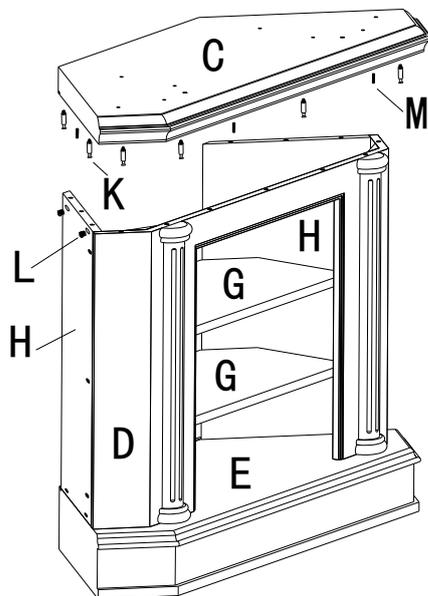


Figure 4

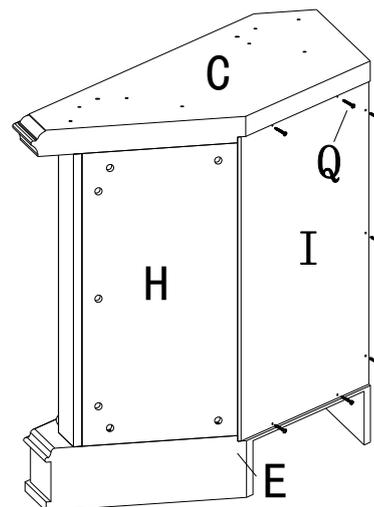


Figure 5

6. Put 4 Cam Dowels (K) onto Middle Clapboard (C), and lay Drawer Assembly (F) on Middle Clapboard (C), then put 4 Cam Locks(L) on Drawer Assembly (F) and fix them with a manual screwdriver. (Figure 6)
7. Put 5 Cam Dowels (K) and 2 Wood Dowels (M) onto Top (A), and lay Top (A) to Upside Panel (B). Then put 5 Cam Locks (L) onto Upside Panel (B) and fix them with a manual screwdriver. (Figure 7)
8. Put 4 Cam Dowels (K) and 2 Wood Dowels (M) onto Middle Clapboard (C),and lay Upside Panel (B) and Top (A) assembly onto Middle Clapboard (C). Then put 4 Cam Locks (L) onto Upside Panel (B) and fix them with a manual screwdriver. (Figure 8)

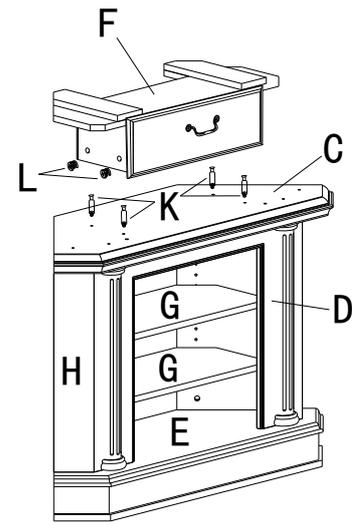


Figure 6

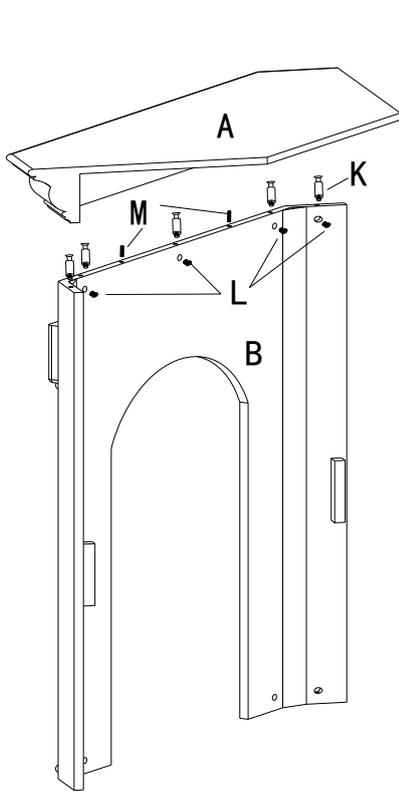


Figure 7


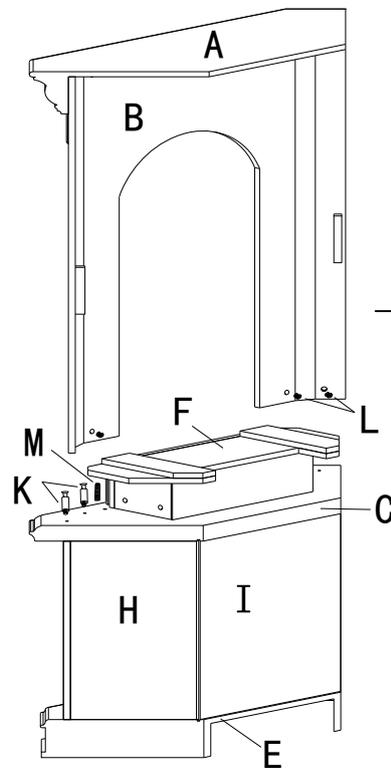


Figure 8

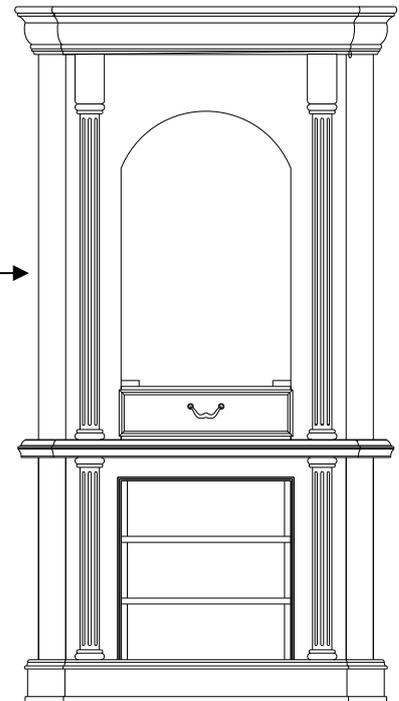

FIREPLACE INSTALLATION

1. Fireplace should be fully assembled. Refer to fireplace owner's manual.
 2. Place mantel assembly close to installation location. Refer to fireplace owner's manual for installation clearances. Provide enough room to insert fireplace from back of mantel.
 3. Install gas line per the requirements outlined in the fireplace owner's manual. Remember to leave access to the gas shutoff valve where it is accessible to the user.
 4. Check for leaks per the instructions in the fireplace owner's manual.
 5. Position fireplace inside mantel (see Figure 9). Carefully position gas lines. Important: Use caution when positioning fireplace on base. Base may scratch easy. Make sure fireplace is in proper position within mantel opening.
 6. Place the Fireplace into the Tower Mantel according to figure 9, then take out CONNECTOR PANEL (J) and SCREW (N) (O) from the attached package; assemble the Complete Unit and High Mantel with these stuff according to Figure 10.
 7. Carefully push mantel and base into position against wall.
- Note:** We recommend you secure the upper portion of the mantel to the wall.
8. Complete the fireplace assembly of log placement and front panel by following the instructions in the fireplace owner's manual.

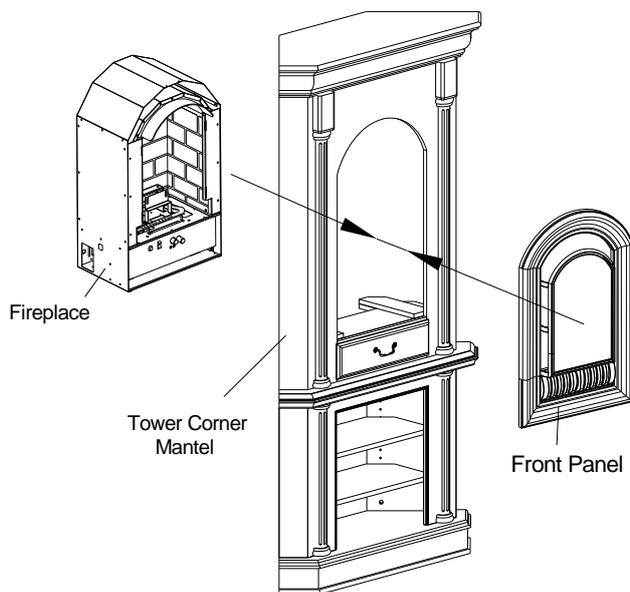


Figure 9

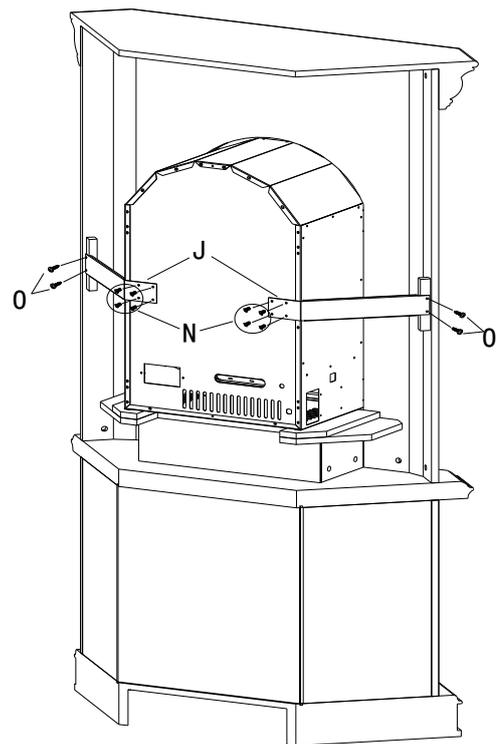


Figure 10



Questions about installation, operation, or troubleshooting? Before returning to your retailer, Call customer service department toll-free at **(877) 886-5989**.