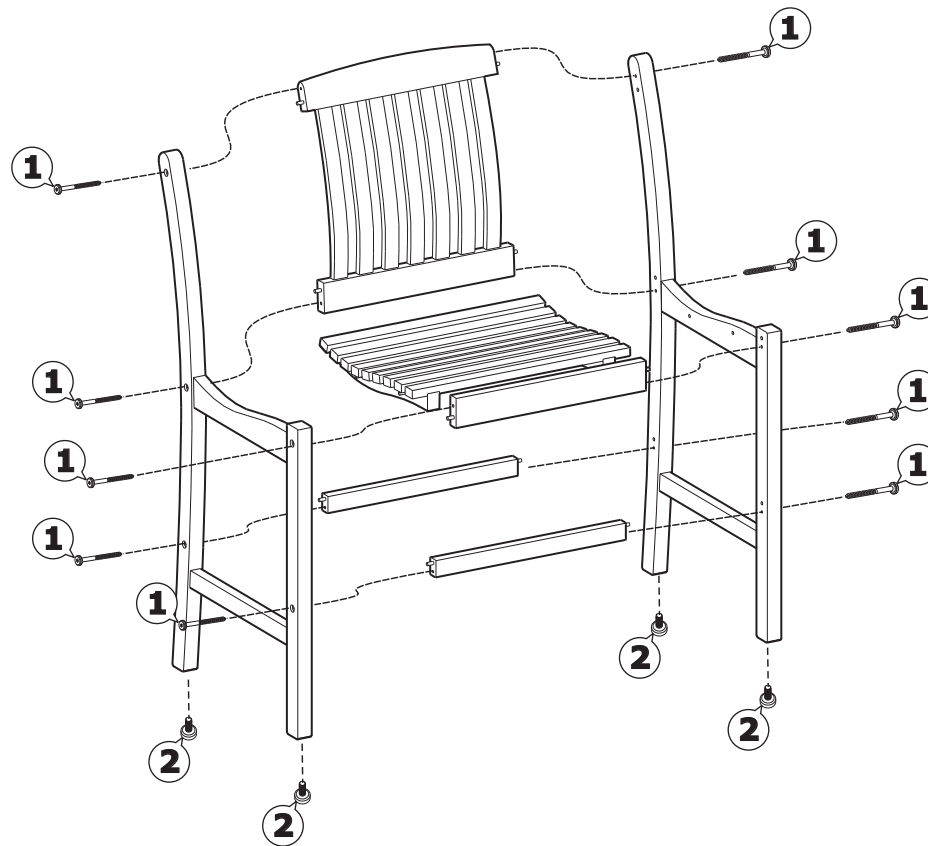





Assembly Instruction



- 1** 
F-screw 6x80-T30, GS x 10 PCS
SEM201429
- 2** 
Bench foot black, P x 4 PCS
SEM201254
- 3** 
Torx key T30, GS x 1 PCS
SEM201430

BOMA BARSTOOL, TEA
SEM102539