

# See-Through Lockers – S-1, S-2, S-3, S-6 Series Assembly Instructions

Thank you for selecting Salsbury's see-through lockers. We are confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you in assembling the lockers. The lockers should then be placed in the installed location and anchored to the floor, wall, or to both. Individual job conditions will dictate the type of anchor fasteners.

## Preliminary Note

These instructions cover assembly of four (4) different 1-wide models varying by the number of doors (single-tier, double-tier, triple-tier, and box style). Note that 3-wide see-through lockers are also available. While some of the illustrations in this document show only the single-tier locker, the assembly process should be the same for all models.

Please read the complete assembly instructions before attempting to assemble the lockers. Check the materials to be sure that they are correct for the job and that there is no damage.

Be careful to use the correct hardware. Use screw no. 1 all around with screw heads out, except where noted. Screw no. 2 is for locker legs only. Lockers should be assembled in groups as indicated in the order of the drawings.


The essential tools required for assembling the lockers are a 5/16" nut driver and 2 small nail punches or drift pins for hole alignment. The lockers should be assembled on a flat level surface and installed in position, anchoring to the floor, wall or both, as required.

See the illustration to the right to identify the locker parts. Note that the sloping hood, front base, end base, and name plate are optional items and assembly is covered by separate installation instructions. Also note that the coat rod is included with the 18" deep single-tier models only.


## Assembly

1. Fasten a top, bottom, and side to a back. The top and bottom are identical parts and should be attached with the flanges down. Insert a rear leg and fasten. See Illustration 1.
2. Fasten the shelf in position under the top, if applicable. See Illustration 2.
3. For a one-wide locker, skip to Step 4.


### Illustration 1

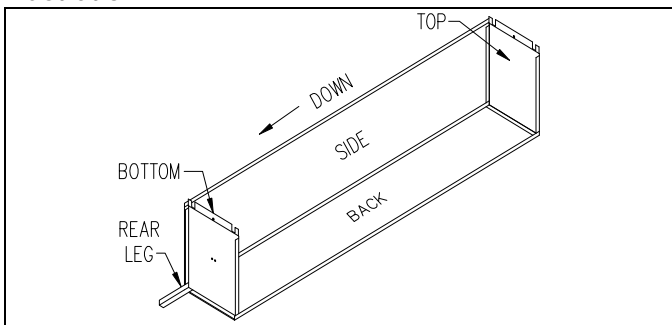

## Parts Identification

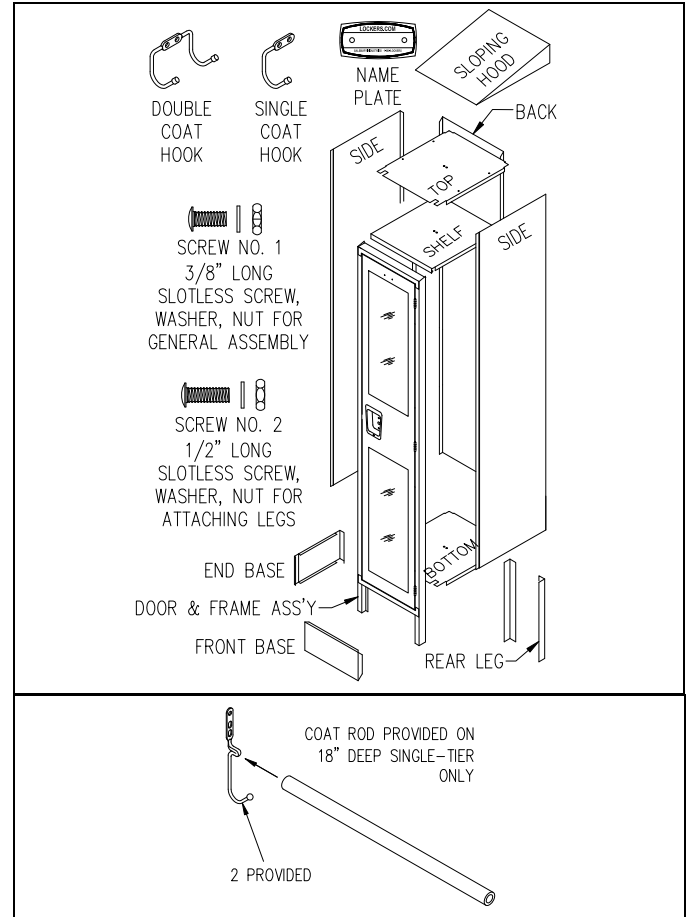

### Illustration 2

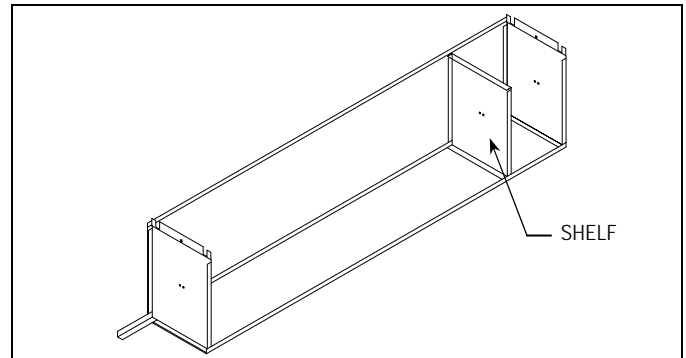


## SALSBURY INDUSTRIES

1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
 Phone: 1-800-562-5377 Int'l Phone: 323-846-6700  
 Fax: 1-800-562-5399 Int'l Fax: 323-846-6800

## Assembly (continued)


3. Position additional sides, backs, tops, bottoms, and shelves, if applicable, and fasten in place. See Illustration 3.

**Illustration 3**

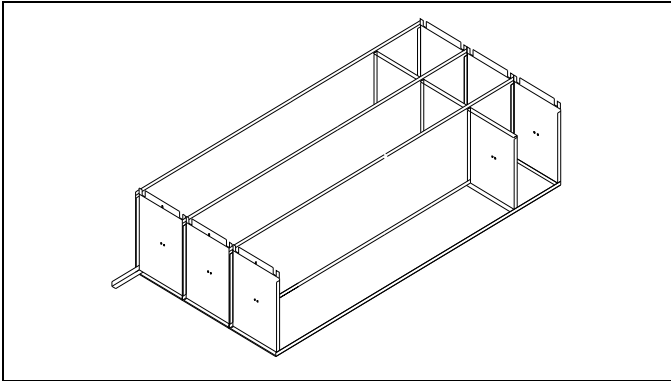


4. Add a last side (flange in) and the other leg. See Illustration 4.

**Illustration 4**

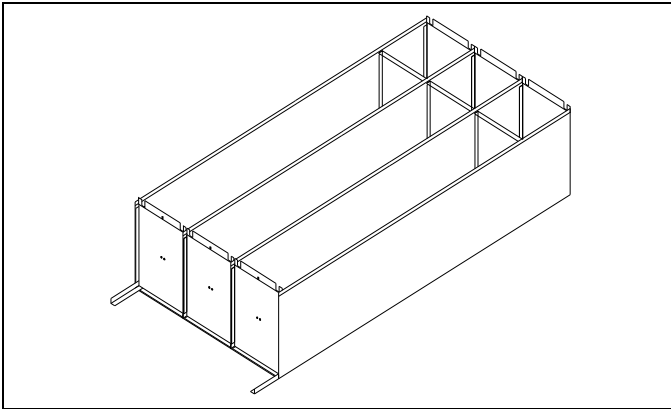


5. Attach the door and frame assemblies, ensuring that the front edges of the sides are inside a frame assembly flange and not between frames. See Illustration 5.

**Illustration 5**

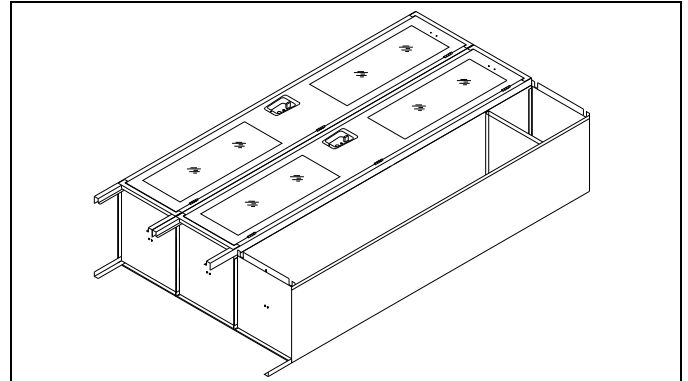


6. Fasten the last door and frame assembly into place, ensuring that they are all fastened correctly. See Illustration 6.

**Illustration 6**

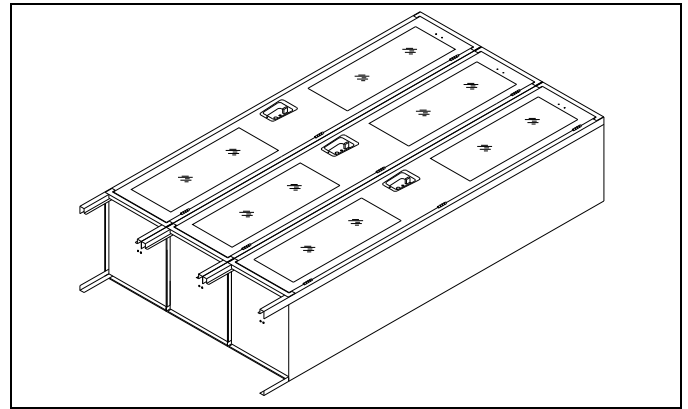

7. Finally, if applicable, install coat hooks below the top and lock hole fillers into the doors. If there are built-in locks, install locks instead of lock hole fillers.

## Side Panel Hole Locations for Shelf (Single-Tier Only)

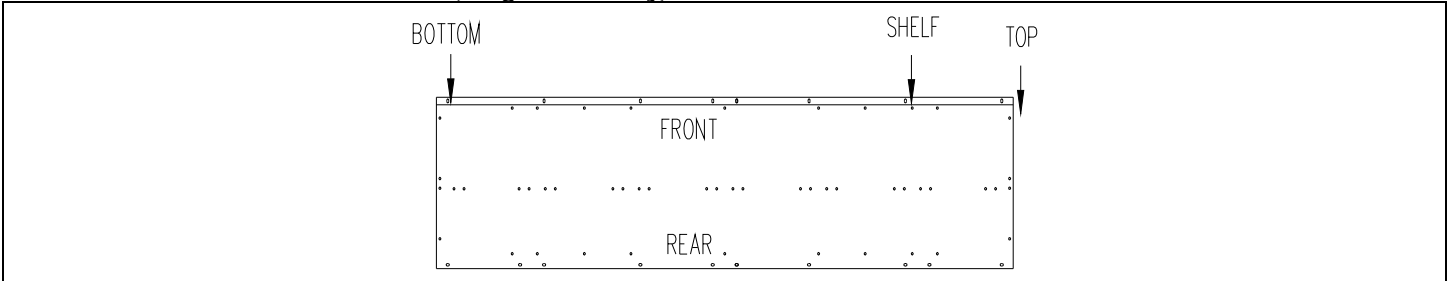

## **SALSBURY INDUSTRIES**


1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700  
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800

# See-Through Lockers – S-1, S-2, S-3, S-6 Series Installation Instructions - Options

Thank you for selecting Salsbury's see-through lockers. We are confident that the quality and construction of the lockers will prove to be a good investment. These instructions are intended to assist you in installing optional items onto the locker. The name plates, front bases, end bases, and sloping hoods are each separate optional items and may or may not be included with your order.


## Name Plates

The name plates are installed with #4 slotless screws and nuts.

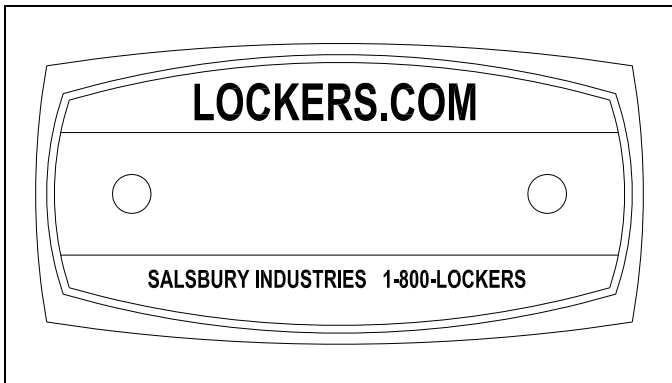

## Sloping Hoods


The sloping hoods are assembled and installed on the locker units with #10 x 3/8" slotless screws and nuts. The side plates should be installed inside the flanges of the sloping hood. Only 1 side panel should be assembled between adjacent sloping hoods.

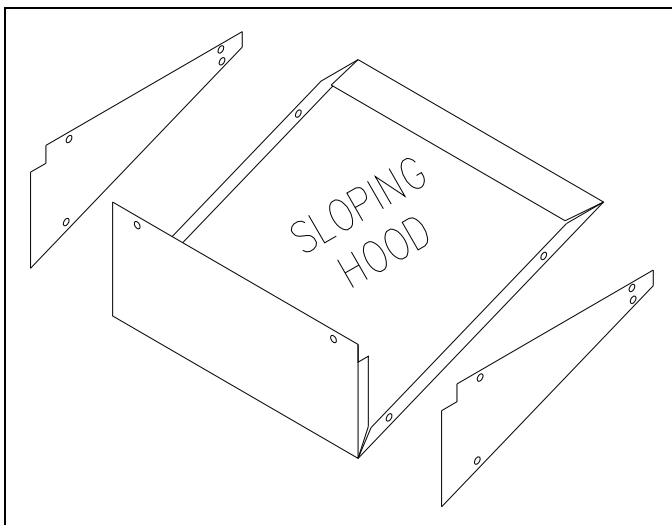

## Front Bases and End Bases

The front bases are simply snapped into position between the two legs in the front of the locker unit. No fasteners are required due to the dimples on the front base flanges.

The end bases are installed and fastened with 2 screws and nuts so that the end base front edge is inserted inside the locker front leg with the end base rear flanges wrapped around the outside of the locker rear leg.

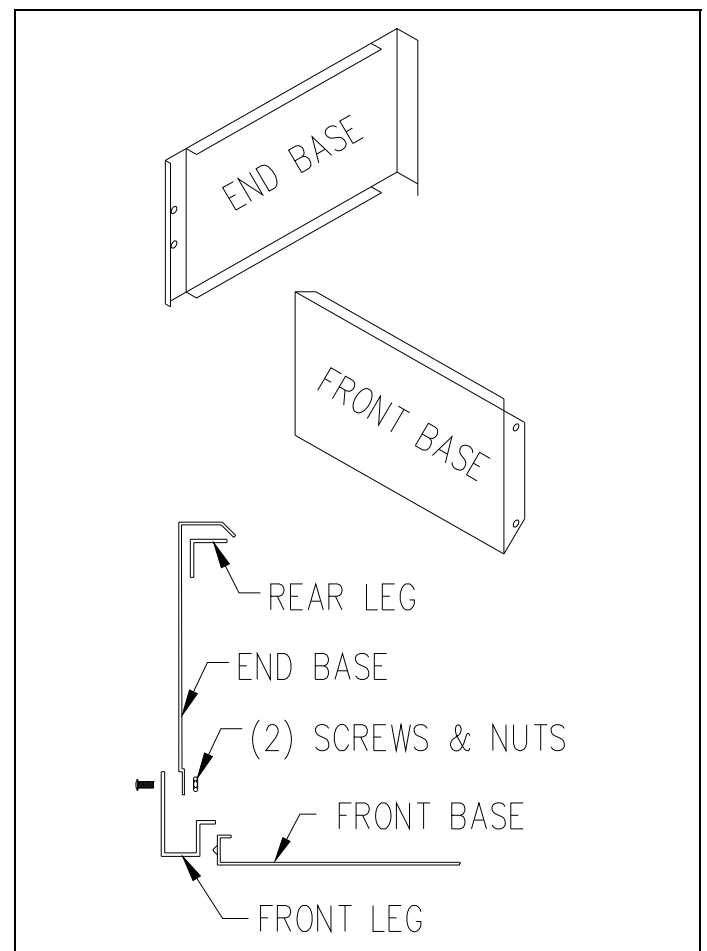

## SALSBURY INDUSTRIES

1010 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
Phone: 1-800-562-5377 Int'l Phone: 323-846-6700  
Fax: 1-800-562-5399 Int'l Fax: 323-846-6800