
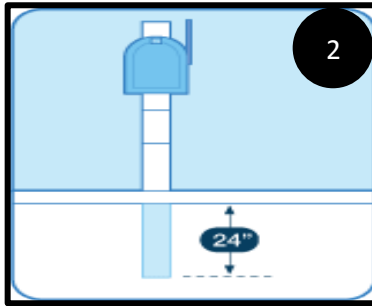


The Squire

Deluxe Mail Box Post by Grisham Bros.

Installation Instructions:

1. Establish placement of post by USPS height and set back specifications.
2. Mark post hole locations, and remove soil to a depth of 24" inches

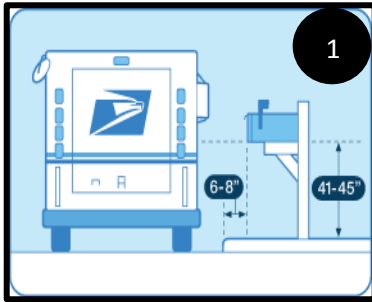


Tools Needed:

Post hole digger
Variable speed power drill
Philips head bit
Level

3. Set bottom post extensions minimum 24" below grade, and secure in place with $\frac{1}{2}$ cubic foot of concrete for each post extension. Check if post is level, and brace in place. Allow concrete to harden before securing the mounting base and mail box to the post.


Mail Box post extensions set to 24" inches below surface grade

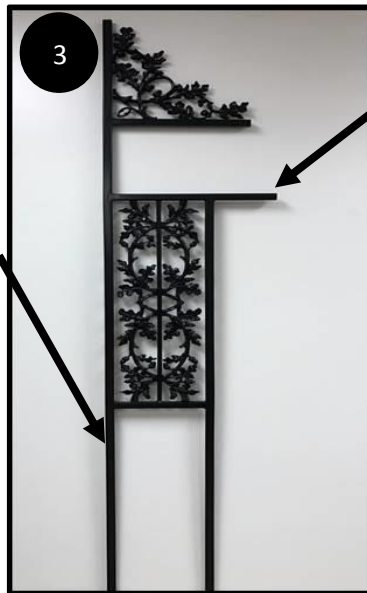

Secure mail box to mounting base with remaining self-tapping screws



Secure mail box mounting base to horizontal portion of post by using three self-tapping screws provided.

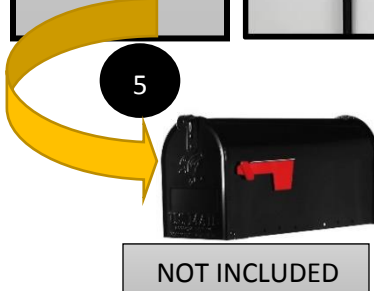

For questions regarding this product, please contact: Grisham Bros
At: 1-800-238-1005 7:00 am to 4:30 pm CST Monday through Friday.
Or contact us by email at: INFO@GRISHAMBROS.COM