


HOME DECORATORS COLLECTION








INV# 69117
SK18206A WHITAKER CORNER BENCH 20"Hx28"Wx20"D
ASSEMBLY INSTRUCTIONS

Made In China

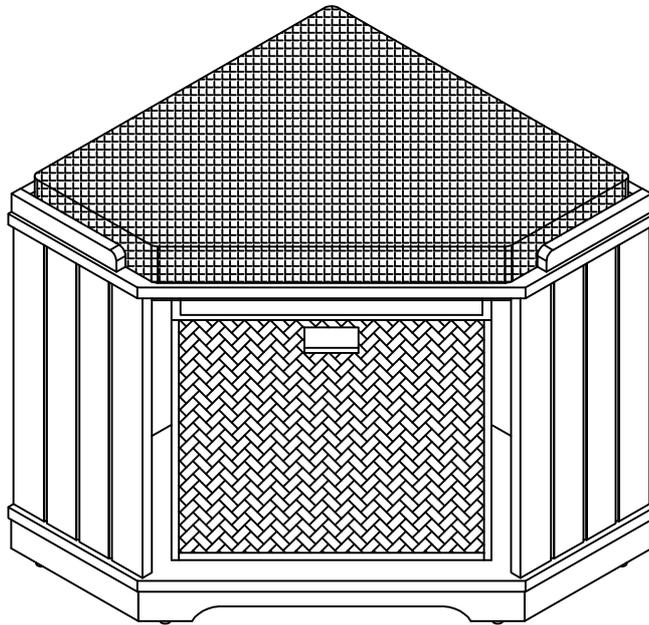

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

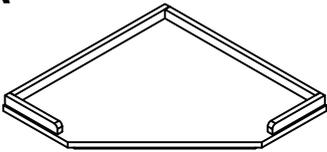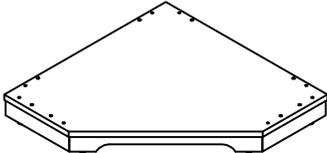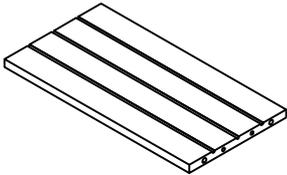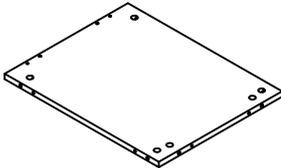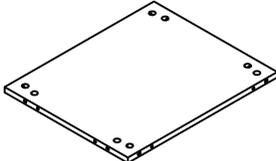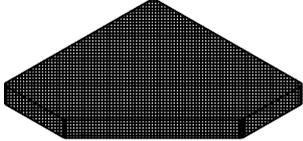PARTS LIST		
A 	B 	C 
TOP PANEL-1PC	BOTTOM PANEL-1PC	FRONT PANEL-2PCS
D 	E 	F 
LEFT SIDE PANEL-1PC	RIGHT SIDE PANEL-1PC	CUSHION-1PC
G 	H 	
BASKET BODY -1PC	BASKET BOTTOM -1PC	

a



WOOD DOWEL-22PCS

b



**CAM
LOCK BOLT-22PCS**

c




CAM LOCK-22PCS

d



PLASTIC COVER-22PCS

e



BOLT-4PCS



f



ALLEN WRENCH -1PC




NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

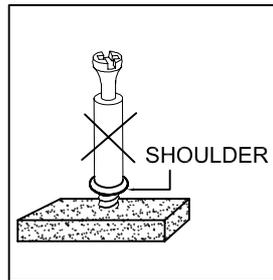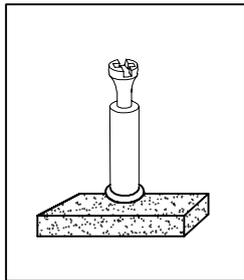


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

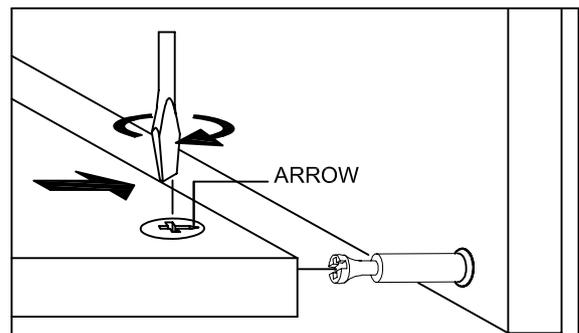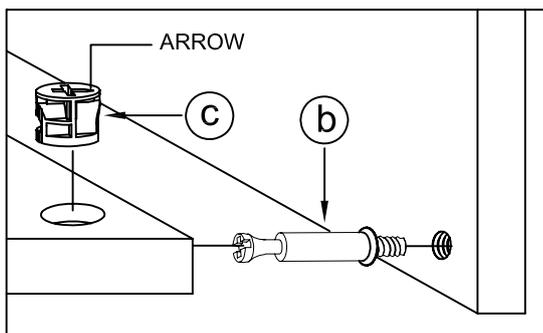


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

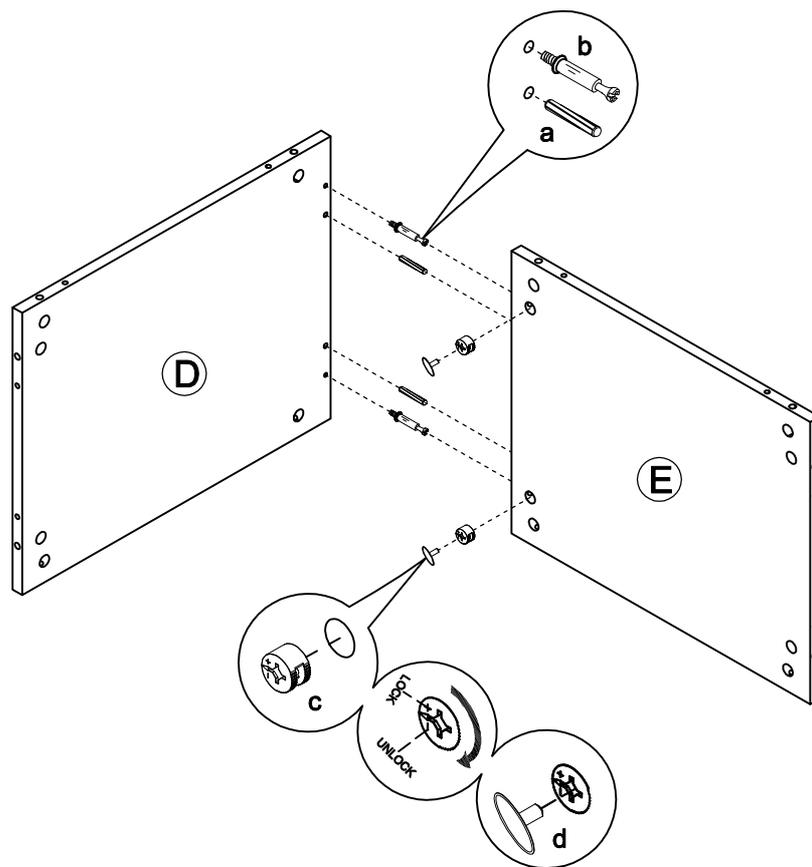


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (D).
- JOIN THE LEFT SIDE PANEL (D) TO THE RIGHT SIDE PANEL (E)
BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 2

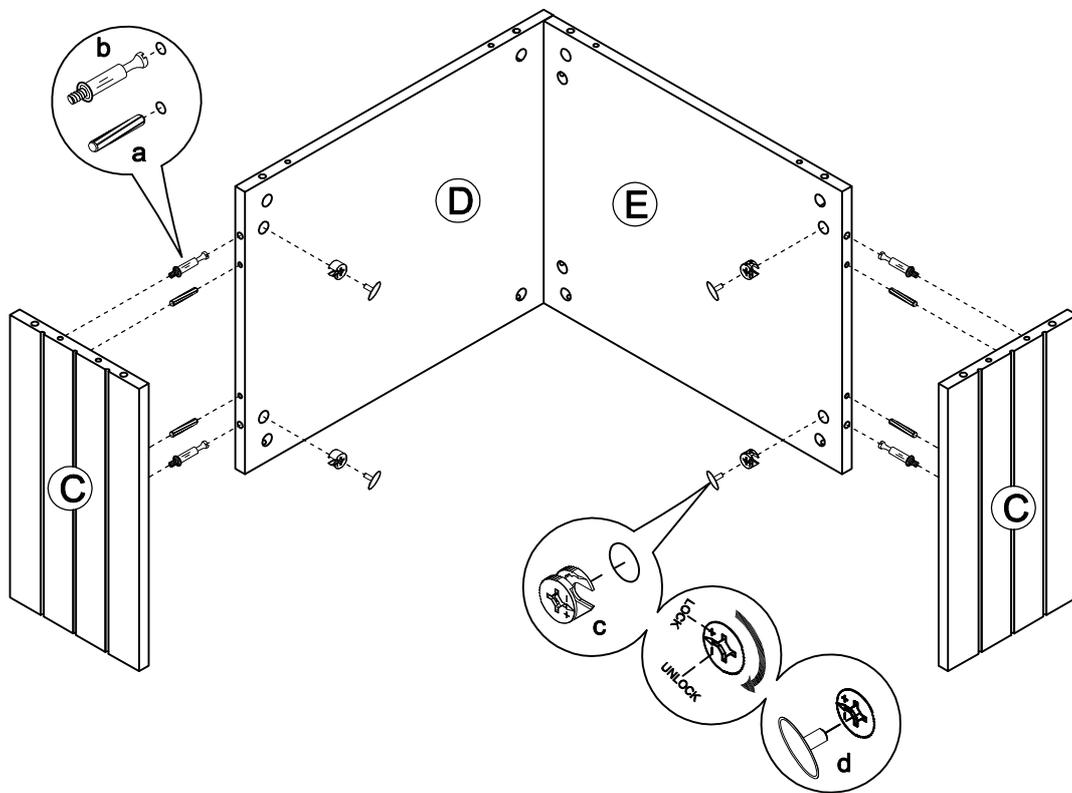


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE FRONT PANEL (C).
- JOIN THE FRONT PANEL (C) TO THE LEFT SIDE PANEL (D) AND THE RIGHT SIDE PANEL (E) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 3

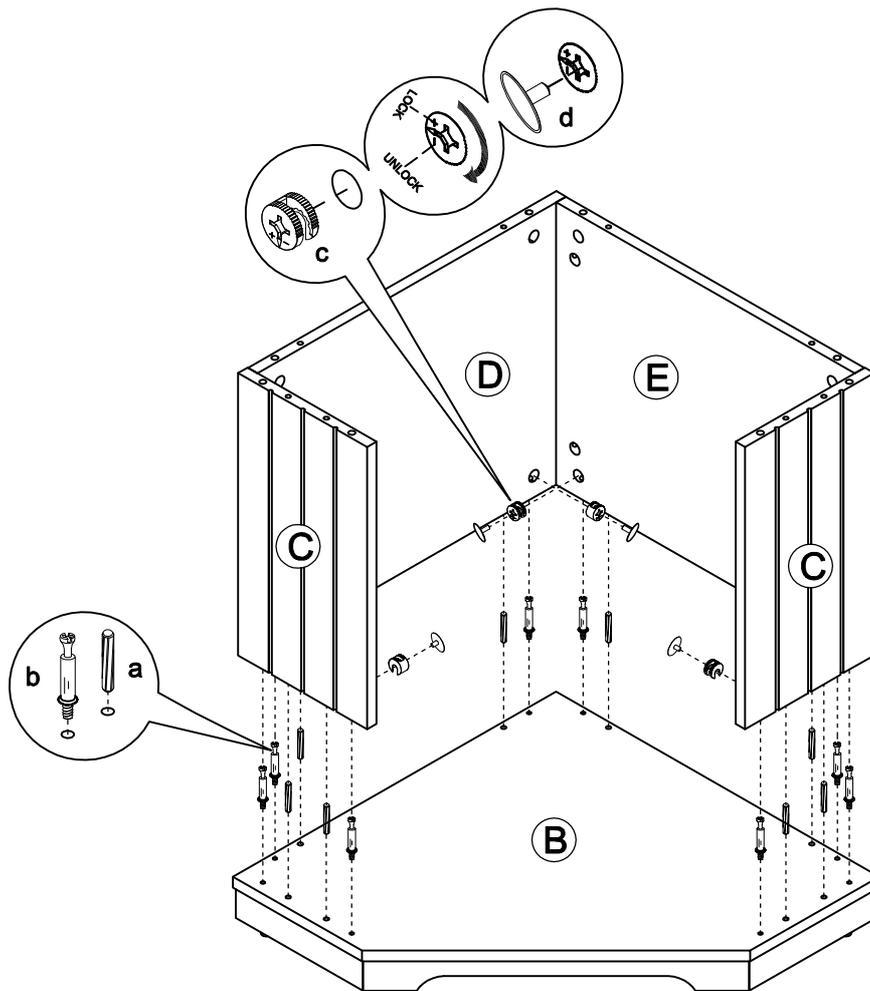


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (B).
- JOIN THE LEFT SIDE PANEL (D) THE RIGHT SIDE PANEL (E) AND THE FRONT PANEL (C) TO THE BOTTOM PANEL (B) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 4

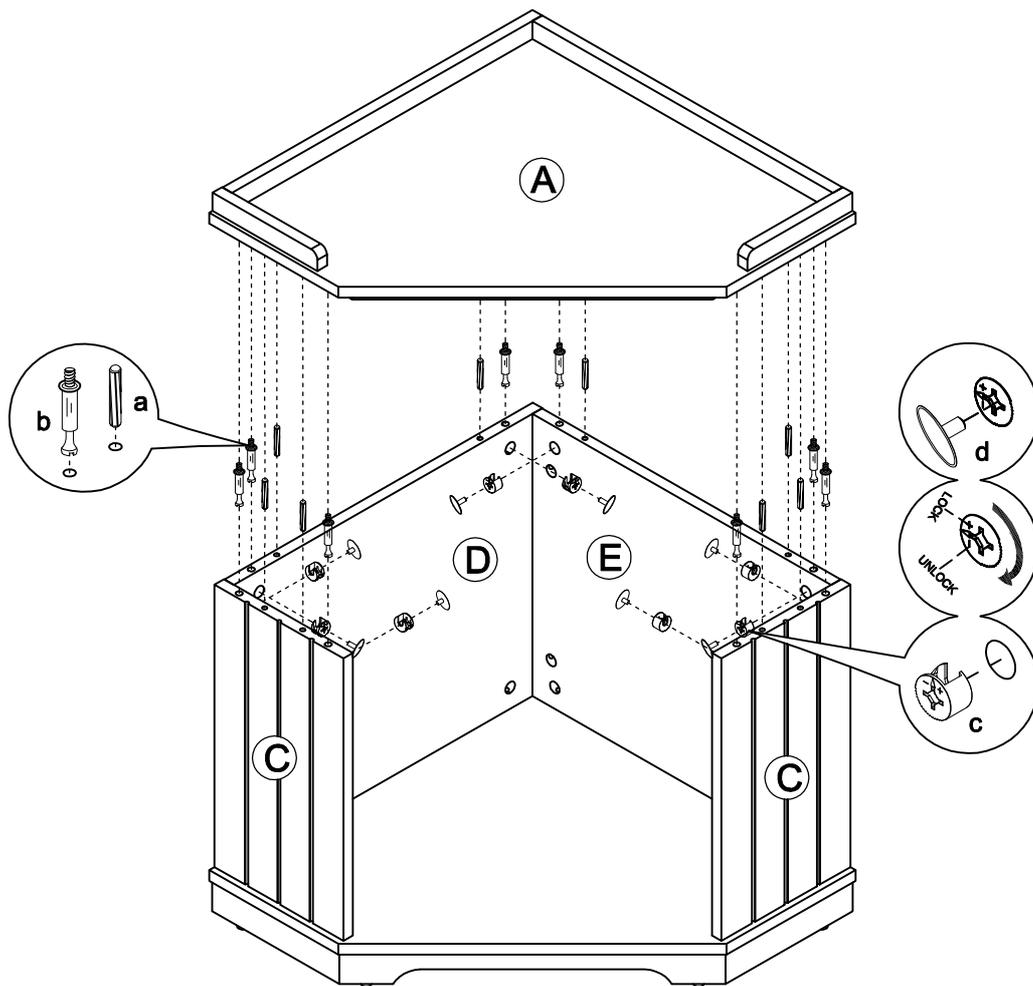


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE LEFT SIDE PANEL (D) THE RIGHT SIDE PANEL (E) AND THE FRONT PANEL (C) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 5

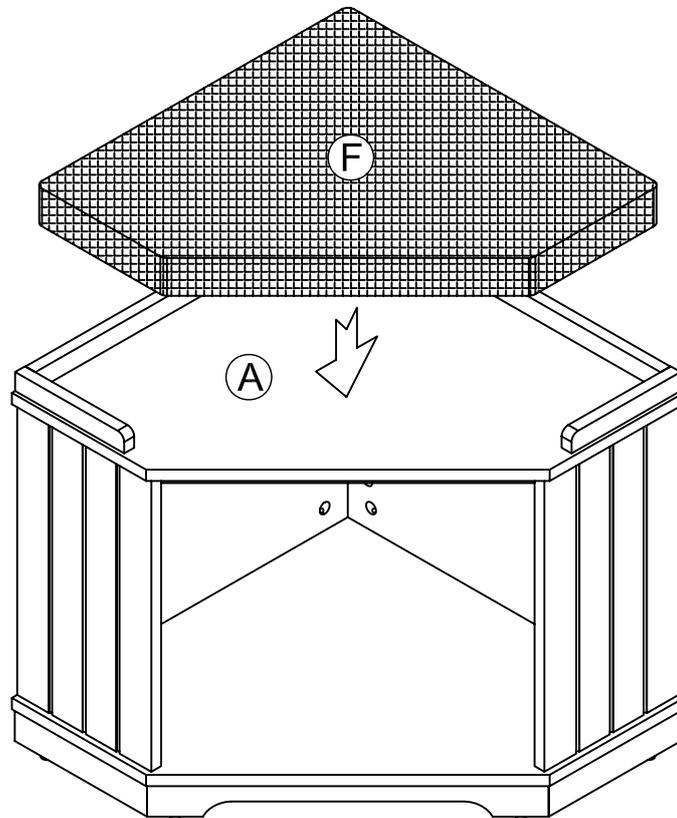


- PLACE THE CUSHION (F) ONTO THE TOP PANEL (A).

FIG 6

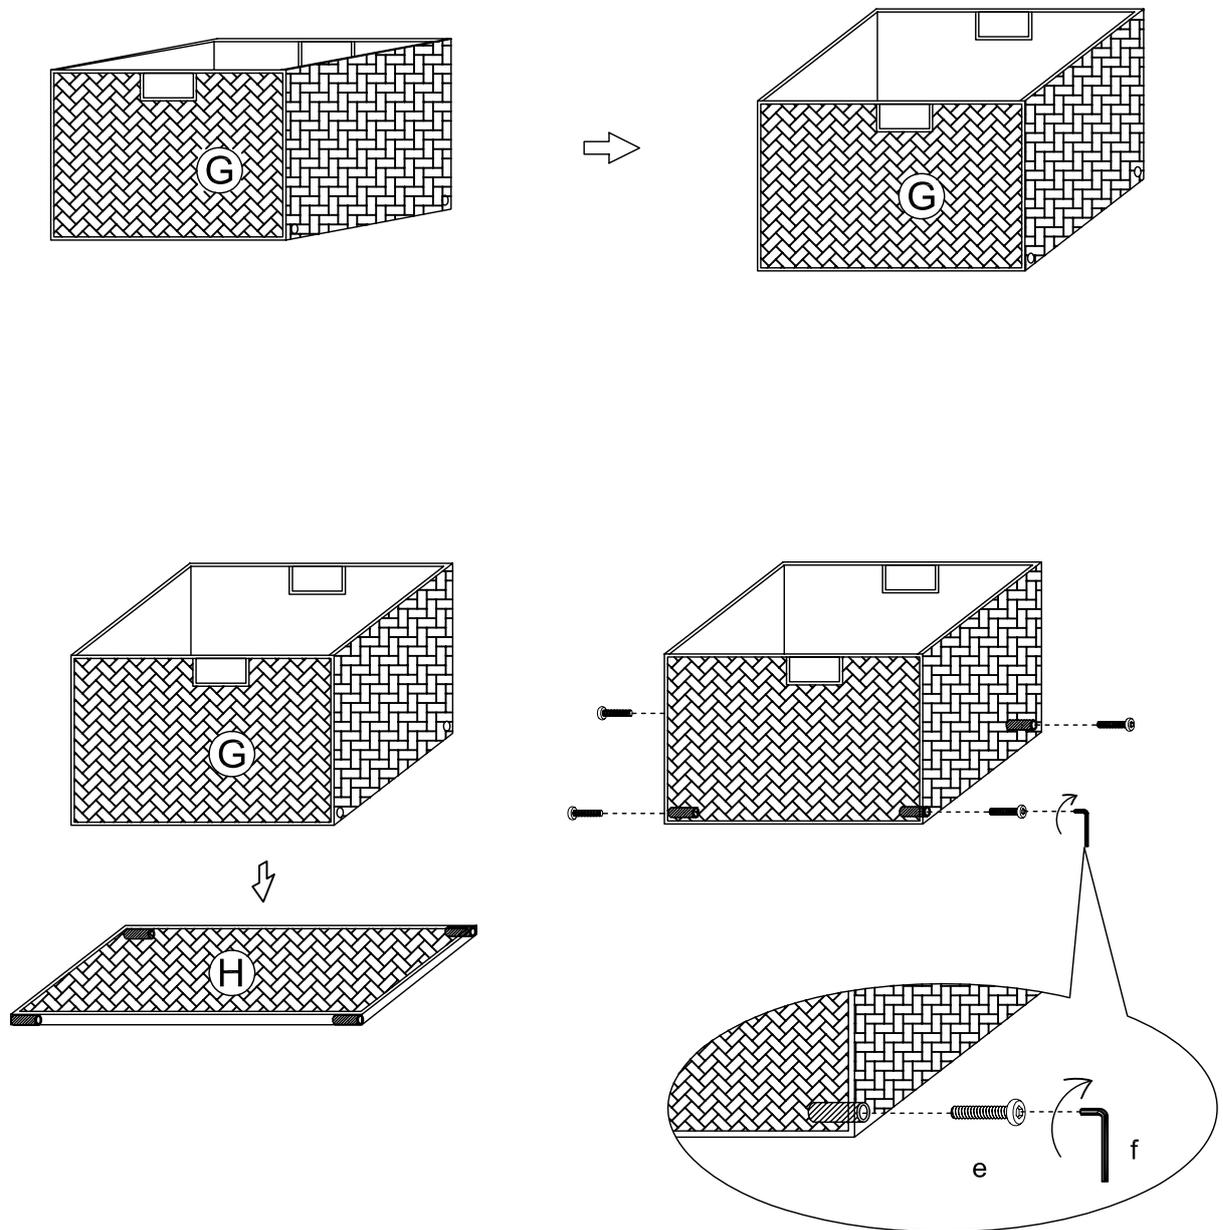

- ATTACH THE BASKET BOTTOM (H) TO THE BASKET BODY (G) AS SHOWN. TIGHTEN BOLT(e) BY HAND INNITIANLLY TO ENSURE ALIGNED, THEN TIGHTEN FULLY WITH ALLEN WRENCH (f).

FIG 7

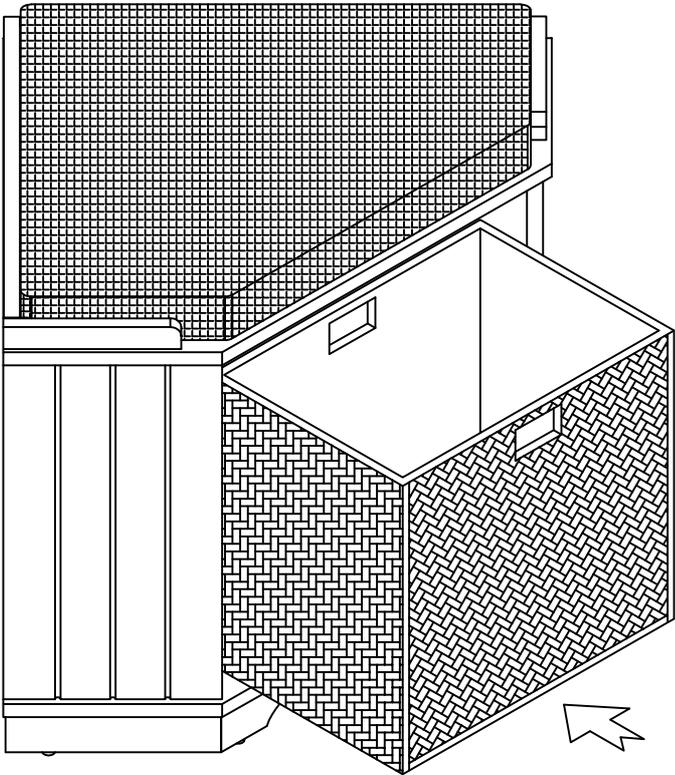

- INSERT BASKET INTO THE ASSEMBLED PART.