


Installation Instructions, Osco Truss System

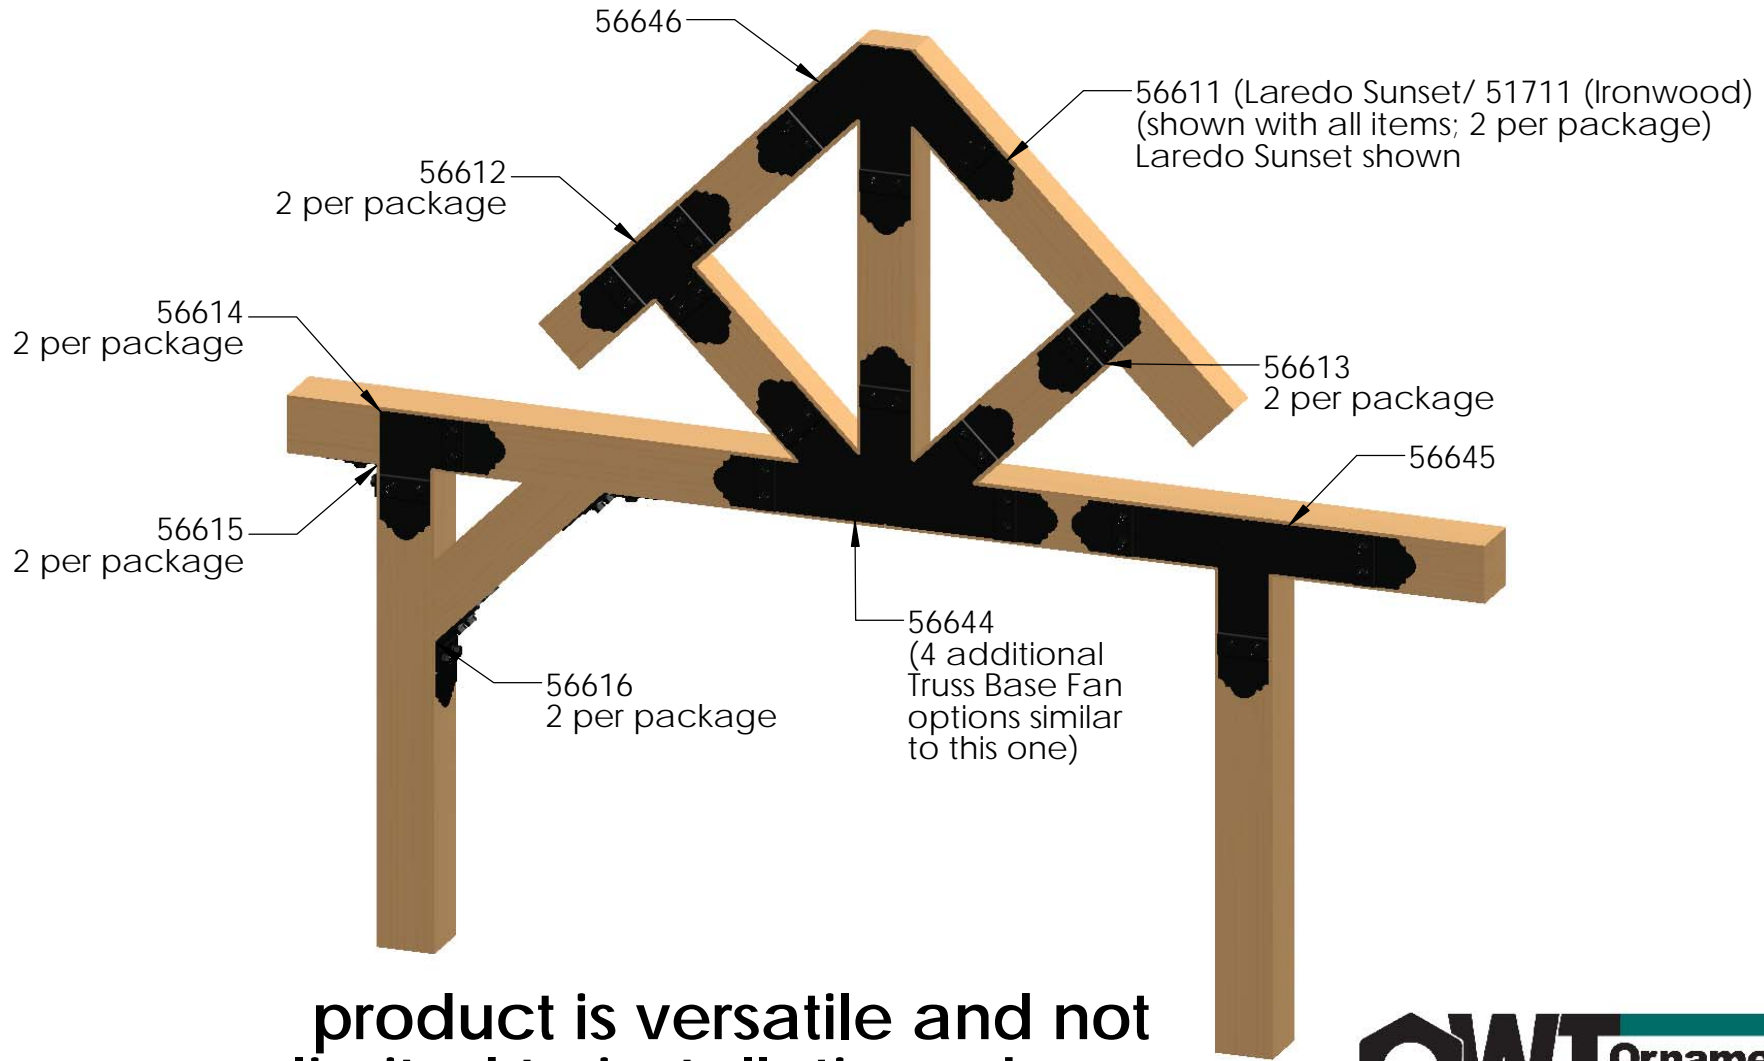


product is versatile and not limited to installations shown





Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

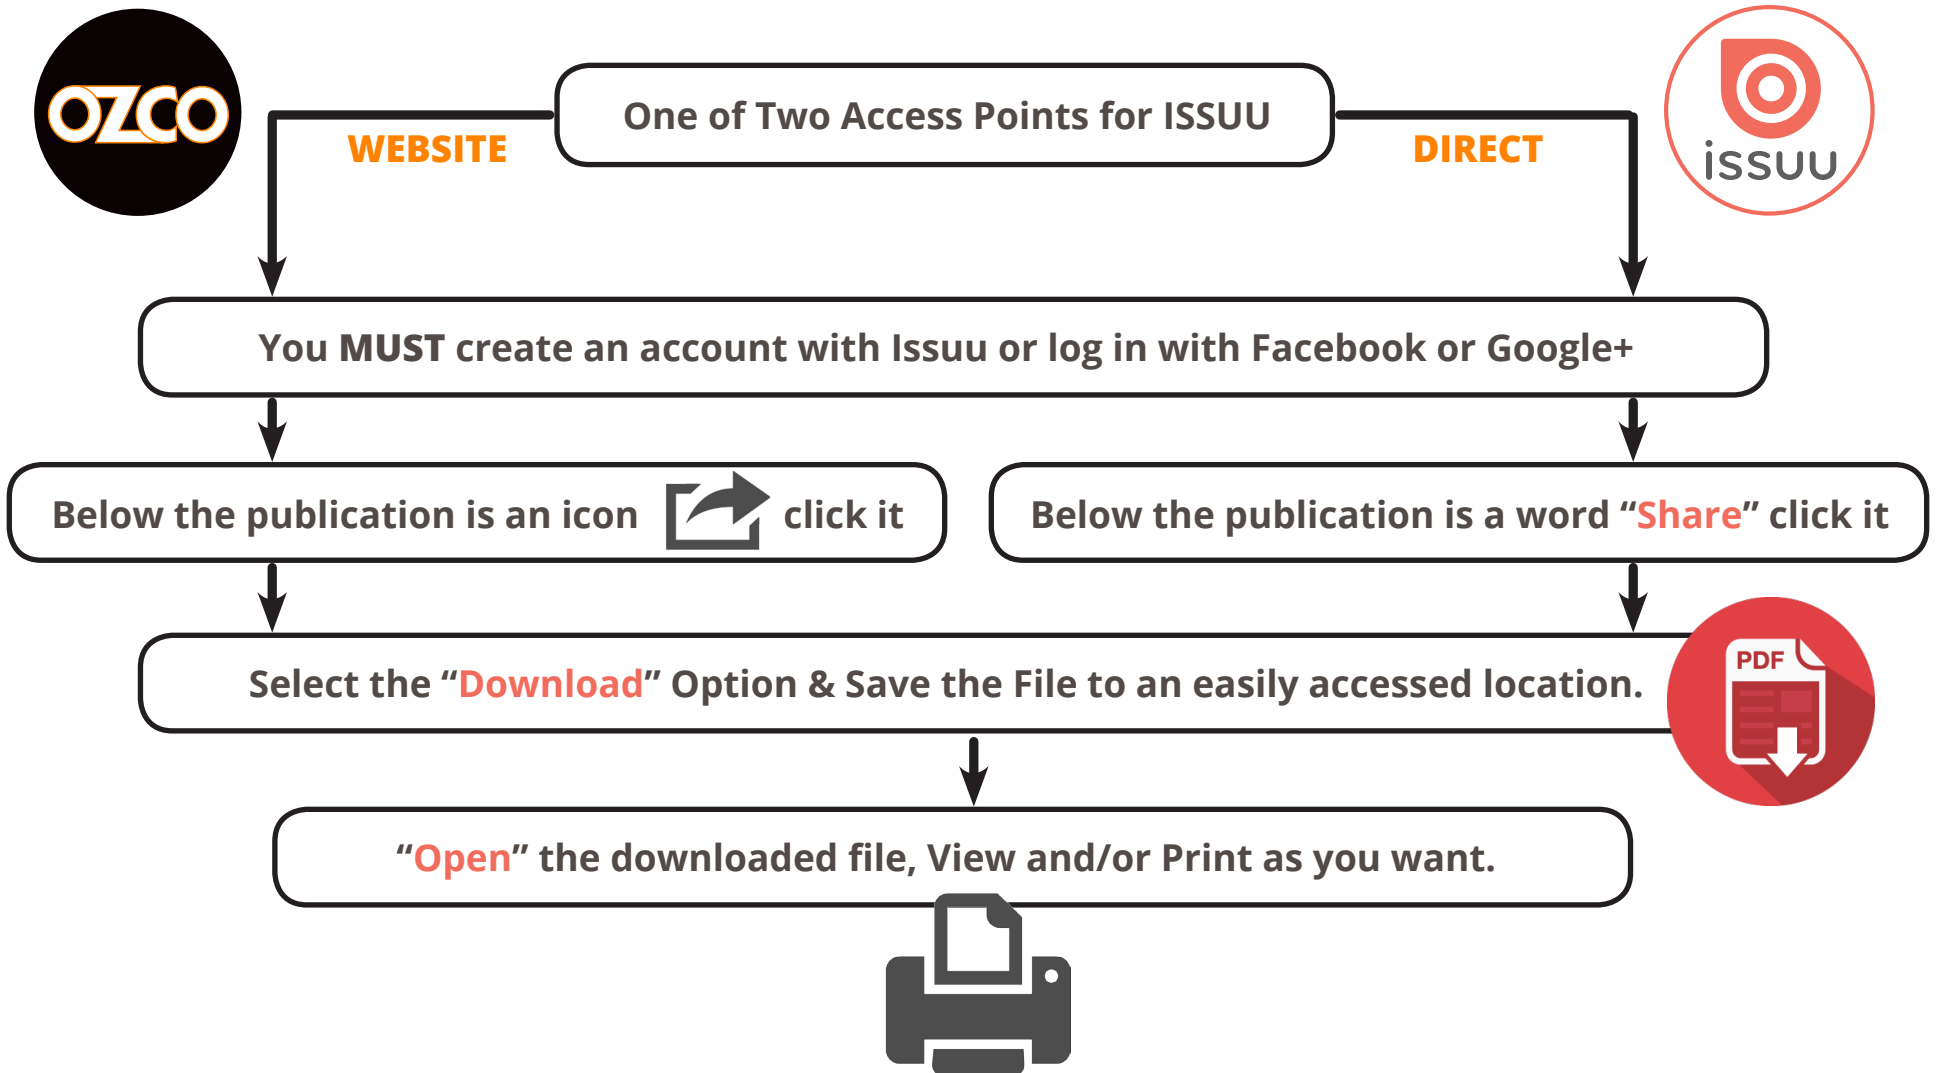

Laredo Sunset


vs.

Ironwood



Ironwood
(517XX series)

2 great styles
same functionality

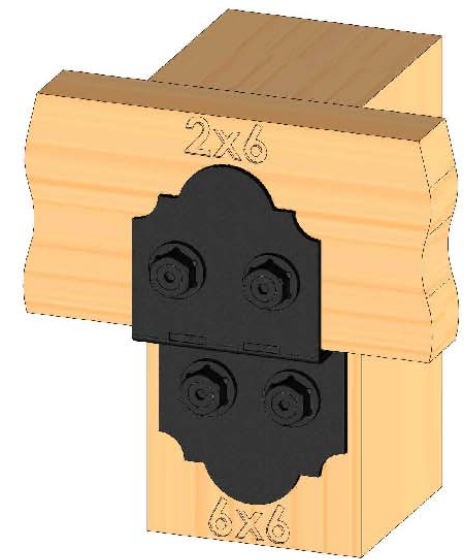

Laredo Sunset
(566XX series)


choose your connection lifestyle

both styles available for most products




OZCO BUILDING PRODUCTS

OWT Timber Bolt

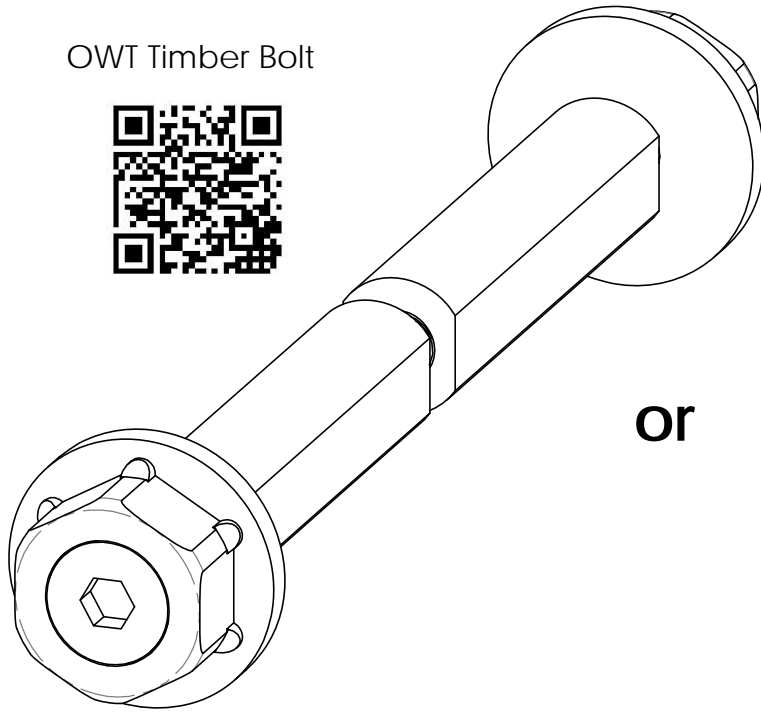


or

OWT Timber Screw

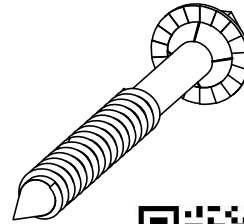

Timber Bolt mounting hole
Timber Screw mounting hole

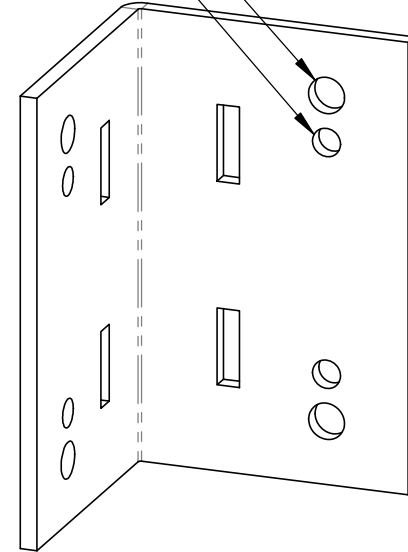


Reference 56615
(all Truss product has both mounting holes)

Fasteners purchased separately.


Must be selected based on length and strength requirements
product pages will show both options to assist with selection

Fasteners


Installation Instructions, Osco Truss System

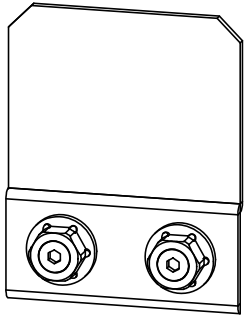


51711
(accessory)
2 per package
to be used with all
Truss brackets

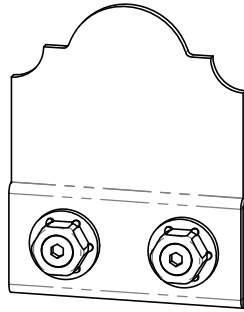


56611
(accessory)
2 per package
to be used with all
Truss brackets

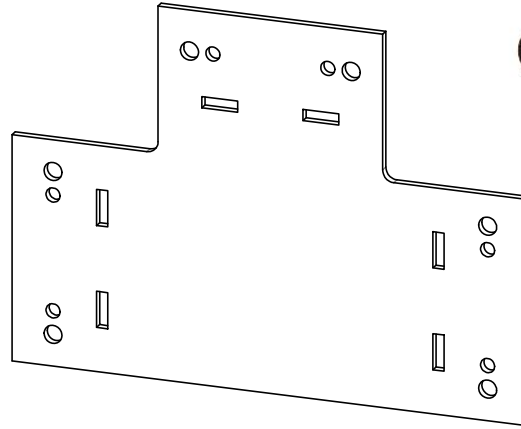


56612
2 per package

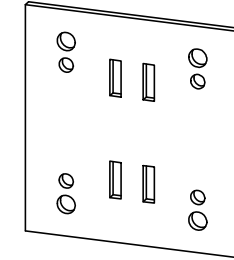


56613
2 per package

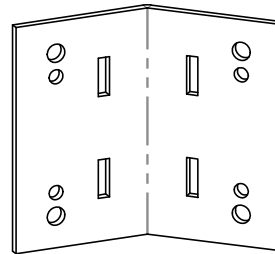


56616
2 per package

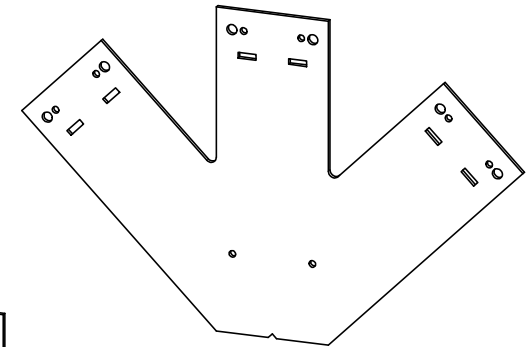


56646

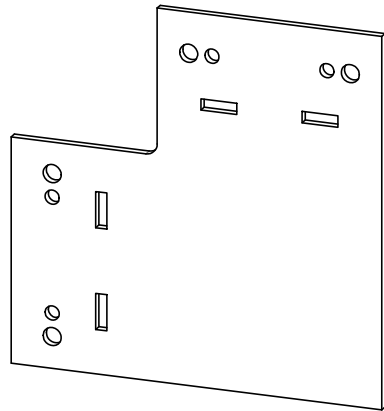

56614
2 per package

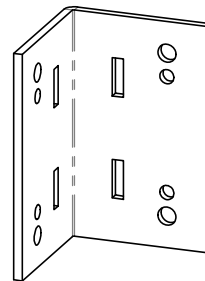

56615
2 per package

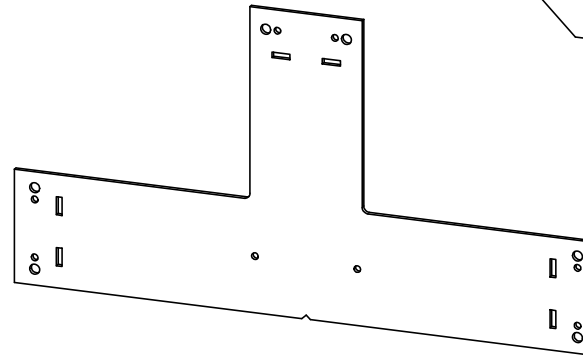


56645


Truss Ties & Accent

Installation Instructions, Osco Truss System


56619
8:12 Truss Base Fan
(TBF-8-12)

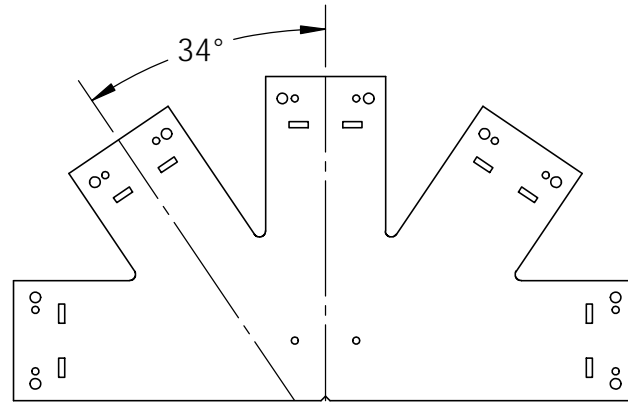


56620
10:12 Truss Base Fan
(TBF-10-12)

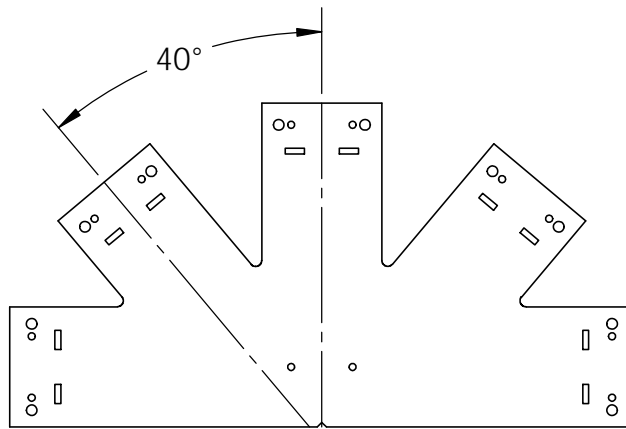


56642
4:12 Truss Base Fan
(TBF-4-12)

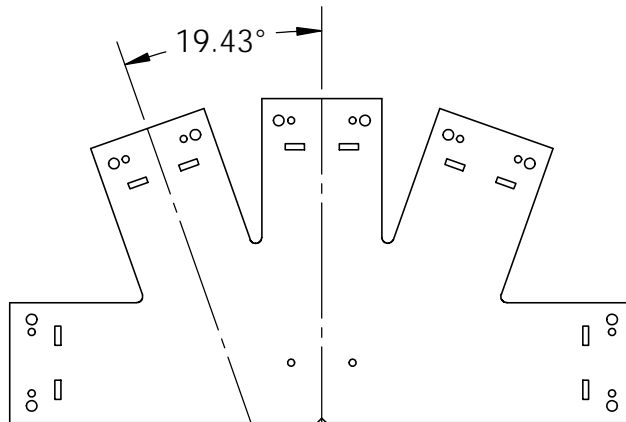

56643
6:12 Truss Base Fan
(TBF-6-12)

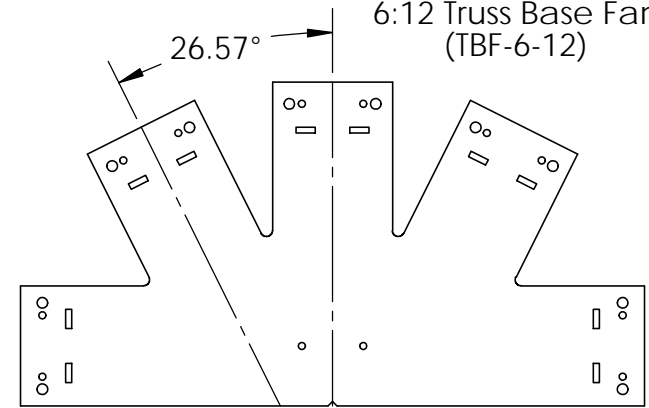


56644
12:12 Truss Base Fan
(TBF-12-12)

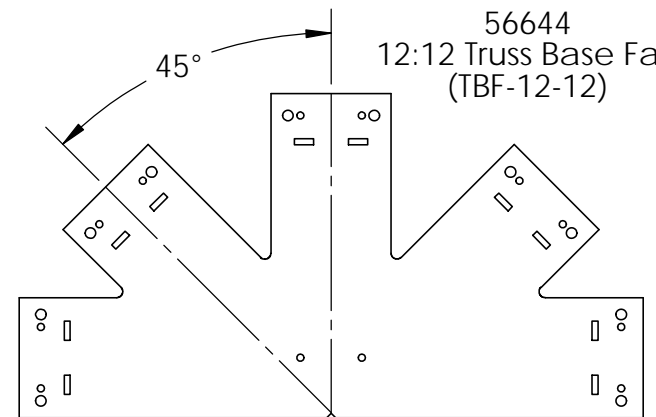


Truss Base Fan


Installation Instructions, Osco Truss System

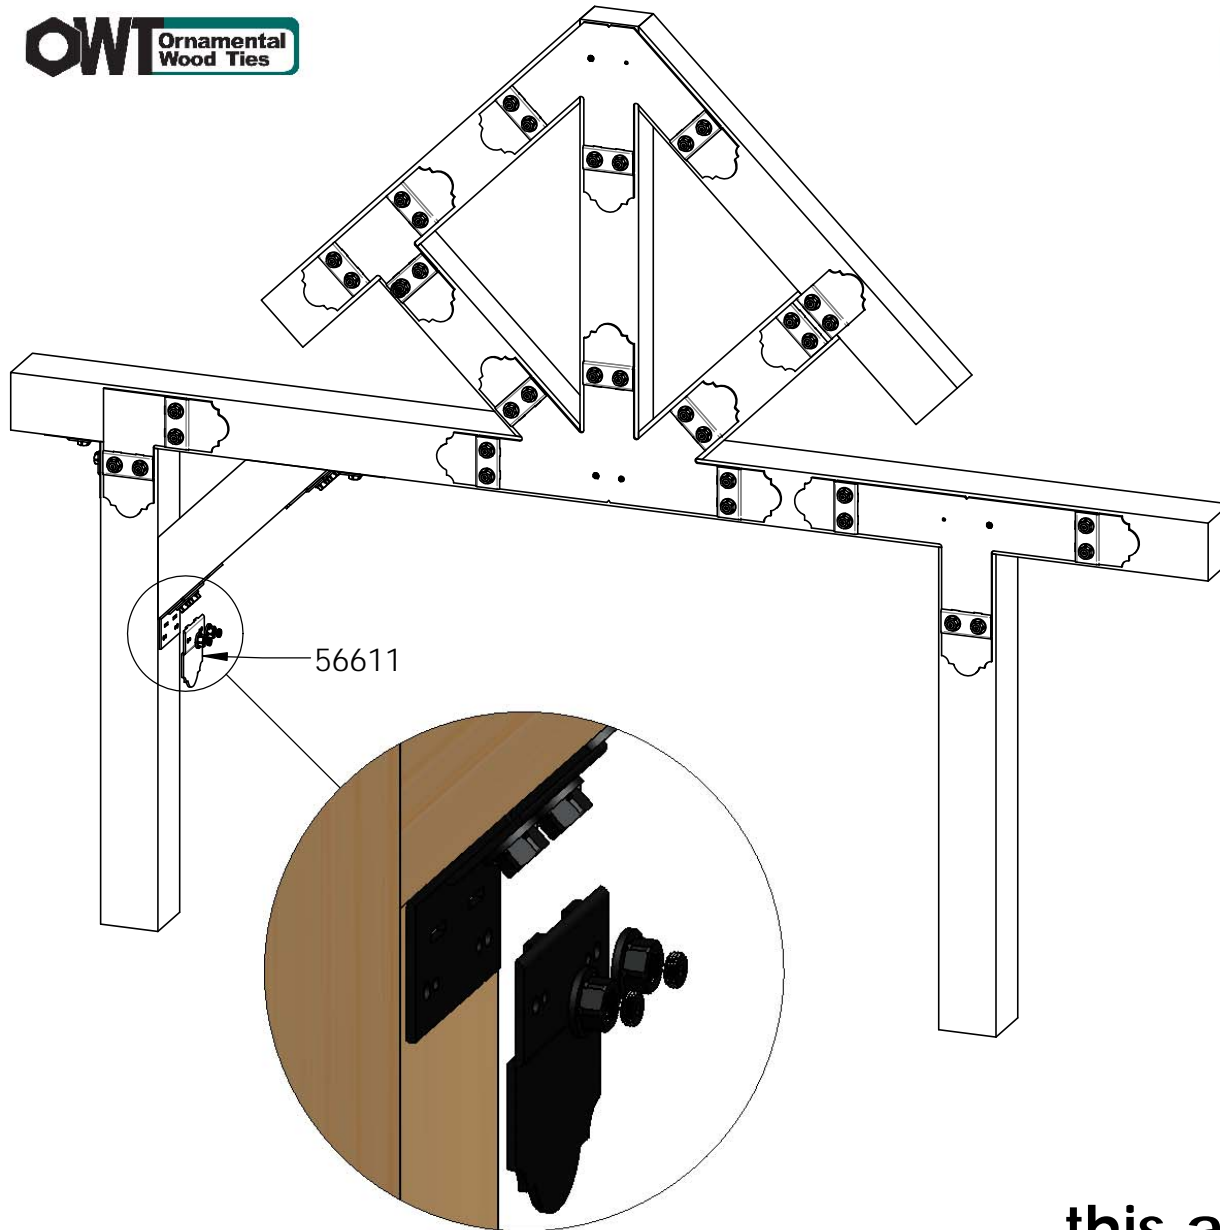

56611

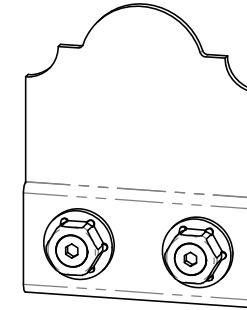


56611
(accessory)
2 per package
to be used with all
Truss brackets

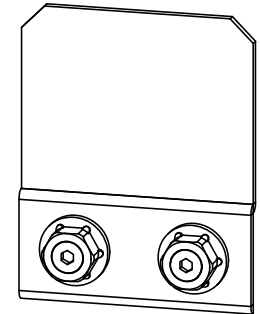

51711
(accessory)
2 per package
to be used with all
Truss brackets

Fasteners not shown.

Fasteners from brackets will be utilized

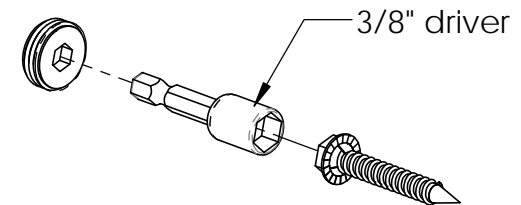



3/8" driver

**this accessory compliments
all Ozco Truss brackets**
(shown installed on all)


56611

Installation Instructions, Osco Truss System

56614

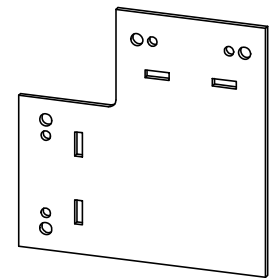
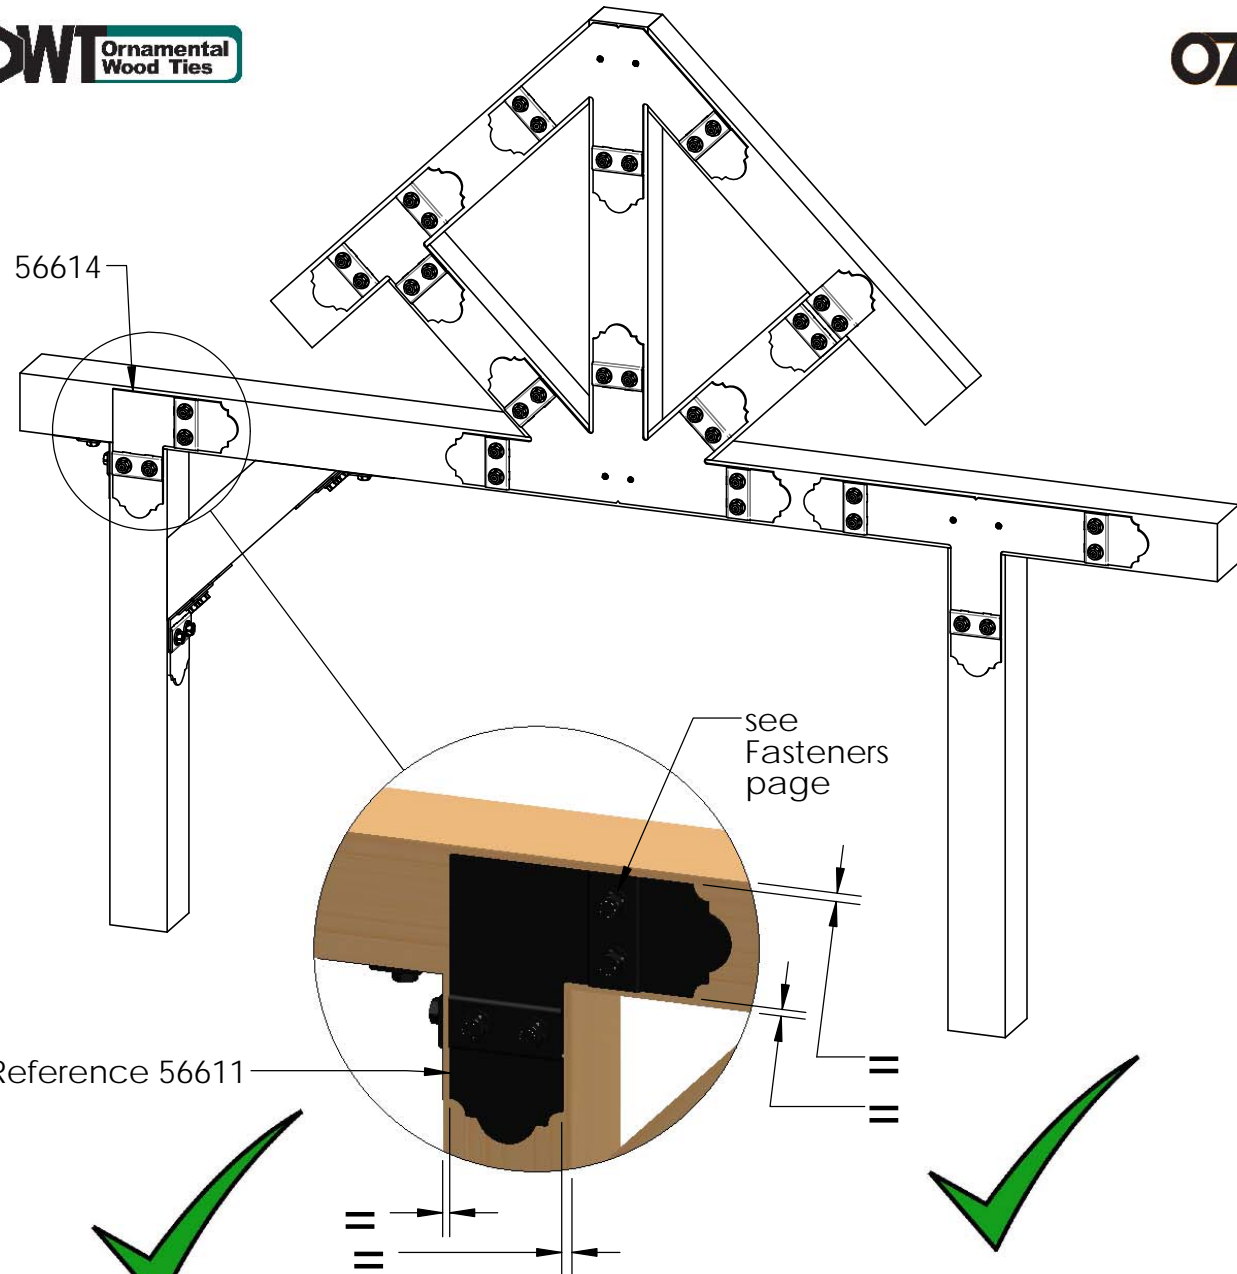


56614
2 per package

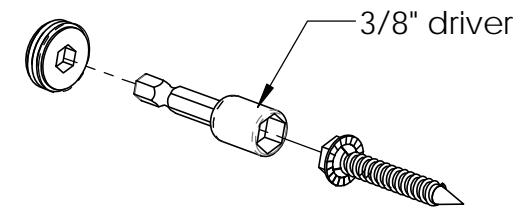


56614

Installation Instructions, Osco Truss System

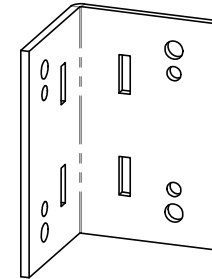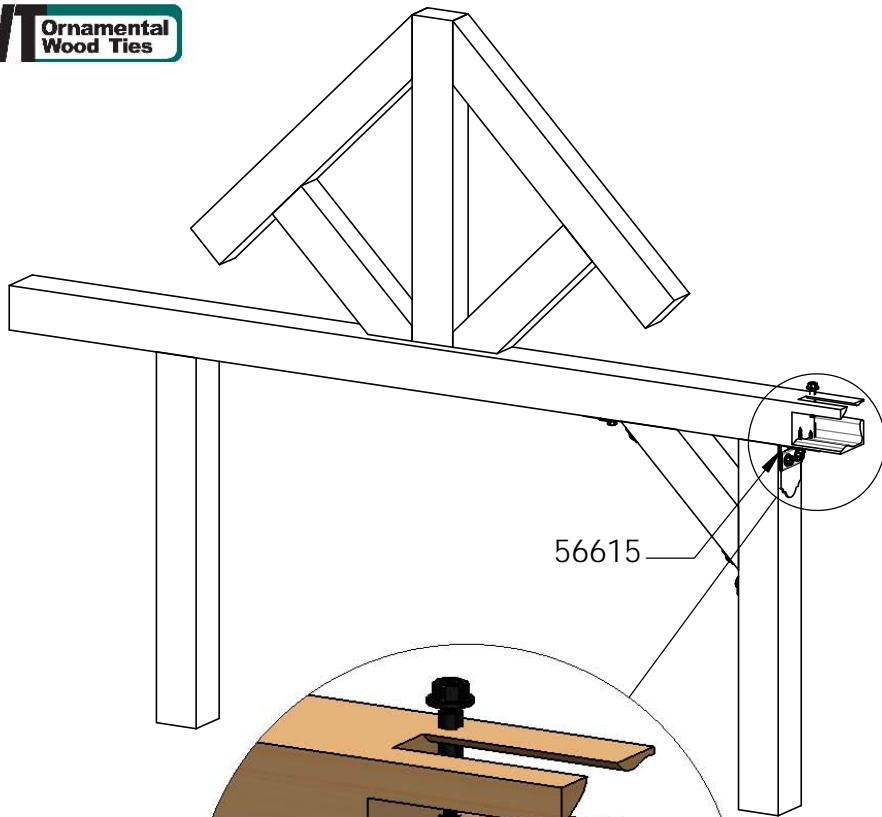


56615
2 per package

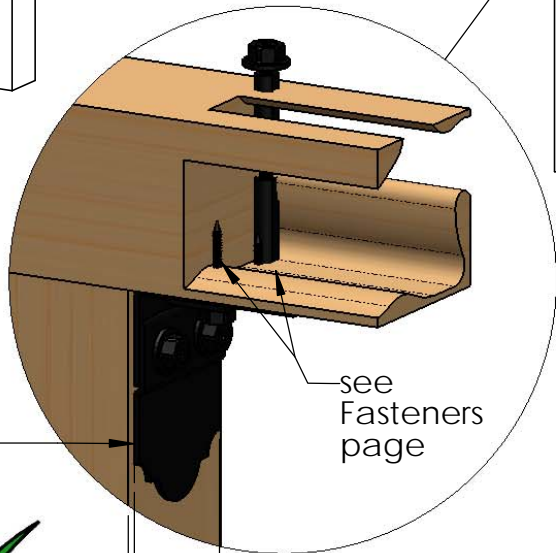



Reference 56611

same spacing
on other end

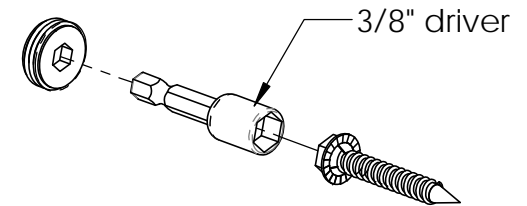


56615

Installation Instructions, Osco Truss System

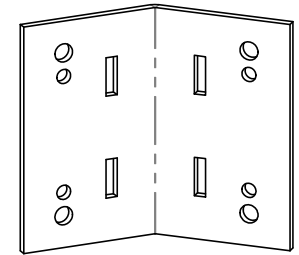
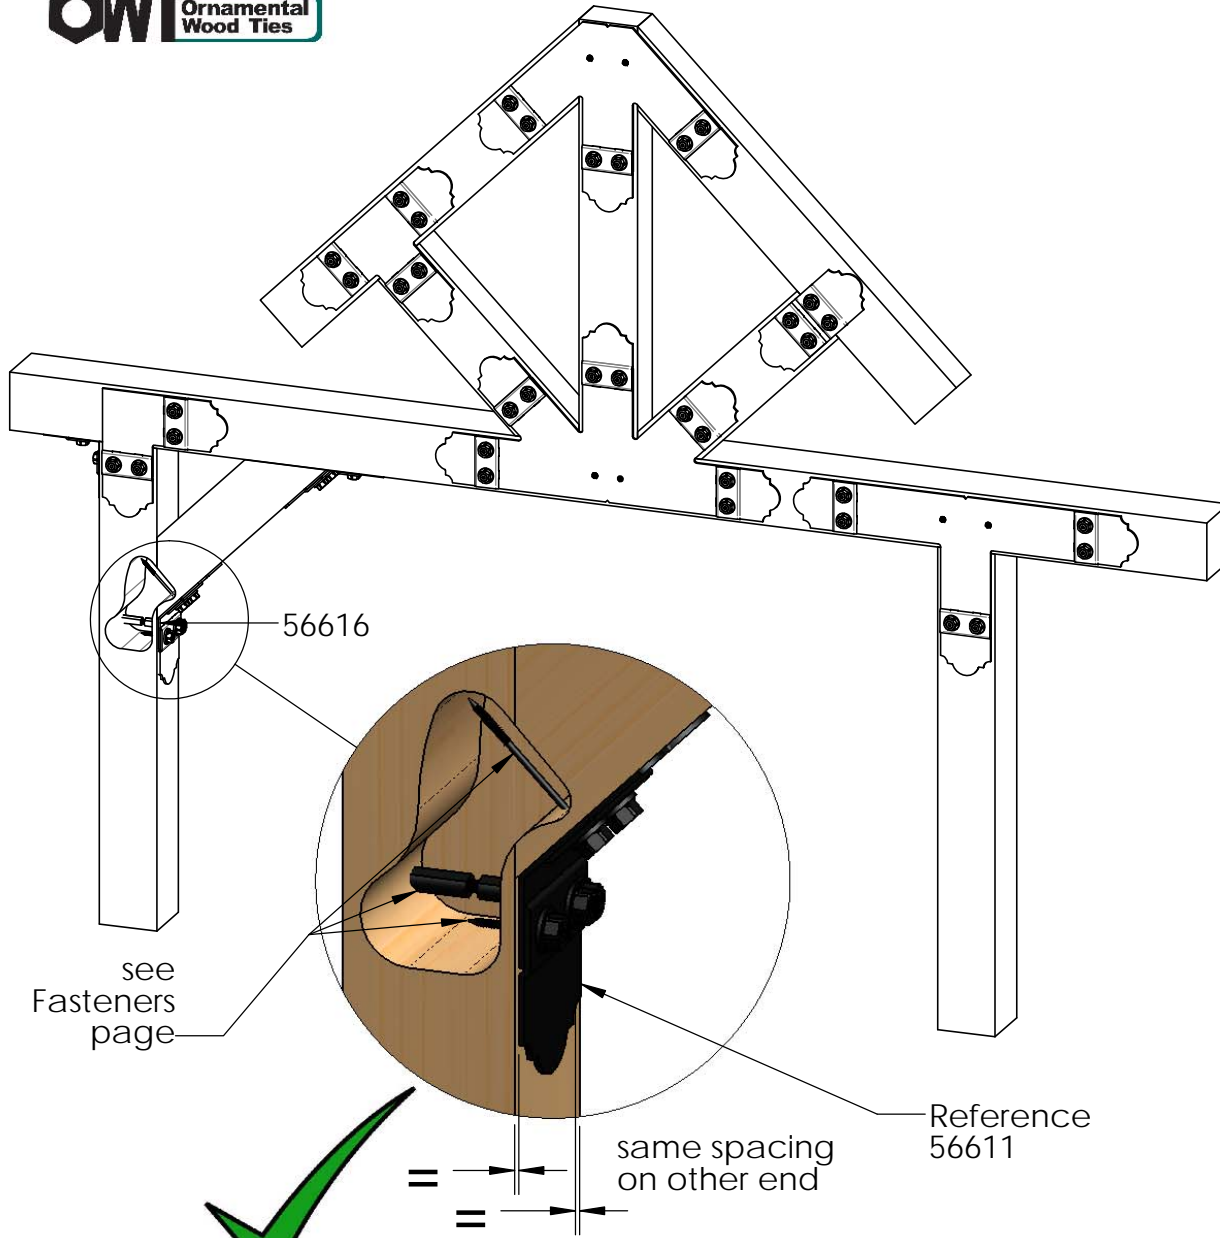


56616
2 per package

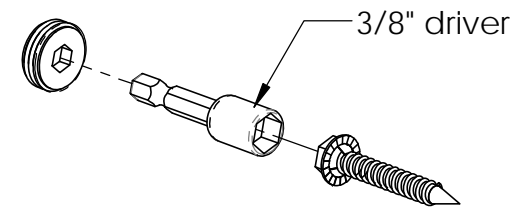


56616

Installation Instructions, Osco Truss System

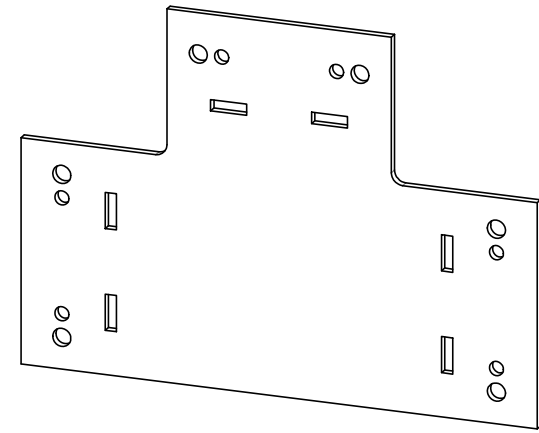
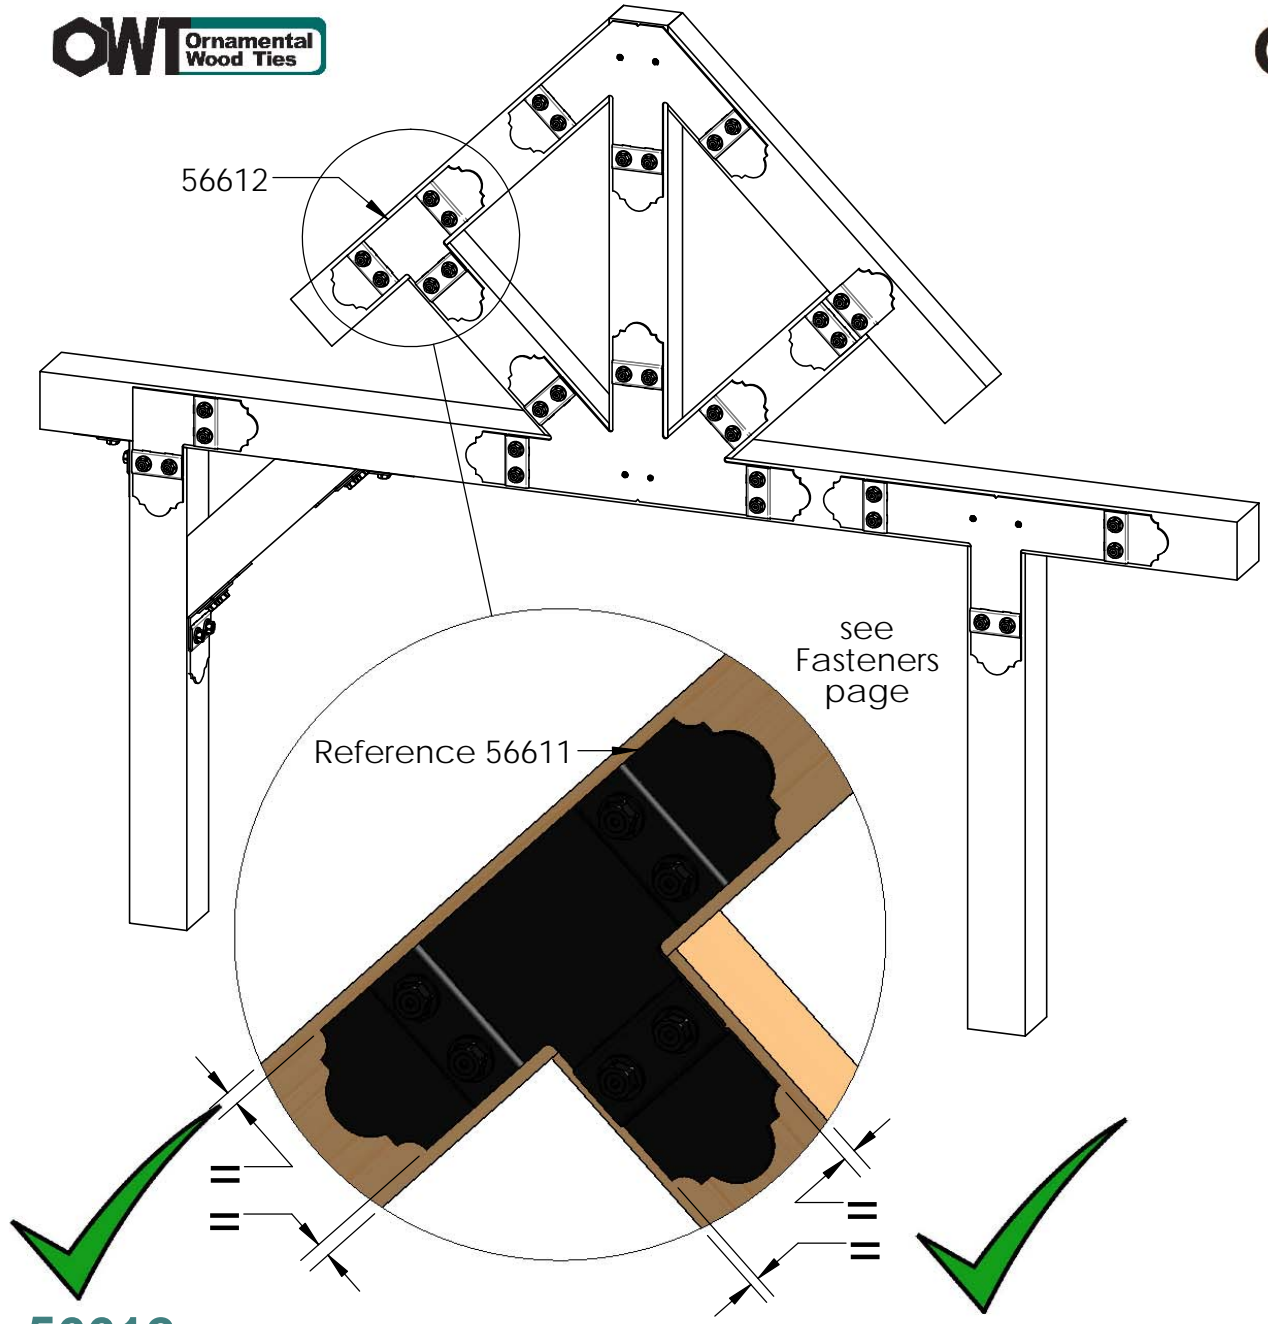


56612
2 per package

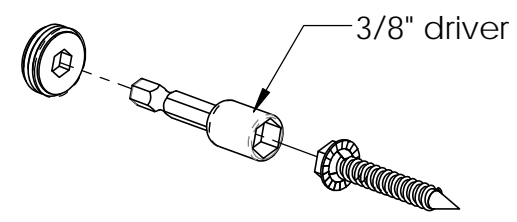


56612


Installation Instructions, Osco Truss System

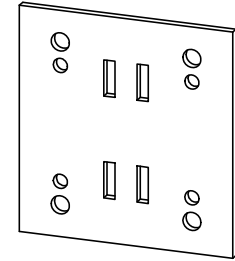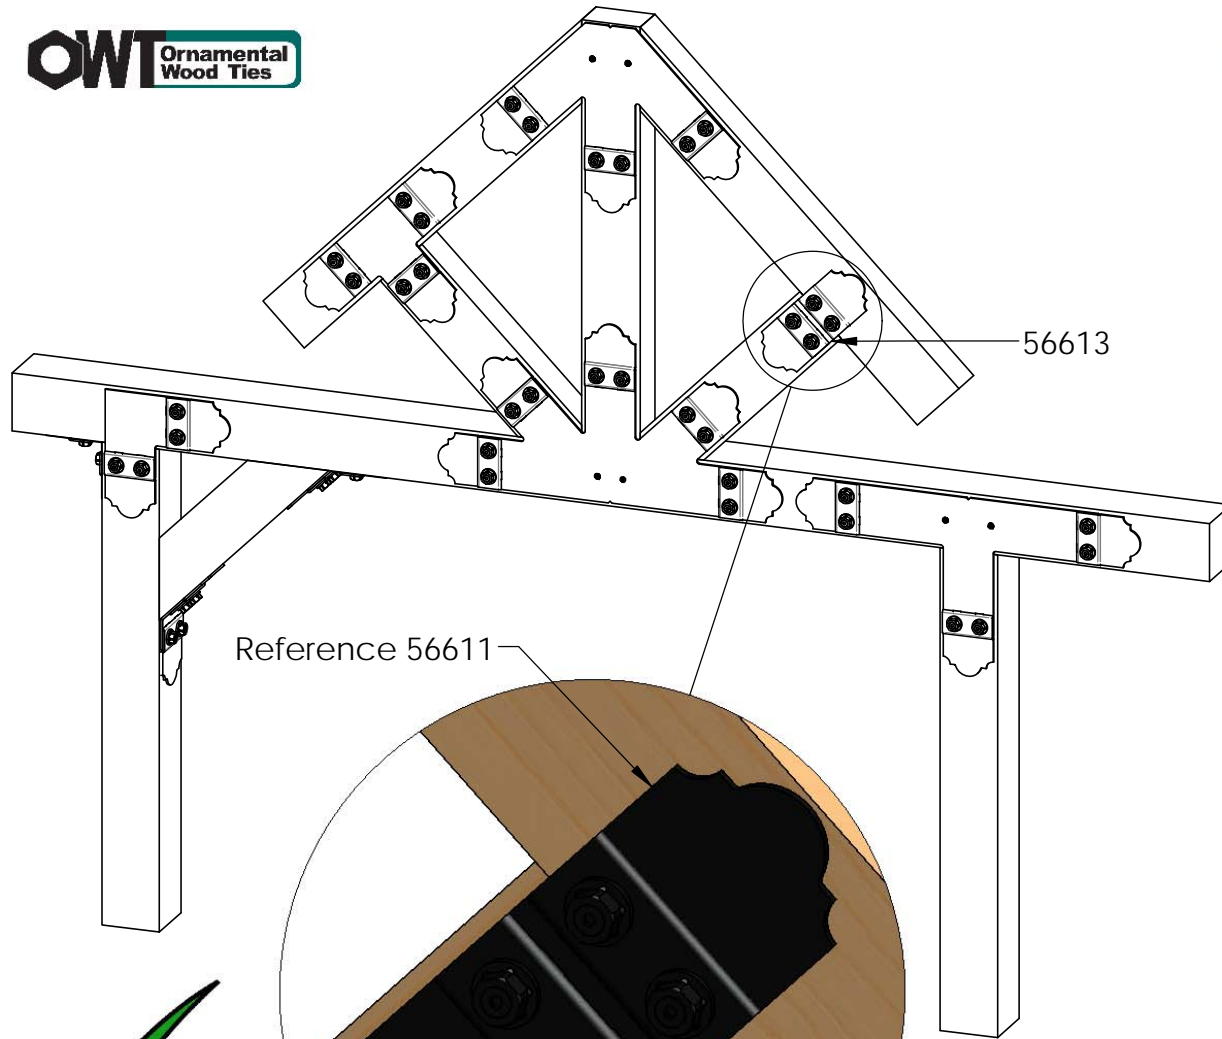

56613
2 per package


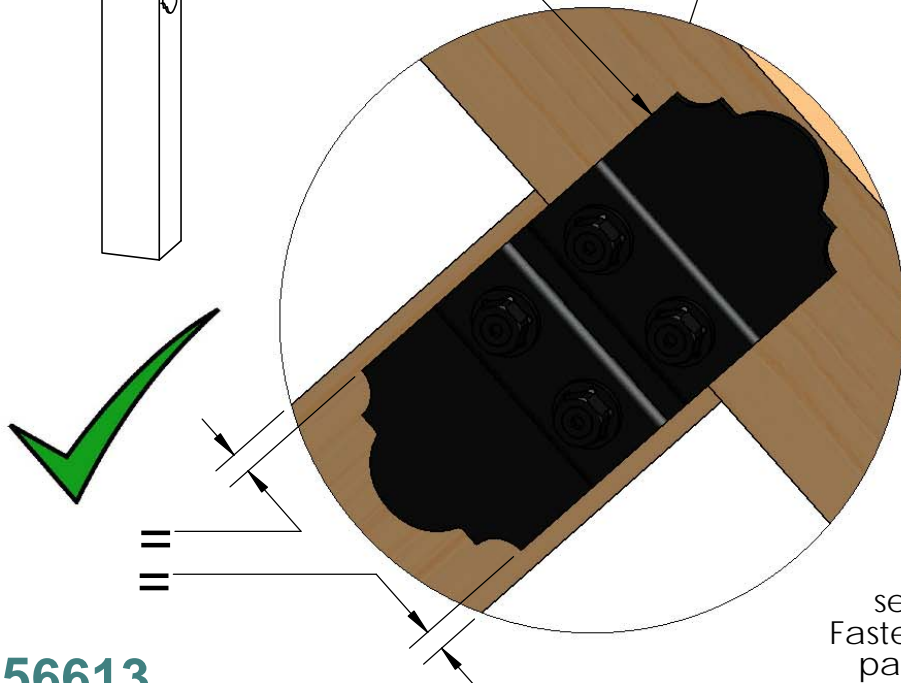


see
Fasteners
page


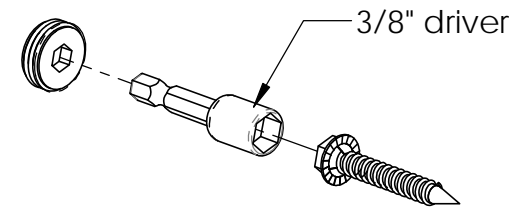


56613

Installation Instructions, Osco Truss System

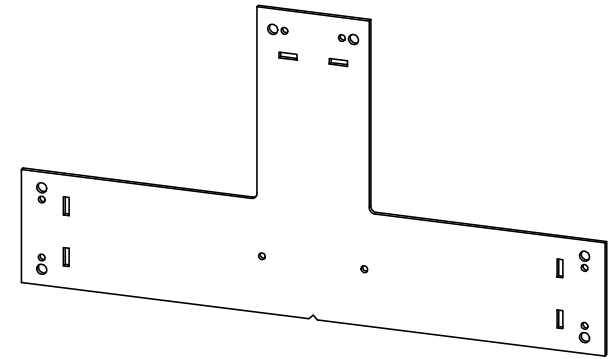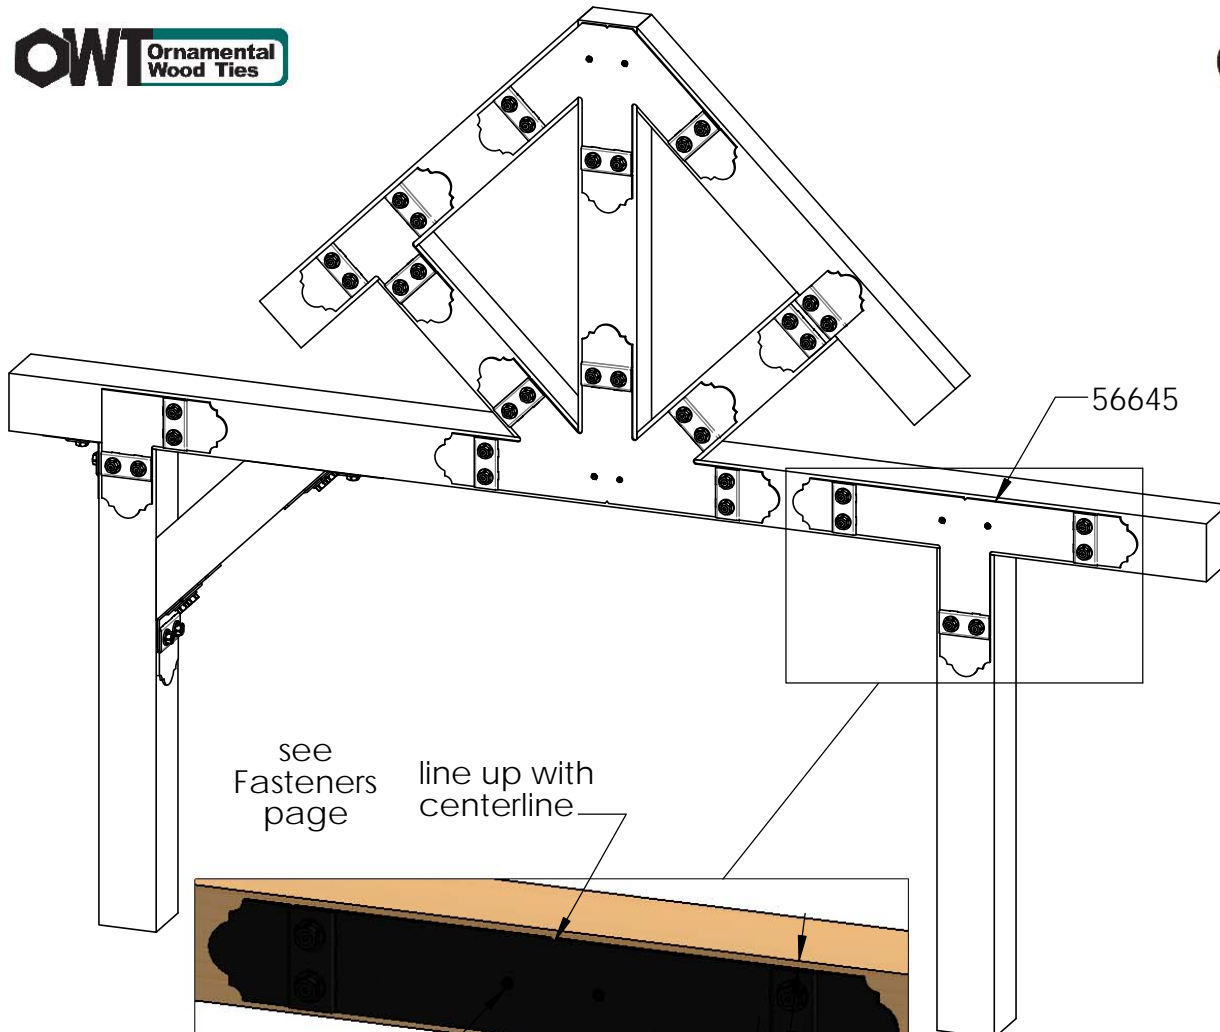

56645

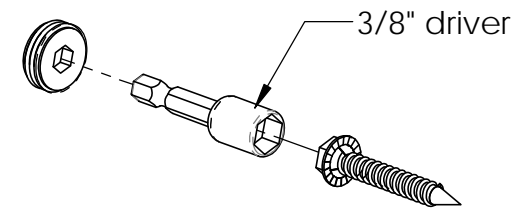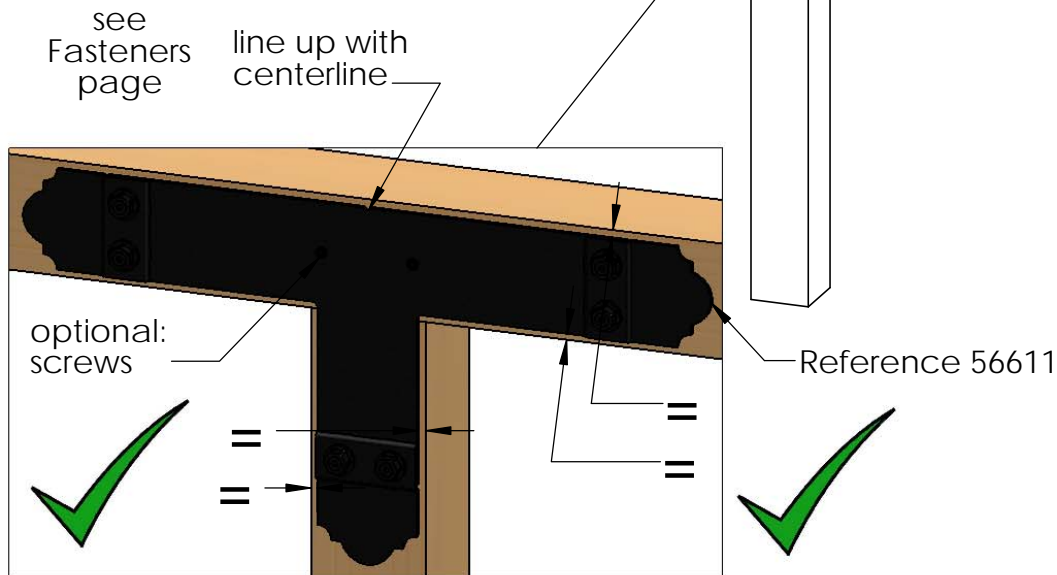


3/8" driver

56645


Installation Instructions, Osco Truss System

56646

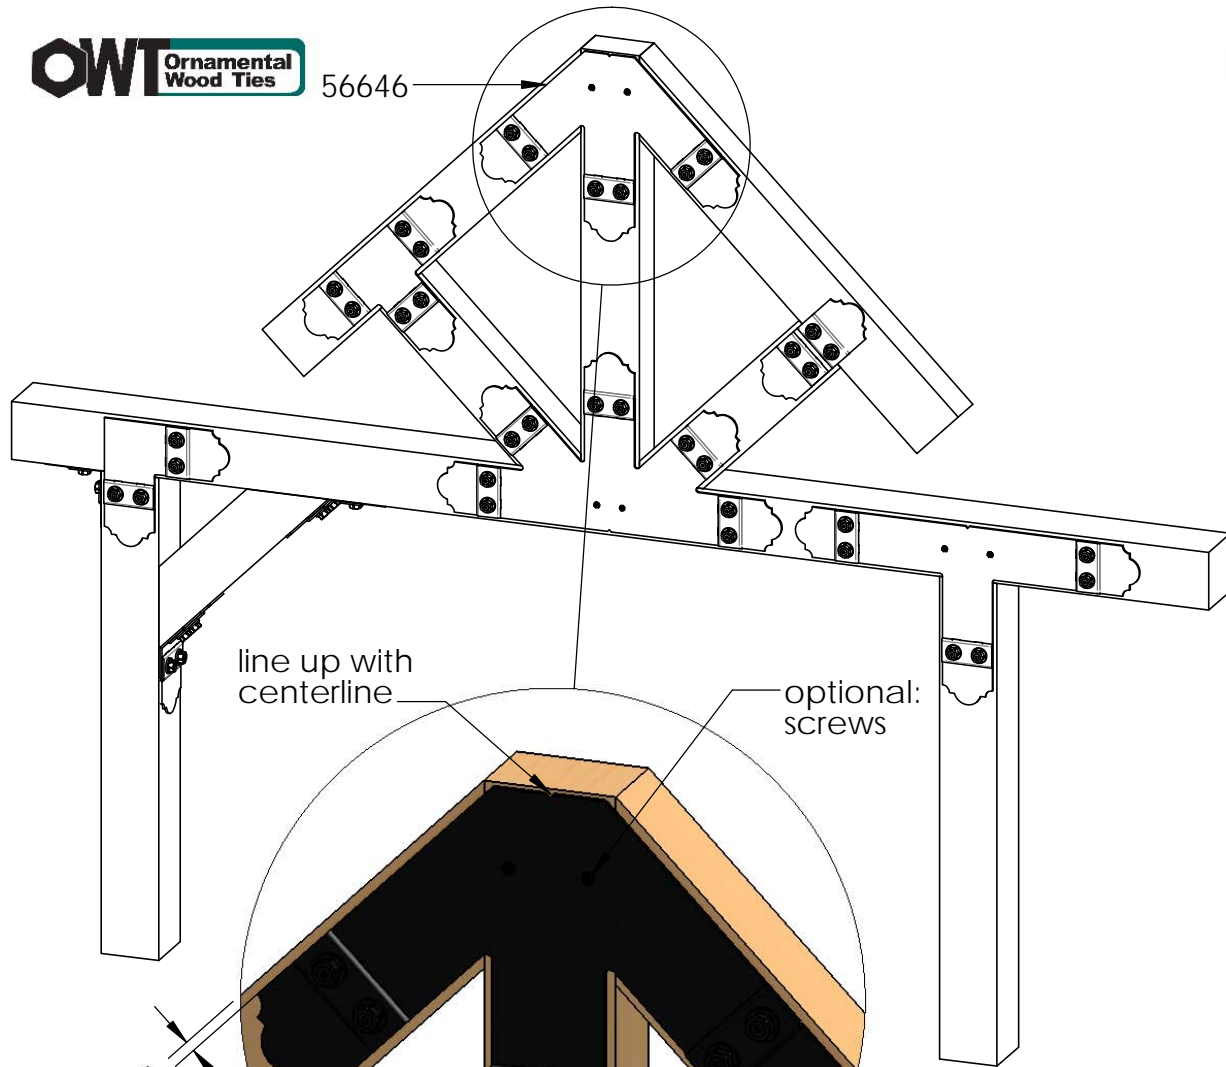


line up with centerline

optional: screws

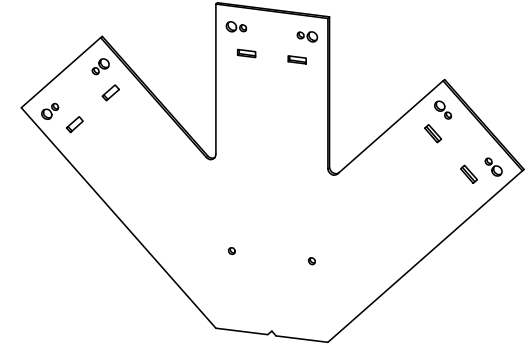

56646
(shown installed inverted)

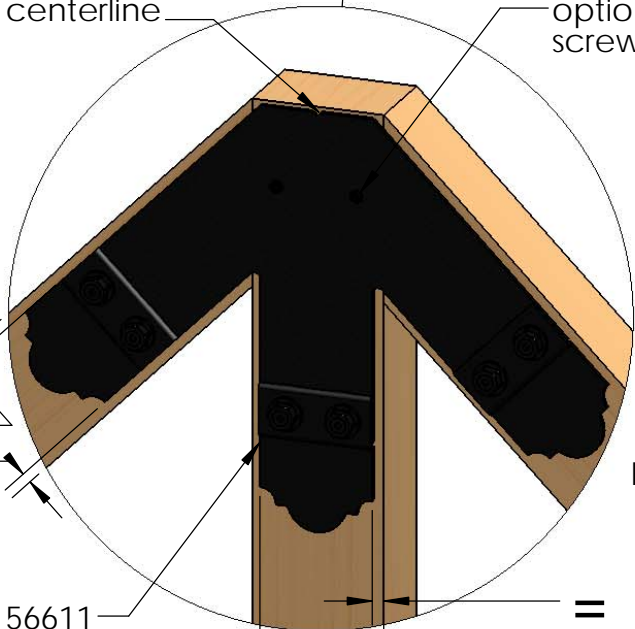


see Fasteners page








Reference 56611

56646

Installation Instructions, Osco Truss System

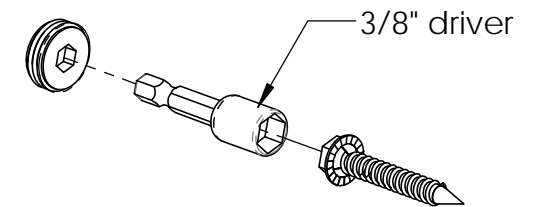

3/8" driver

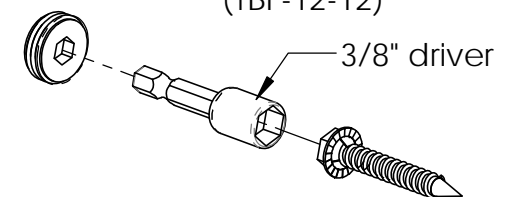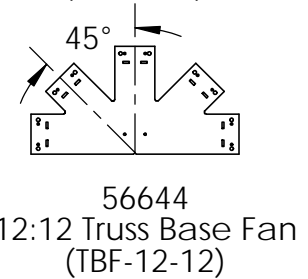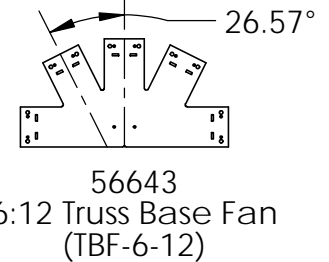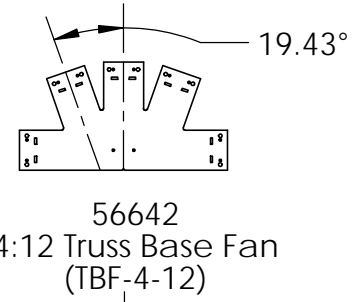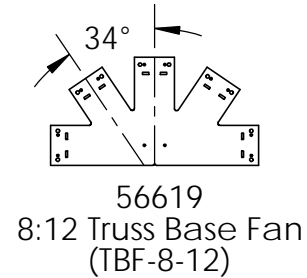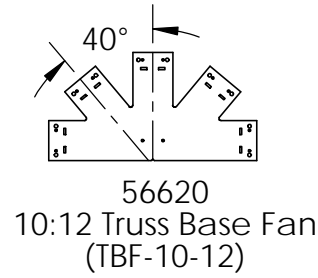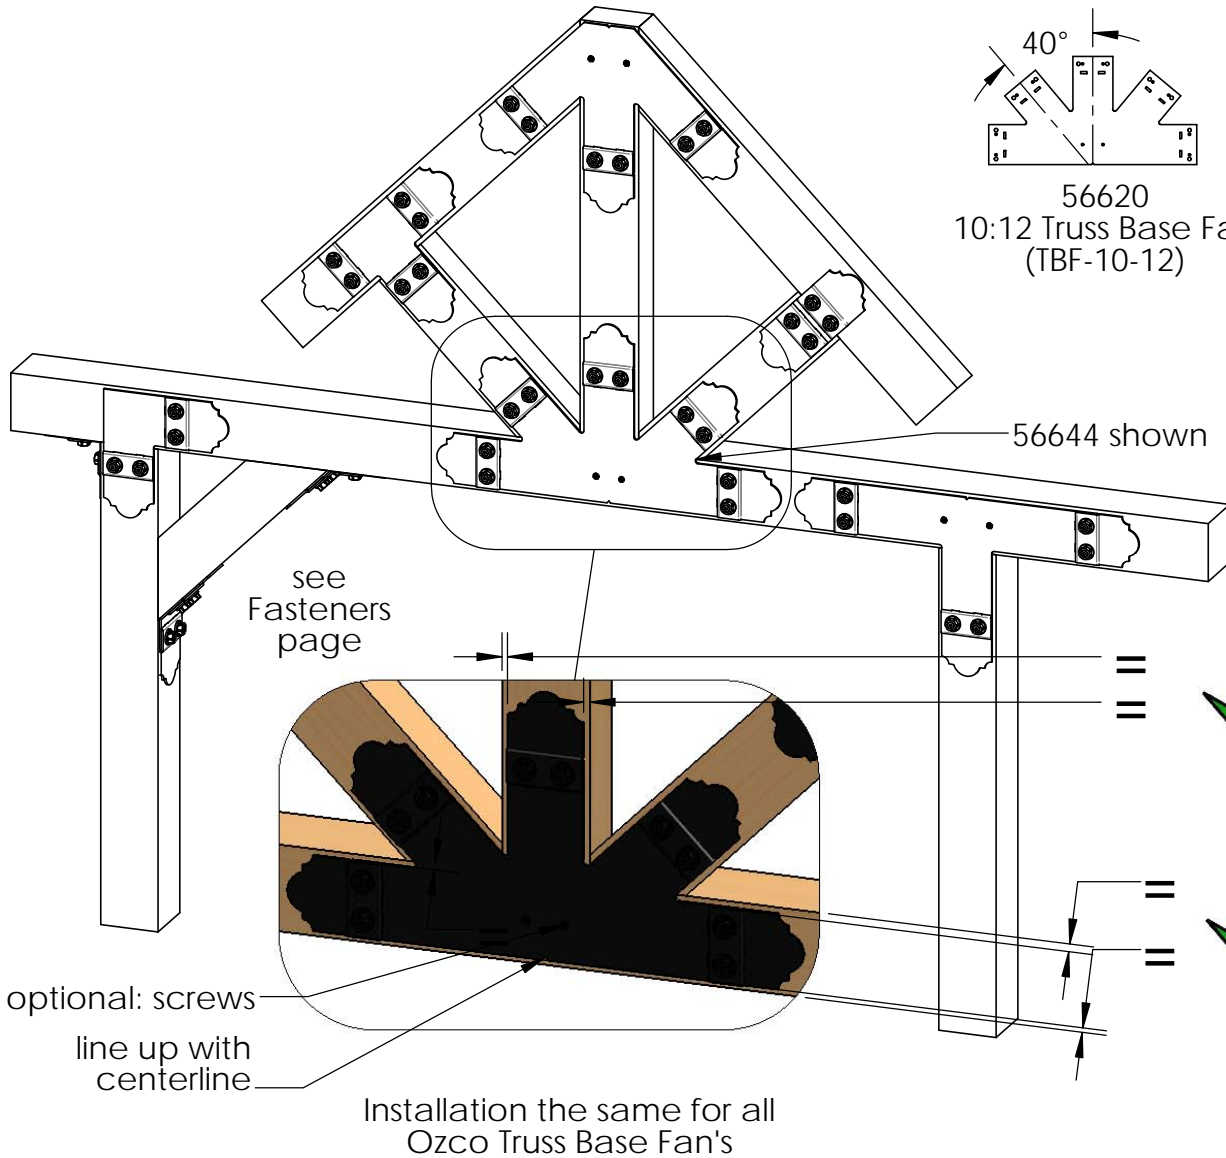

Truss Base Fan

Installation Instructions, Ozco Truss System