## **CARE AND MAINTENANCE**

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

## **NOTICE**

- \* Please make sure all parts are included before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## **Parts List and Hardware List**

ID	PICTURE & DESCRIPTION		Q.tys	ID	PICTURE & DESCRIPTION		Q.tys
Α		Table top	1X	I		Cushion seat	4X
В		Table legs	2X	M1	(I)	Screw Ø 7x120 mm	12X
С		Cross bar of table	1X	M2		Screw Ø 7x60 mm	10X
D	Left bench leg		2X	М3		Nuts Ø 6x13 mm	8X
E	R	tight bench leg	2X	M4	<b>@</b>	Bolts Ø 6x30 mm	8X
F		Backrest	2X	M5	<b>(4)</b>	Screw Ø 4x15 mm	4X
G		Seat	2X	М6	\ \(\)\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	ooden dowel Ø 10x30 mm	8X
н		Pillow	4X	М7		Allen key	2X




Item# PAT6749

Product dimension:

Table: 23,62"W x 23,62"D x 21,65"H Bench: 52,76"W x 24,6"D x 29,53"H

ASSEMBLY INSTRUCTIONS FOR SAFAVIEH
LARDNER LIVING
THE DESIGN OF LARDNER LIVING IN THE DRAWINGS MAY VARY
FROM ACTUAL, BUT ASSEMBLY CAN BE APPLIED
FOR THIS ITEM

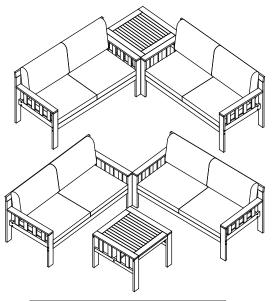







Weight Capacity: 550 lbs per bench & 88 lbs per table

WARNING: DO NOT STAND ON BENCH & TABLE


WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

## **PREPARATION**


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 10 minutes.

Tools Required for Assembly: Allen Key (included), screw Driver (not included)

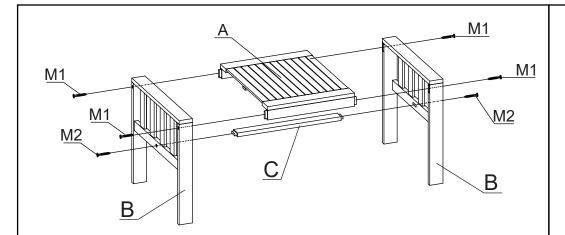


Step 1: attach table leg frame (B) to table top (A) & low cross bar (C), using screws (M1 & M2). Fully tighten using Allen Key (M7)

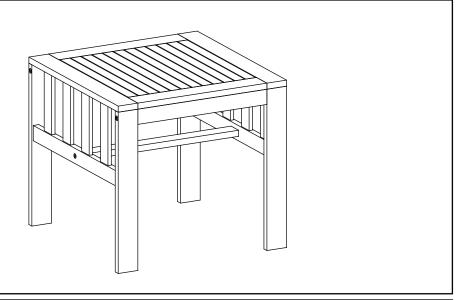

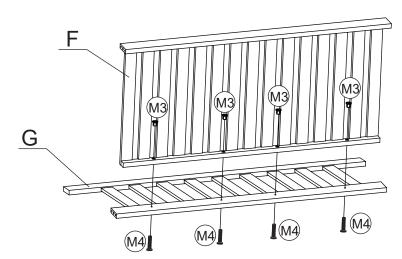

Step 1: Fix the seat bench (F) to Backrest (G) using Bolts (M4) & Nuts (M3). Fully tighten using Allen Key (M7)

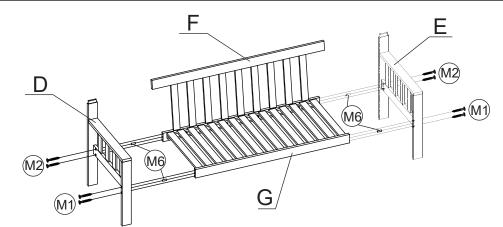

Step 2: insert Wooden dowel (M6) into the hole in bench seat (G) then attach the right leg frame (D) to the assembled frame. Tighten using Allen Key (M7). Repeat for the left leg frame (E).Do not fully tighten Screw until all are installed.

