

INSTRUCTION MANUAL

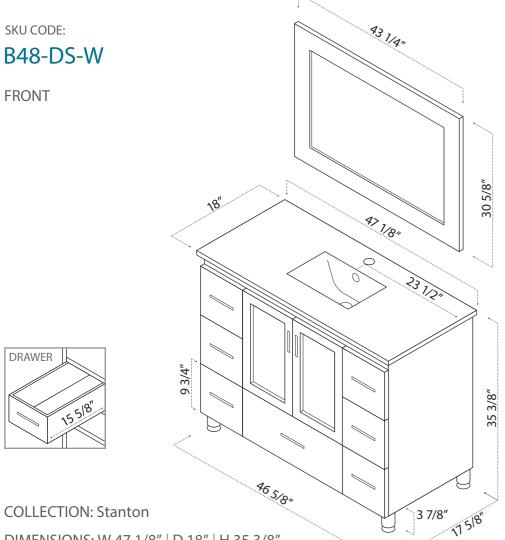

DIMENSIONS: W 47 1/8" | D 18" | H 35 3/8"

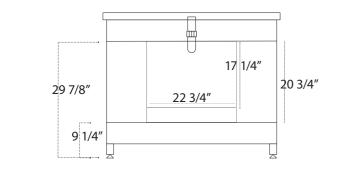

PACKING LIST

- Pre-assembled cabinet
- Integrated sink countertop
- 1 Mirror

BACK

4 Cabinet legs

WARRANTY

Design Element warrants cabinets, mirrors, finishes and fittings to be free from defects in workmanship and materials under normal use and service for a period of one (1) year.


Drain


• Mirror mounting screws

Instruction Manual

Please report any damage or missing pieces of your vanity to us immediately. These things must be reported no later than 30 days from the date of delivery.

Attaching Counter Top To Cabinet

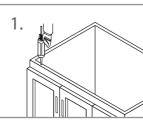


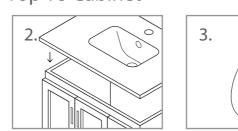


1. Apply continuous stream of quality silicon glue to the top of the cabinet where the 2. Place the integrated sink on the glued cabinet.

3. Do not use the sink instantly. Wait approximately for 24 hours so that the silicon glue can dry.

Installing the drain




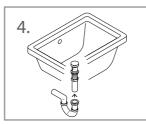



1. After installing the counter top on the cabinet, put the drain assembly inside the hole in 2. Tie up the mounting rubbers and metal rings from the bottom of the drain.

3. Connect the trap onto the drain bottom.


Hanging Mirror On The Wall



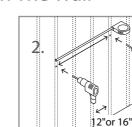

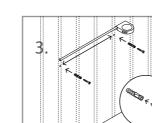

			 1.1 1.1		
		- 22			
				/ iii	
÷ .		- 2.5			
- E					
÷.					
	К				
÷.					
		- 22			
			/ @@		
÷.		- 22			
÷.					
		- 22			
				· • -	
÷.		- 22		. ത	. 1
			111		
		- 22			19/1
			~ \		- Z
			 ~ ``		
			 \		
				< .	/ /



SAFE	
5/11 2	

- or scratch the finish.

CLEANING AND CARE

- finish.

CONTACT SUPPORT

PHONE: (888) 487-4488 EMAIL: cs@designelementusa.com

www.designelementusa.com


1. Measure the distance between the screw holes from the


2. Locate the studs on the wall. They are normally placed 12" to 16" apart from each other. Drill two holes on the studs as per your previous measurement.


3. Insert the plastic plugs into the drilled holes and then insert screws into the plastic plugs. Tie up the screws till they remain at least 0.5" – 0.75" outside the wall.

4. Hang the mirror on

4







D PRECAUTIONS

• Please go through this entire instruction manual before making any attempt to assemble, operate or install the product.

• During installation, handle the integrated sink countertop with optimum care. It might break if hit hard on a solid surface.

• Don't start using the vanity right away. Wait for approximately 24 hours after installation so that the silicon glue can dry.

• When scrubbing the cabinet while cleaning, make sure you do not remove

• Avoid using any type of rough cleaning material on top of the cabinet

• Use mild liquid soap and water-dampened soft cloth to remove stains from the cabinet and to clean the integrated sink countertop.

• For the glass part of the mirror, use ammonia-free cleaning products.

ADDRESS: 8715 Boston place, Rancho Cucamonga, CA. 91730

