


Parts & Installation Instructions

Home Plow Poly Snow Deflector Kit 08267

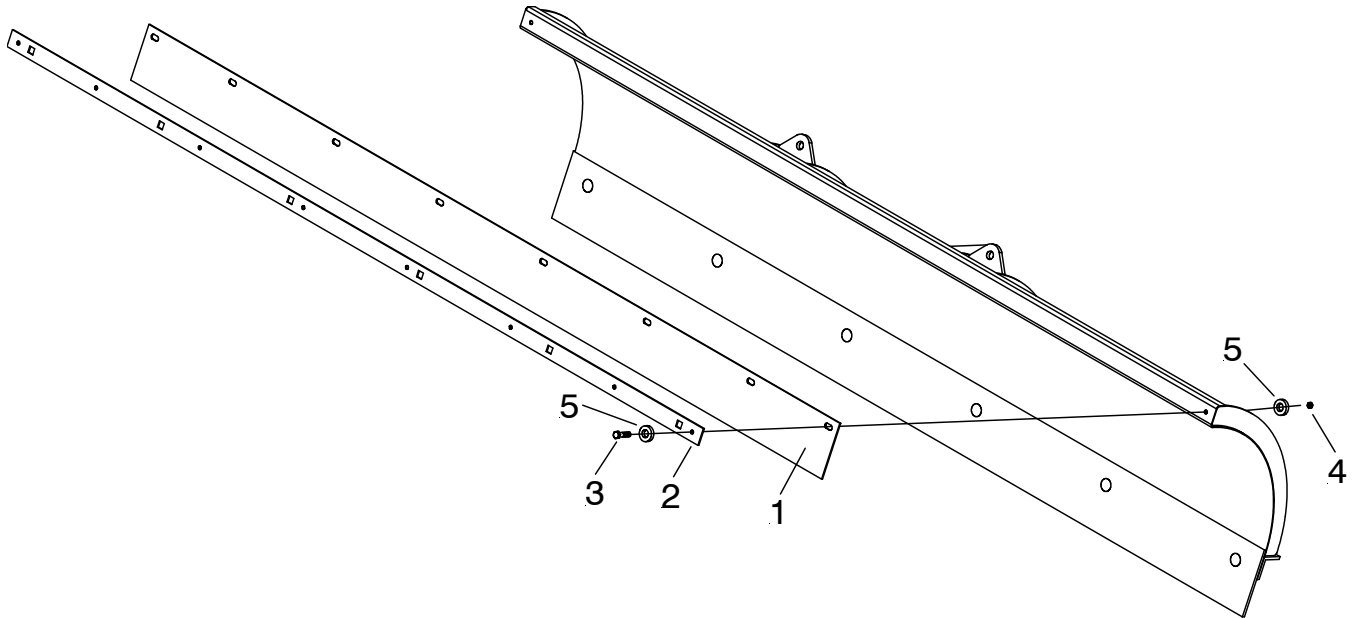

Parts List

Item	Part No.	Qty.	Description
1	08267	1	Home Plow Poly Snow Deflector Kit
	13321	1	• Snow Deflector
2	12707	1	• Brace
	08612	1	• Hardware bag
3	21835	9	• Bolt 1/4-20 x 1-1/4" Gr.5
4	20312	9	• Locknut 1/4-20
5	20351	18	• Flatwasher 1/4"

Parts indented are included in the assembly under which they are indented.

Installation Instructions

- A. The Home Plow, Deflector and Brace are pre-drilled.
- B. Attach Deflector (1) with Brace (2) to Moldboard, as shown above, using 1/4-20 x 1-1/4" Bolt (3), 1/4" Flatwashers (5) and 1/4-20 Locknut (4). Tighten all fasteners.

The Home Plow assumes no responsibility for installations not made in accordance with these instructions.

The Home Plow reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.

The Home Plow
18513 Euclid Ave. • Cleveland, Ohio 44112-1084
Phone 877-412-PLOW (7569)
email info@thehomeplow.com