

ABSWING4

4 Ft Amish Bench

Assembly Instructions

Max Weight Capacity 500 Lb



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

**IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,
DO NOT USE THIS PRODUCT!**

DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

If you experience a problem, have questions or need parts for this product, visit our website

<http://www.amerihomebrand.com> or call **Customer Service** at 1-888-287-6981, Monday-Friday,

8 AM - 4 PM Central Time, or email : info@amerihomebrand.com. A copy of the sales receipt is required.

KEEP MANUAL, SALES RECEIPT & WARRANTY FOR FUTURE REFERENCE

HARDWARE

(A) 3 1/2" Carriage Bolts 2 pieces




(B) 3" Carriage Bolts 2 pieces



(C) Locking Nuts 8 pieces



(D) Eye Bolts 4 pieces

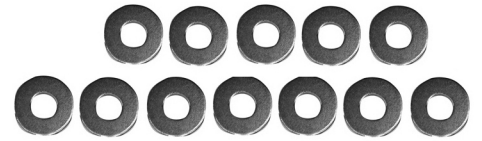


(E) Washers 12 pieces

TOOLS YOU WILL NEED

- Hammer
- 1/2" Ratchet
- 1/2" Wrench

PARTS LIST

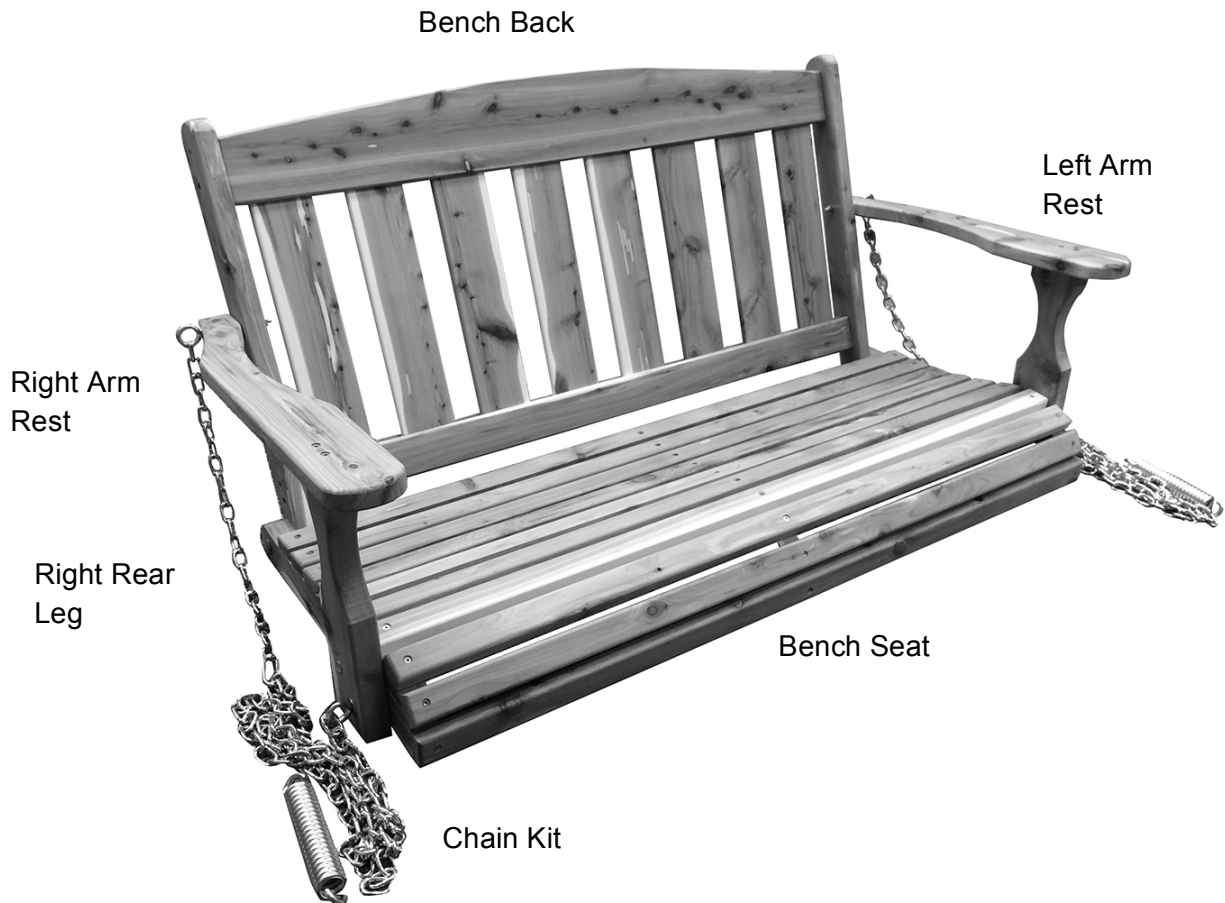

ASSEMBLY

1. Wedge bench back between the two extensions in the back of the bench seat and align holes.
 - a. Place a 3 ½" carriage bolt (from outside to inside) in through the bench seat and allow bolt to come out on the inside of the bench back pre-drilled hole. (DO NOT SECURE WITH LOCKING NUT YET)




2. Take left arm rest and place an eye bolt and washer in through the lower hole on the front leg, a 3" bolt on the upper hole on the front leg and finally an eye bolt and washer through the back of the arm rest.
3. Align the arm rest and pre-placed bolts with the holes on the left side of the bench seat and bench back. See photo below.



4. You may now secure the bolts that have been inserted in steps 1 and 2. Be sure to place a washer in on the back side of the bolt and follow with a locking nut. For the carriage bolts, it is recommended you set the bolts by tapping in place with a hammer. You will now use the ½" long socket and ½" wrench to tighten the locking nuts and secure the bolts.
5. Repeat steps 2-4 on the right side of the swing with the right arm rest.



6. Next, add the chain kit to eye bolts on each side.

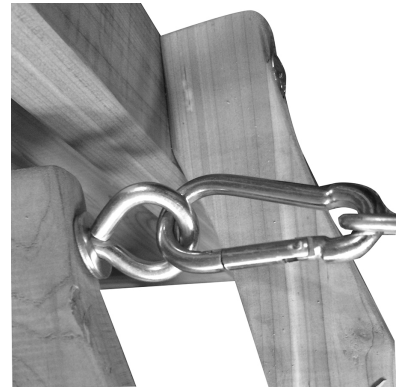

Eye Bolt & Chain Kit