

Shower Caddy Installation





Step 1: Attach adapters to caddy using chrome cover nuts

Step 2: Use caddy to identify desired location prior to removing adhesive ring cover. Mark and check level, use masking tape to avoid marking surface

Step 3: Peel protective cover ring and carefully press in place on marks. Caution: be sure not to make contact with surface before caddy is aligned to avoid tearing adhesive ring

Step 4: Remove caddy, pierce tube with red key, use key on tube end as pictured, insert tube into one hole and insert adhesive until it beads up the check hole. Leave undisturbed overnight (12 hours) to cure.

Step 5: Insert washer over post, add chrome cover plate and attach caddy. Easily remove and clean as needed!

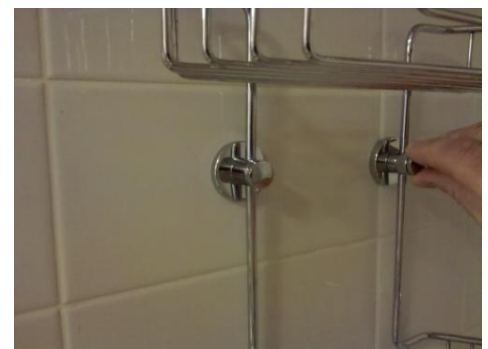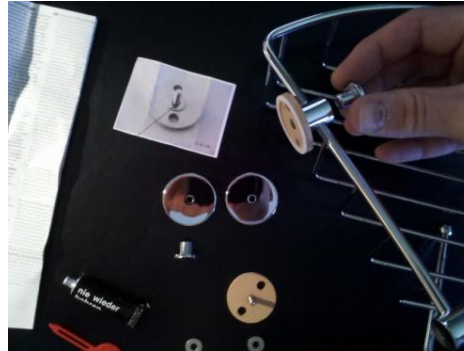

no drilling required.