



MR01-A-N

Wall Mount 8" Mirror Extendable - Satin nickel

Dimention

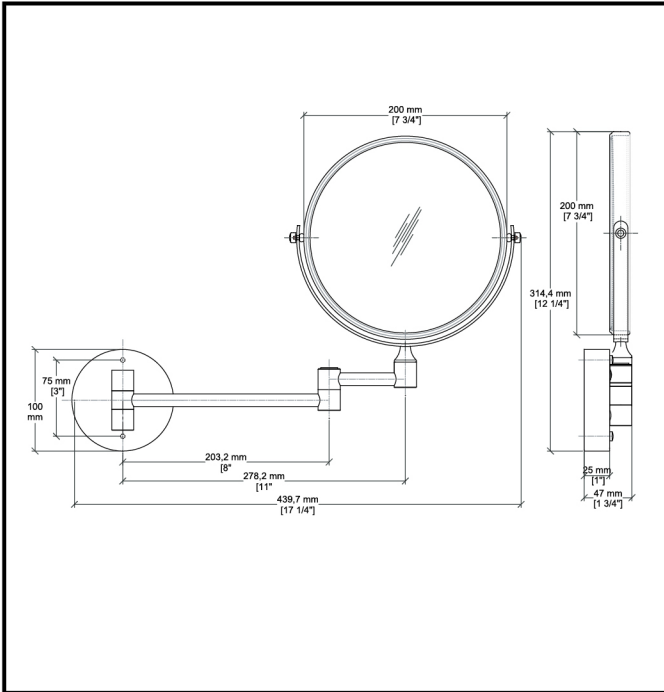

Installation

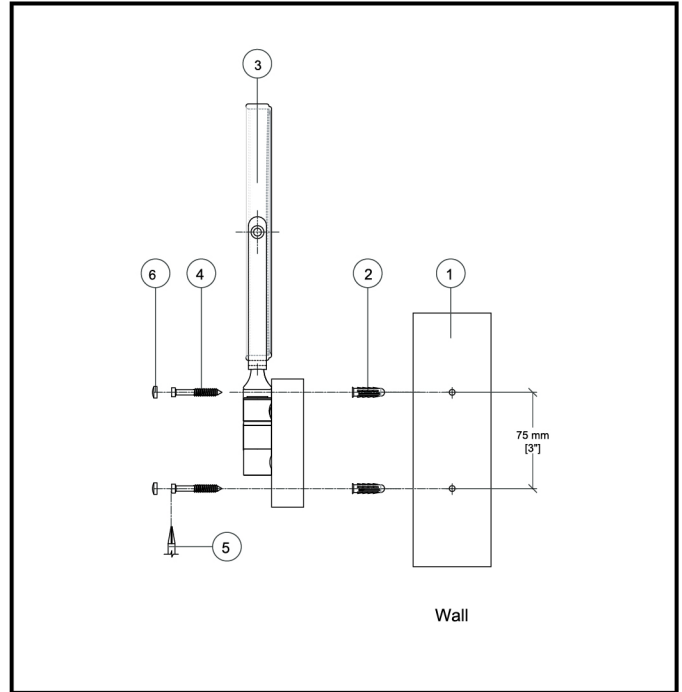

Installation Instruction :

1. Hold bracket up to surface and mark both screw positions (vertical distance = 3" / 75 mm).
2. Using drill, drill guide holes at each screw location.
3. Insert Mirror (3) to wall and connect to fitting (4).
4. Affix robe hook to wall by screwing screw into screw holders.
5. Using included allen key(5), tighten small(6) at top of base until base is tightly fasten to wall.
note if base does not fit flush to wall, you may have to loosen screw at top of base first.
6. Screw cap(4) onto top of screws.

For installation to woos Stud or Wood Cabinet, omit steps 2 and 4 above.