


SK1994 SPINDLE AND SCREW SELECTION INSTRUCTION

1. PRINT OUT THIS SHEET USING 1:1 SCALE.
(VERIFY USING A RULER AGAINST THE PRINT OUT BELOW)

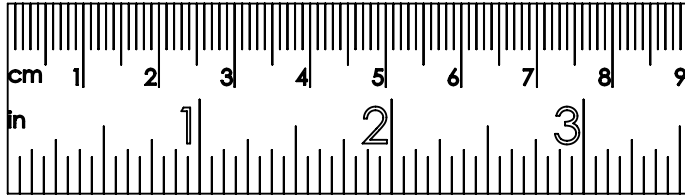


2. MEASURE DOOR THICKNESS.
3. OVER LAY SPINDLES AND SCREWS ON TOP OF THE IMAGES BELOW.
4. SELECT THE SPINDLE AND SCREW THAT MATCH YOUR DOOR THICKNESS.


DOOR THICKNESS

SPINDLE


1" TO 1 1/8"




1 1/4" TO 1 3/8"




1 3/4" TO 1 7/8"



2" TO 2 1/8"




2 1/4" TO 2 3/8"




DOOR THICKNESS

SCREW


1" TO 1 1/4"




1 3/8" TO 1 1/2"



1 5/8" TO 1 7/8"



2" TO 2 1/8"



2 1/4" TO 2 3/8"

