
How to Measure Your Window for Cordless Fabric Roman Shades

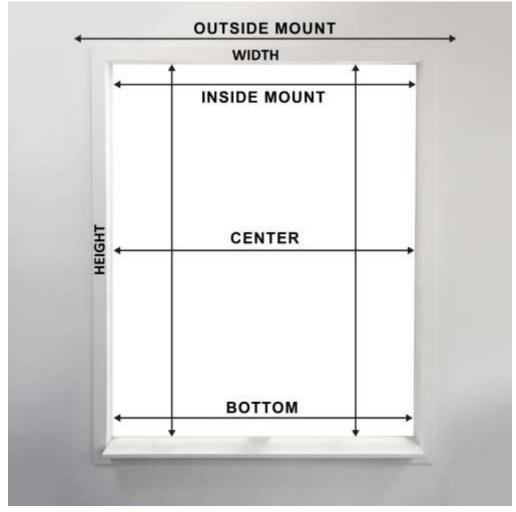

Inside Mount (Inside your window recess)	Outside Mount (Outside your window recess, on framework or the surrounding wall)
1. Width: To find the width, measure the top, middle and	1. Determine where the blind is to be placed. You will
bottom within your window recess. Use the narrowest	need a minimum of 3/4 inch of flat mounting space above
width as your window-width.	your window to accommodate the mounting hardware.
2. <u>Height/Length:</u> To find the height, measure exact	2. <u>Width:</u> Choose a product-width that is the same or
window-recess height at left, middle, and right side. Use	greater than the width of your window recess. We
the longest height as your window-height.	recommend adding 2 to 6 inches extra to the measured-
3. <u>Depth</u> : Minimum 1 inch required. If you want a flush	width to maximize light control and privacy.
mount a minimum of 1-3/4 inches is required.	3. <u>Height/Length:</u> Measure exact measured-height from
4. ORDERING : Choose a width that is 1/4 inch or smaller	the top of the proposed headrail location to the base of
than the window-width from above. Choose a height that	the sill. If there is no sill, measure where you would like
is the same or longer than your window-height.	the blind to drop. Add 2 to 6 inches to the height for
	optimum light control and privacy.
*Ordering a product that is more than 1 inch shorter in	4. ORDERING: Choose a width that is the same or wider
width than your window-width will create a large light	than the product-width from above. Choose a height that
gap, so think about what will satisfy your need.	is the same or longer than your measured-height.
All of our products ship exactly as ordered. There are no deductions.	

Example: If you order a 24"Width x 60"Height/Length, then the product that you'll receive will be 24"Width x 60"Height/Length.