


DIY Costume Shoe Makeover

DIY COSTUME SHOE MAKEOVER

Simple sleek style has never been easier with Rust-Oleum Universal Metallic Spray Paint. Treat your old shoes with a unique design that lets you shine with every step.

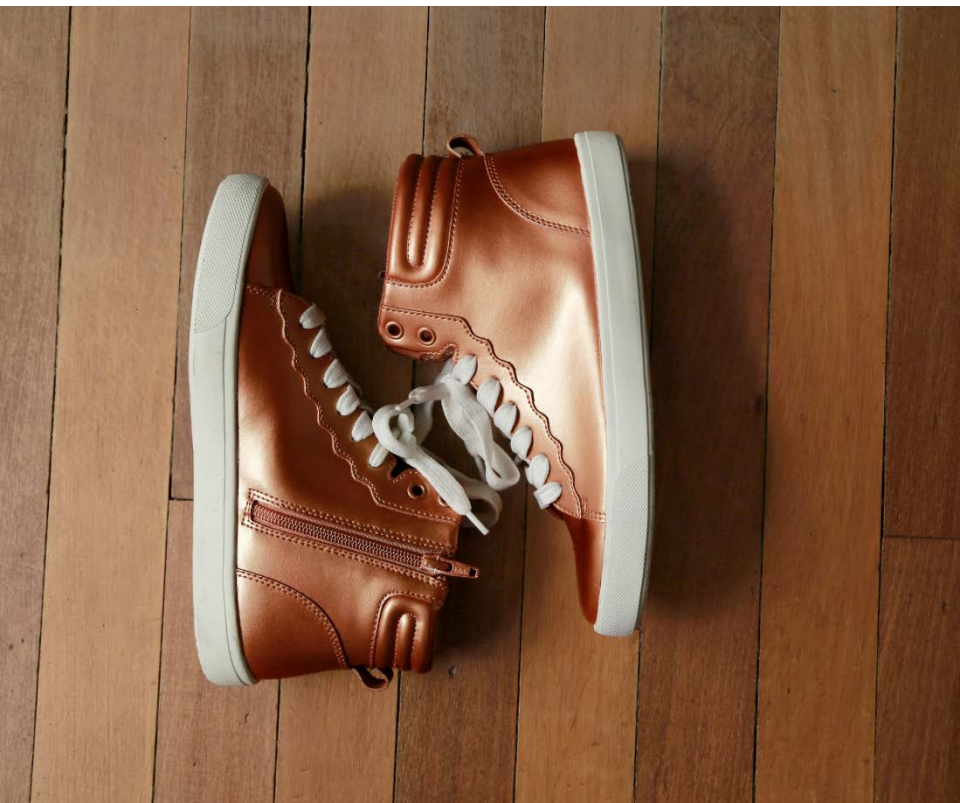

You're never too old to play dress up. Spray paint your shoes with a fun color for a special look at a wedding, prom or Halloween.



ITEMS:

- Rust-Oleum Universal Metallic Spray Paint in Copper Rose
- Drop cloth
- Painter's tape

STEPS:

Step 1: Always work in a well-ventilated area, such as a garage or outdoors, and use a drop cloth to protect from overspray.

Step 2: Remove the shoelaces and apply painter's tape to areas you don't want to paint.

Step 3: Shake can of Universal Metallic spray paint for 1 minute after the ball begins to rattle to mix the paint evenly.

Step 4: Spray 2-3 light coats of paint on each shoe in a steady back-and-forth motion, holding the can approximately 8-12" from the surface with a few minutes between each coat.

Step 5: Let the shoes dry for about 20 minutes before removing the tape and about an hour before use.

Step 6: Enjoy your fresh new kicks that are made ready for any occasion!

SKILL LEVEL
BEGINNER

PROJECT TIME
30 MIN

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Metallic Mason Jars



METALLIC MASON JARS

Fancy up your home with metallic jars in 3 easy steps

ITEMS:

- Rust-Oleum Universal Metallic Spray Paint in Copper Rose and Satin Bronze
- Rust-Oleum Stops Rust Metallic Spray Paint in Champagne Bronze
- Rust-Oleum Stops Rust Bright Coat Spray Paint in Copper
- Disposable Nitrile Gloves & Clean lint-free rags
- Mason Jars
- Old sheets or drop cloth
- Glass Cleaner

STEPS:

Prepare Always work in a well-ventilated area. Cover the floor and nearby items with drop cloths. Clean Jars with Glass Cleaner and lint-free cloth. Make sure jars are completely dry. Turn jars upside down onto drop cloth.

Paint

Universal: Shake can for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 2 or more moderate coats a few minutes apart.

Stops Rust Metallic: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 1 light coat followed by 1 wet coat.

Stops Rust Bright Coat: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply 2 or more light coats a few minutes apart.

Finish Allow the jars to dry completely for 24 hours and then accent your space with metallic elegance.

SKILL LEVEL
BEGINNER

PROJECT TIME
<1 Hr

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Baskets Full of Eggs

Festive baskets full of painted Easter eggs laid in hay



SKILL LEVEL
BEGINNER

PROJECT TIME
<1.5 Hr

BASKETS FULL OF EGGS

Put your eggs in more than one basket with this decorative arrangement. Be ready for the celebration with these trendy colors provided in an easy-to-use spray can.

ITEMS:

- Painter's Touch Ultra Cover 2X in Satin French Lilac, Sweet Pea & Lemon Grass
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Ceramic or wooden eggs
- Basket stand
- Bunny, ribbon & hay
- Drop cloth
- Lint-free cloth
- Disposable Nitrile gloves

STEPS:

Prepare: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Lightly sand the wooden eggs and wipe off the dust with a lint-free cloth. Make sure your wooden eggs are clean and dry before beginning to spray.

Paint: Ultra Cover 2X: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Once the painted area is dry to the touch (about 20 minutes), rotate the egg to spray again. Repeat the process until the entire egg is coated. For best results, apply 2 or more light coats a few minutes apart.

Universal: Shake can for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Once the painted area is dry to the touch (about 30 minutes), rotate the egg to spray again. Repeat the process until the entire egg is coated. For best results, apply 2 or more moderate coats a few minutes apart.

Finish: Allow the eggs to dry completely for 24 hours before handling. Once dry, gently place your eggs in the basket and form your Easter display!

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

DIY Rustic Bunny Wire Picture Frame



Create your own rustic picture frame in a few simple steps

SKILL LEVEL
BEGINNER

PROJECT TIME
<2 Hrs

DIY RUSTIC BUNNY WIRE PICTURE FRAME

Personalize a DIY wire picture frame for your decorative shelving with some spray paint. Bring the old school feel to your Easter décor and customize with any photo or color of your choice!

ITEMS:

- Painter's Touch Ultra Cover 2X spray paint in Satin Moss Green
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Wooden picture frame
- Chicken wire & metal clip
- Drop cloth & lint-free cloth
- Disposable Nitrile gloves
- Sandpaper
- Wire cutter
- Staple gun

STEPS:

PREPARE: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Remove any existing backing from the picture frame. Lightly sand the frame and wipe away dust with a lint-free cloth. Cut chicken wire to slightly larger than the frame opening and set aside to be painted. Make sure all items are completely dry before painting.

PAINT:

Frame: Shake can of Ultra Cover 2X Satin spray paint for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Chicken wire and clip: Shake can of Universal Metallic spray paint for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more moderate coats a few minutes apart.

FINISH: Allow the frame and wire to dry for 1 hour before handling. Use the staple gun to secure the chicken wire to the back of the picture frame. Let the completed frame dry completely for 24 hours. Once dry, clip on your favorite bunny photo and display on your Easter mantel!

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

Faux Bird House Setting

Simple DIY painted bird houses for your mantel display



SKILL LEVEL
BEGINNER

PROJECT TIME
<1 Hr

FAUX BIRD HOUSE SETTING

Bring the comfort and peace of the garden into the quietness of your home décor. All it takes is a little spray paint and some imagination to transform your mantel display.

ITEMS:

- Painter's Touch Ultra Cover 2X spray paint in Satin Eden & Green Apple
- Rust-Oleum Universal Metallic spray paint in Pure Gold
- Wooden bird houses
- Birds, books & ribbon
- Moss or flowers
- Drop cloth
- Disposable Nitrile gloves
- Sandpaper
- Lint-free cloth

STEPS:

PREPARE: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Lightly sand the bird houses and wipe off the dust with a lint-free cloth.

PAINT:

Ultra Cover 2X: Shake can for 1 minute after the ball begins to rattle. Hold can upright 10-16" from the surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more light coats a few minutes apart.

Universal: Shake can for 1 minute after the ball begins to rattle. Hold can upright 8-12" from the jar and spray in a steady back-and-forth motion, slightly overlapping each stroke. For best results, apply 2 or more moderate coats a few minutes apart.

FINISH: Allow the bird houses to dry for approximately 24 hours. Set the scene with faux birds and cozy elements to create your nature-inspired construction! Optional Look (as shown): Use sandpaper or a sanding sponge to distress the bird house edges for your desired look and wipe clean with a lint-free cloth.

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

STENCILED TERRA COTTA POTS

Customize your flower pots with some spray paint and crafty stenciled designs. With a completely personalized look, Rust-Oleum spray paints brings vivid life to your garden.

Stenciled Terra Cotta Flower Pots

ITEMS:

- Painter's Touch Ultra Cover 2X Satin spray paint in Aubergine, Ink Blue, Vintage Teal & Magenta
- Painter's Touch Ultra Cover 2X Gloss spray paint in Golden Sunset
- Rust-Oleum Universal spray paint in Gloss Green Citrus
- Zinsser Bulls Eye 1-2-3 Primer spray
- Terra cotta pots
- Terra cotta saucers
- Stencils
- Drop cloth
- Painter's tape
- Paper
- Disposable Nitrile gloves
- Mini painting tray
- Small brush / sponge

STEPS:

Step 1: Always work in a well-ventilated area and use a drop cloth to protect from overspray. Make sure the pots and saucers are completely dry before painting.

Step 2: Apply Zinsser Bulls Eye 1-2-3 Primer to the pots and saucers according to the directions on the can. Allow to dry for 1 hour.

Step 3: Cover the body of the pots with paper and painter's tape.

Step 4: Spray Ultra Cover 2X paint on the uncovered rim and matching saucer of each pot. Allow to dry for 1 hour before removing tape. (As shown: Magenta (left), Aubergine (middle), Ink Blue (right))

Step 5: Once dry, cover the top rim of the flower pots with paper and painter's tape.

Step 6: Apply Ultra Cover 2X and Universal spray paints on each pot according to the directions on the can. Allow to dry for 1 hour before removing tape. (As shown: Vintage Teal (left), Golden Sunset (middle), Green Citrus (right))

Step 7: Carefully cut stencils into desired shapes and sizes. Tape the stencils onto each pot and mask off any areas that should not be painted.

Step 8: Spray paint into a mini painting tray and use a small brush or sponge to dab paint over each stencil. Allow to dry for 1 hour before removing tape.

Step 9: Allow the flower pots to dry for approximately 24 hours. Plant your flowers and enjoy your decorative stencil creations!



Show off your creativity with custom painted flower pots

SKILL LEVEL
BEGINNER

PROJECT TIME
< 2 HRS

Find more inspiration at
[homedepot.com/crafts](https://www.homedepot.com/crafts)



D2442224-100E

COLORFUL DIY MASON JAR VASES

With a few coats of spray paint, you can easily make these gorgeous Mason jar vases.



These bright Mason jar vases are a perfect way to add a pop of color to a neutral room. Here's how we made them in three easy steps.

ITEMS

- Universal Matte Spray Paint – Harvest Orange
- Mason Jars
- Drop Cloth
- Lint-Free Cloth
- Glass Cleaner

1. PREPARE: Always work in a well-ventilated area and cover your workspace with a drop cloth to protect it from overspray. Clean your Mason jars with glass cleaner and a lint-free cloth.

2. PAINT: Shake your can of Universal Matte spray paint for about one minute after the mixing ball starts to rattle. Then, holding the can 8-12" away from the jar, spray the outside of the Mason jar in a steady sweeping motion, slightly overlapping each stroke. Apply two or more light coats to the Mason jars, allowing a few minutes in between each coat.

3. FINISH: Let your Mason jars dry completely for 24 hours. Once they're dry, add flowers and display!

SUMMER COOLER

TRANSFORM A PLASTIC TUB INTO A FUN COOLER FOR SUMMER

Bring life to an ordinary plastic tub with Rust-Oleum Universal spray paint. With superior coverage and premium finishes, Universal spray paint can transform any plain item into a high-end piece.

ITEMS

- Drop Cloth
- Lint Free Cloth
- Plastic Tub
- Rust-Oleum Universal spray paint


STEPS

- 1. PREPARE:** Always work in a well ventilated area. Cover nearby items with a drop cloth to protect them from paint splatters. Clean surfaces with a lint free cloth.
- 2. PAINT:** Shake can of Universal Aged Metallic spray paint for 1 minute after the mixing ball begins to rattle. Hold can upright 12-24" from surface and spray in a steady back-and-forth motion, slightly overlapping each stroke. Apply one light coat, allow to dry for 3-5 minutes, and follow with one heavier coat at moderate speed, spraying continuously over the object. If needed, recoat after 3-5 minutes.
- 3. FINISH:** Allow your project to dry for approximately 24 hours prior to use.

Always thoroughly review directions on the package before using any product.



As shown Universal Aged Metallic Weathered Steel

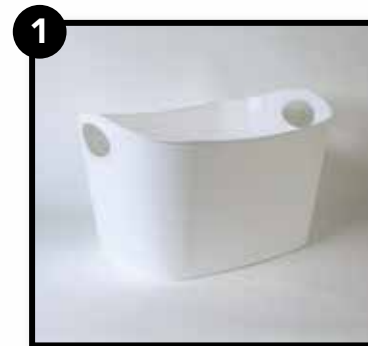

RUST-OLEUM[®]

Visit www.homedepot.com/rustoleum
for other great ideas, products and inspiration.