



# INSTALLATION INSTRUCTIONS

## Interior Bifold


### Bifold Installation in 4 Easy Steps

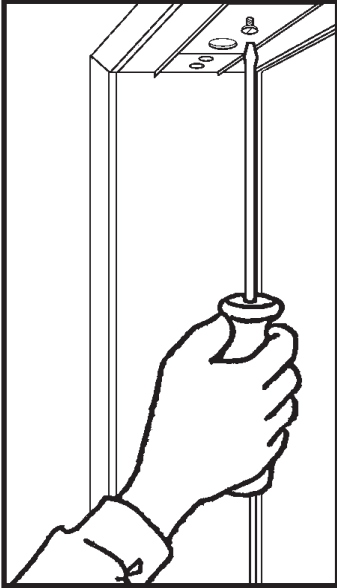


1. Install the track to the top of the door jamb.

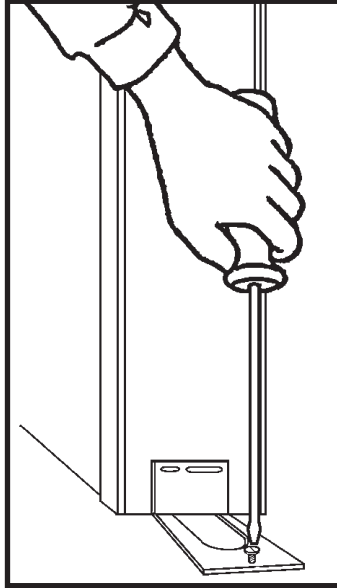

2. Install the floor bracket.

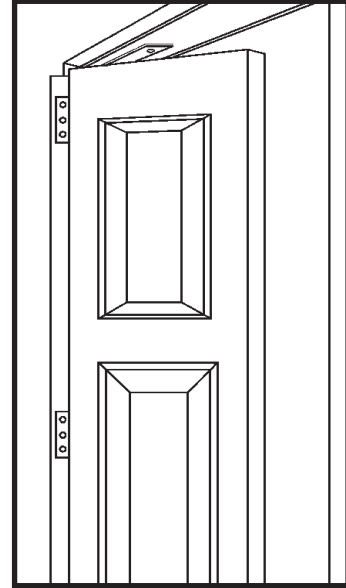


3. Align door pins, snap into place.

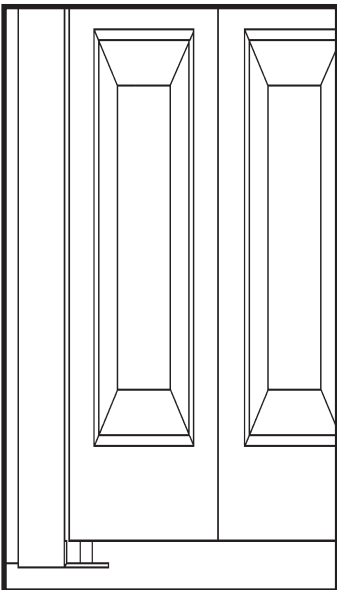

4. Adjust the height of bifold with leveler.

### BIFOLD SIZE SELECTOR

Before purchasing your bifold unit from The Home Depot, check your opening measurements carefully. Measure the width of the door opening between the side jambs in two places (A). Measure the height from the floor to the head jamb in two places (B). **Please check with associate for available sizes.**

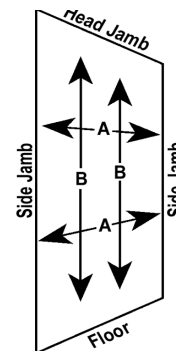

## INTERIOR DOORS

### Bifold

Available in a variety of species and styles to match any decor  
Ready for finishing

