


MSI


Creating Beautiful Surfaces

Profile Specs


Surface reducers are used to fill the gap between floors of unequal heights.

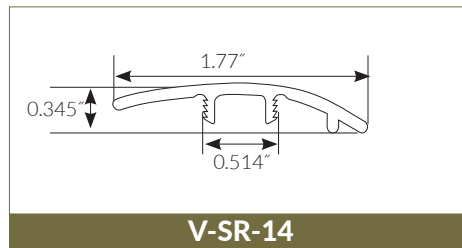


Installation

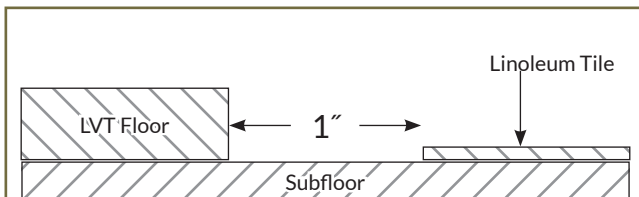

1. Install the flooring leaving a 1" gap between the two floors for the surface reducer installation.

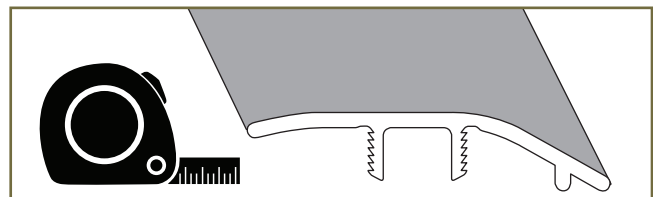


2. Measure and trim to fit.

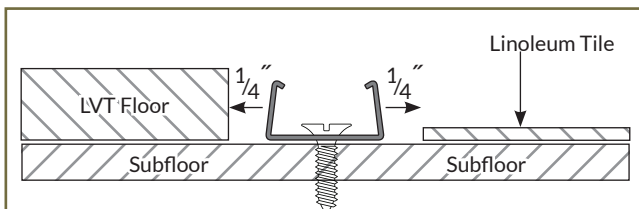

3. Center the track between the flooring leaving a 1/4" spacing between the track and floor planks. Screw track to subfloor (or glue down with construction adhesive).

* May need to use supplied shim

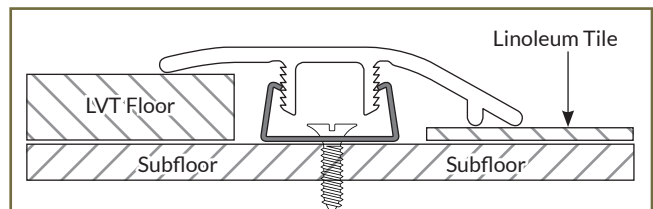

4. Starting at one end, press the molding into the track inching along the length of the molding.

You may also use a rubber mallet.