

 $1500\ Cherokee\ Parkway,\ Suite\ 100,\ Acworth,\ GA\ 30102$

Phone: (866) 845-5451 • Fax: (866) 816-6165

E: service@acclaim-lighting.com • www.acclaim-lighting.com

IN41266 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

- 1. Thread two mounting screws (8) to the mounting bar (9) and secure with the hex nut (7).
- 2. Secure the mounting bar (9) with box screws (10) to the outlet box (1).
- 3. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections
- --Ribbed wire (w/o marking) from light to White wire (2) from power source.
- --Smooth wire (w/o marking) from light to Black wire (3) from power source.
- --Loop the ground wire (4) to mounting bar(9) with a green screw (6).
- 4. Attach the back plate (11) against the outlet box(1), secure with the ball nut (12).
- 5. Put glass shade (15) onto socket (14), then secure with spacer (16) and socket ring (17)

INSTALLATION IS NOW COMPLETE

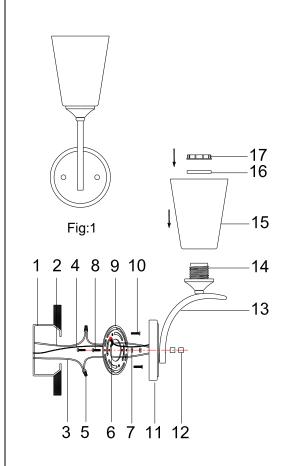

- 1. OUTLET BOX
- 2. WHITE WIRE
- 3. BLACK WIRE
- 4. GROUND WIRE
- 5. WIRE CONNECTOR
- 6. GREEN SCREW
- 7. HEX NUT
- 8. MOUNTING SCREW
- 9. MOUNTING BAR
- 10. BOX SCREW
- 11. BACK PLATE
- 12. BALL NUT
- 13. LAMP BODY
- 14. SOCKET
- 15. GLASS SHADE
- 16. SPACER
- 17. SOCKET RING