



# Coastal Industries Inc.

FAX NO.  
(904) 641-1697

TELEPHONE NO.  
(904) 642-3970

P.O BOX 16091  
JACKSONVILLE, FLORIDA 32246

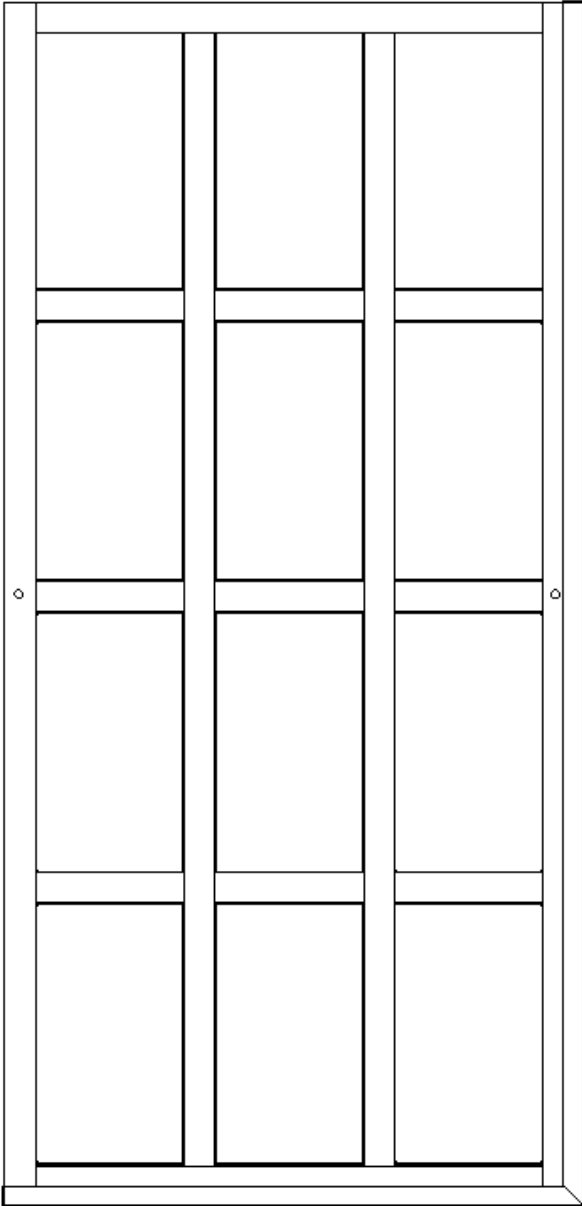

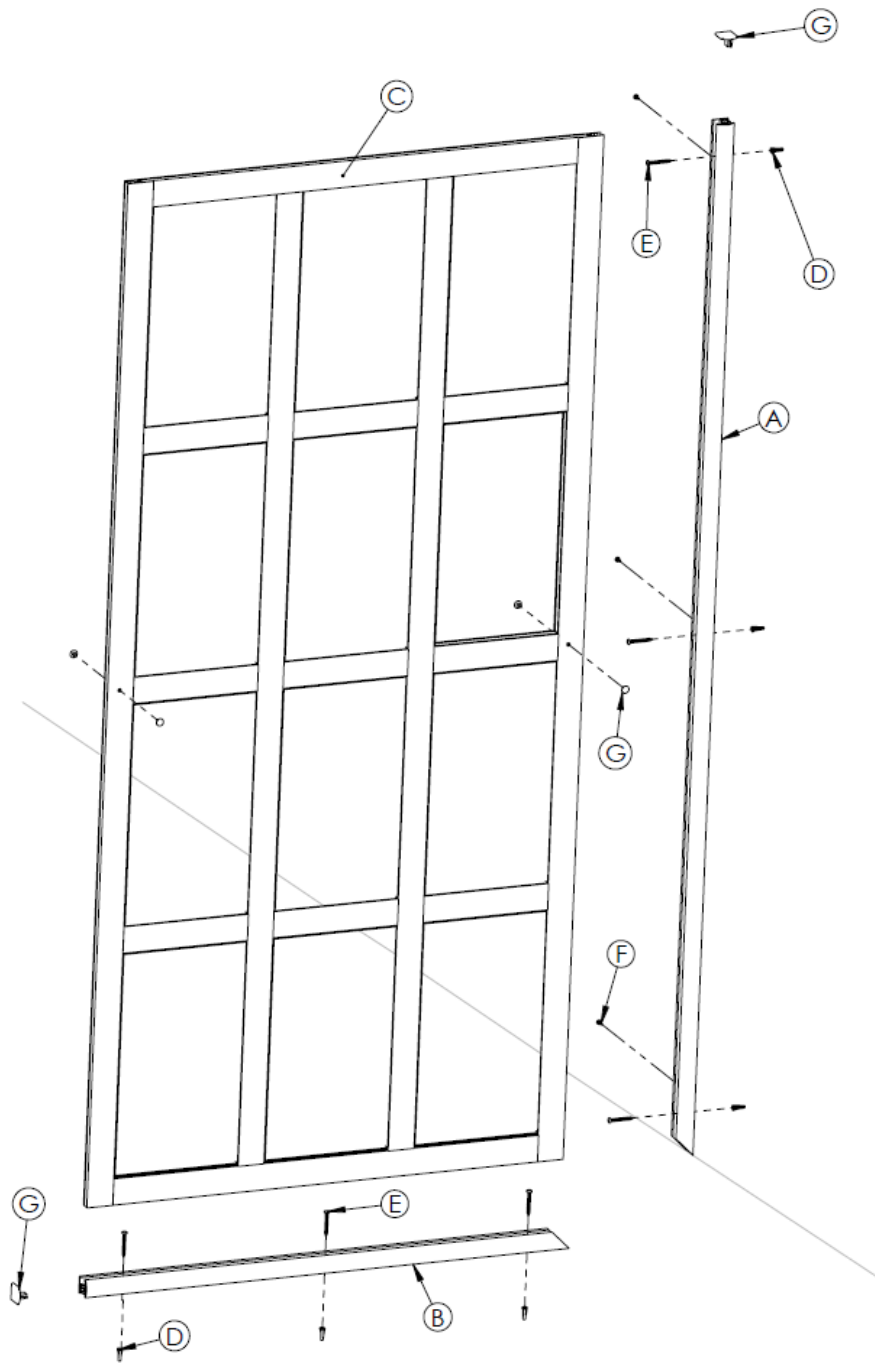

<u>Key Letter</u>	<u>Part Number</u>	<u>Description</u>	<u>QTY</u>
A	900	WALL JAMB POST	1
B	900	FLOOR JAMB POST	1
C	---	PANEL	1
D	1329	PLASTIC SCREW ANCHORS	6
E	6-8114PHP	INSTALATION SCREWS	6
F	638PHPT	ADJUSTMENT SCREWS	3
G	CP900	900 CAP	2
H	---	TOWEL BAR PLUG	4

## INSTALLATION INSTRUCTIONS

1. Position Wall Jamb Post (A) up against the wall and Floor Jamb Post (B) floor. Make sure the curved surface of the Wall and Floor Jamb is facing the outside of the shower and the angled ends are flush. Using the three pre-drilled holes on the wall Jamb and Floor Jamb as guides, mark and drill six 1-1/2" deep installation holes using a 1/8 drill bit.
2. Mark where the Wall Jamb Post (A) and Floor Jamb Post (B) pass the Panel (C). Cut off the excess Wall and Floor Jamb using a saw, shown in Figure 1.

3. Insert six Plastic Screw Anchors (C) into installation holes.

4. Reposition the Wall and Floor Jamb, secure to wall and floor using six Installation Screws (D).

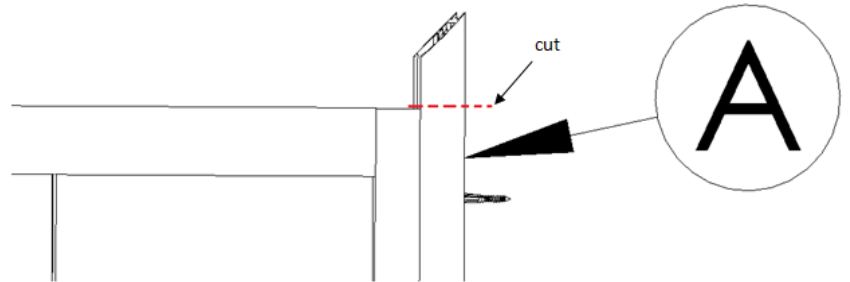


Figure 1

4. Insert Panel (B) to Wall Jamb Post (A) and push it up against the wall and floor as far as it will go. Secure Panel (B) to Wall Jamb Post (A) using the three Self Drilling Adjustment Screws (E).

5. Place 900 CAPS (F) on the exposed ends of the Wall Jamb Post (A) and Floor Jamb Post (B). Cut off excess plastic from 900 Cap using the cavity as cutting guide, shown in Figure 2.

6. Caulk Unit at bottom where Panel (C) connects to Floor Jamb Post (B).

7. Place Towel Bar Plugs in Panel (C), as shown in exploded view.

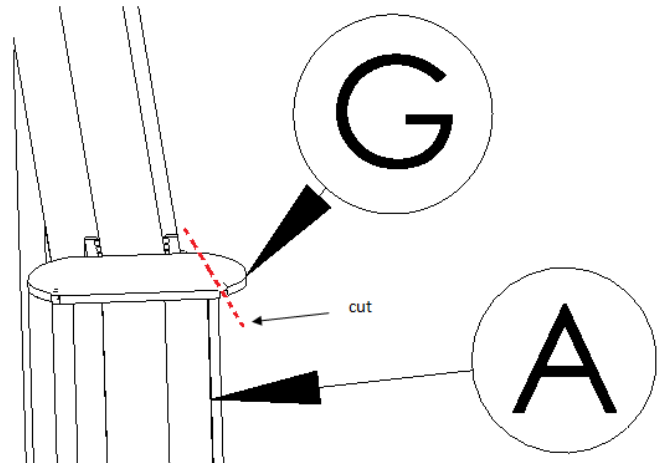


Figure 2