


## Installation

1. Remove the old wall plate from the wall outlet box.
2. If necessary, trim the cable jacket back about 2 in., being careful not to nick any wires inside.
3. If necessary, strip about ½ in. of insulation off each wire.
4. Attach each wire to the specific terminal listed in the chart Sbelow. Note that most residential networks use the T-568B Standard.
5. Attach the wall plate to the wall using the two screws located on the back of the wall plate.

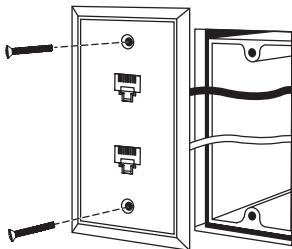

Pin	Wall Plate Color Terminal	T-568B Standard	T-568A Standard
1	Blue	White/Orange	White/Green
2	Orange	Orange	Green
3	Black	White/Green	White/Orange
4	Red	Blue	Blue
5	Green	White/Blue	White/Blue
6	Yellow	Green	Orange
7	Brown	White/Brown	White/Brown
8	White	Brown	Brown