Home Decorators

---- Collection----

BF-23101 STANTON COLLECTION STORAGE CART 6 DRAWERS WIDE

ASSEMBLY INSTRUCTIONS


Made In China



Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts, which may have loose inside the carton during shipment. Once uppacked, compare all parts and hardware to the provided list to be sure all parts are present. If any parts or hardware are missing or damaged, please phone, e-mail or fax our Custormer service Department. For speady service, please provide your order number, item number and part number/letter of the part needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

| PARTS LIST | | |
|---------------|--------------|-------------|
| A | В | C |
| D CABINET-1PC | SCREWS-16PCS | CASTER-4PCS |
| | | |
| | | |

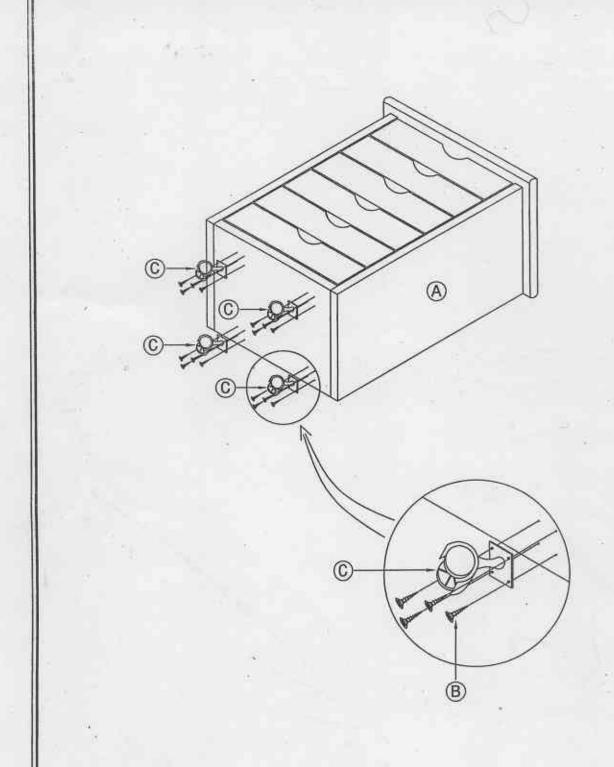

1). ASSEMBLE THE CASTER(C).

. ATTACH CASTER(C)TO BOTTOM PANEL OF CABINET(A)USING 16 SCREWS(B).