


Sliding Window / Door Lock (Snap-On)

U-9828 (Alum.)

U-9829 (Black)


U-9830 (White)

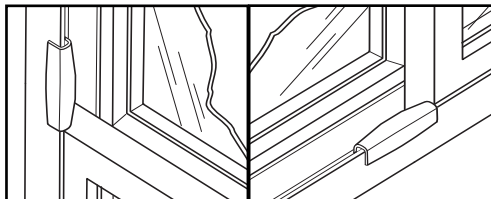

Side Track

Bottom Track

No Tools Needed

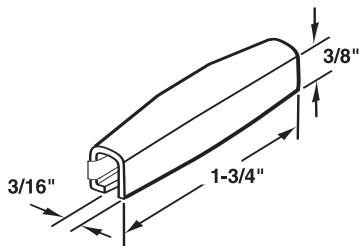

TO INSTALL: Close movable panel. Wedged side of lock must face window. Attach lock to track edge behind movable panel. Application may be on vertical or horizontal track. Lock may be located at any desired position on track to limit opening. Push vent lock away from movable panel to tighten.

PARA INSTALAR: Cierre el panel deslizando. El lado sobresalido del mecanismo debe estar colocado al frente de la ventana. Fije el mecanismo sobre el riel, de atrás del panel deslizando. La instalación puede ser realizada sobre el riel vertical o el horizontal. El mecanismo puede estar instalado en la posición que se requiere sobre el riel, para limitar la apertura entreabierto. Empuje el mecanismo lejos del panel deslizando para apretarlo.

POUR INSTALLER: Fermez le panneau coulissant. Le côté surélevé du mécanisme doit faire face à la fenêtre. Fixez le mécanisme au rebord du rail, derrière le panneau coulissant. L'installation peut s'effectuer sur le rail vertical ou horizontal. Le mécanisme peut être installé à la position désirée sur le rail, pour limiter l'ouverture. Poussez le mécanisme à distance du panneau coulissant pour le resserrer.