









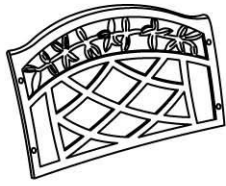







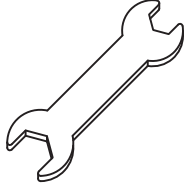

CAST ALUM. CLUB CHAIR  
CO6103-BK




# PARTS LIST

<p><b>A</b></p> 	<p><b>B</b></p> 	<p><b>C</b></p> 	<p><b>D</b></p> 
<p>Back 1 PC</p>	<p>Seat 1 PC</p>	<p>Left Side Frame 1 PC</p>	<p>Right Side Frame 1 PC</p>

# HARDWARE LIST

<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 	<p><b>4</b></p> 	<p><b>5</b></p> 
<p>Phillips Heat Bolt (M6*30) 4 pcs</p>	<p>Spring Washer (M6) 4 pcs</p>	<p>Flat Washer (M6) 4 pcs</p>	<p>Nut (M6) 4 pcs</p>	<p>Nut Cap (M6) 4 pcs</p>
<p><b>6</b></p> 	<p><b>7</b></p> 	<p><b>8</b></p> 	<p><b>9</b></p> 	<p><b>10</b></p> 
<p>Bolt (M8*30) 4 pcs</p>	<p>Spring Washer (M8) 4 pcs</p>	<p>Flat Washer (M8) 8 pcs</p>	<p>Nut (M8) 4 pcs</p>	<p>Nut Cap (M8) 4 pcs</p>
<p><b>11</b></p> 	<p><b>12</b></p> 			
<p>Wrench (M6 &amp; M8) 1 pc</p>	<p>Bolt Cap (M8) 4 pcs</p>			

**Step 1: Attach Side Frame (C & D) to seat (B) With Bolts (Part #6), Flat Washers (Part #8), Spring Washers ( Part #7) & Nuts (Part #9). Note - Do not tighten Nuts (Part #9) fully at this time. Cover M8X30 mm bolts (Part #6) with bolt caps (Part #12).**

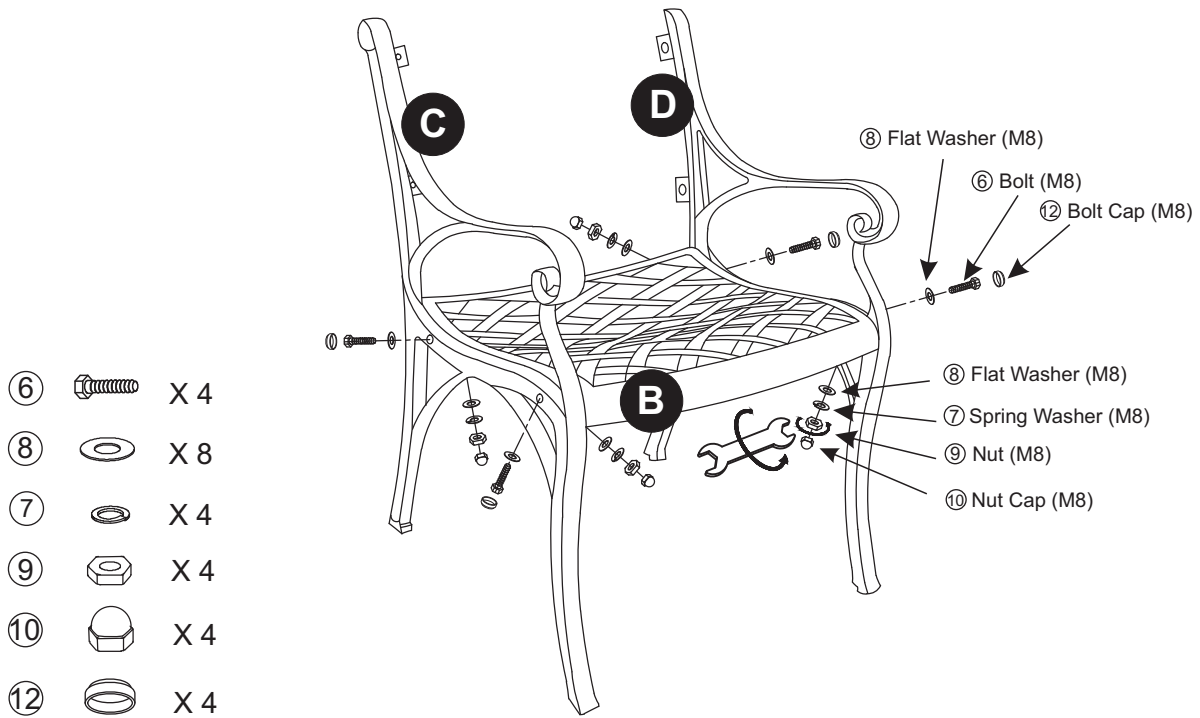

**Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1), Flat Washers (Part #3), Spring Washers (Part #2), and Nuts (Part #4). Tighten all bolts of the chair completely. Cover all Nuts with Nut Caps (Part #5).**

