



INSTALLATION INSTRUCTIONS FOR BATHROOM WALL HOOK


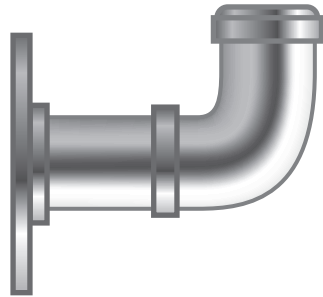


WALLHOOK (TP04)


- 1** Lightly mark points on the wall where the wall hook will be mounted.

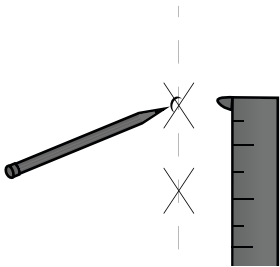

- 2** Drill a 1/8" pilot hole at the pencil marks for wood trim and stud installations. If mounting on tile, mark the holes over a strip of masking tape, and use a diamond tip drill bit with toggle masonry anchors. For drywall installations, follow the instructions at the bottom of the page.

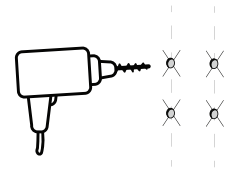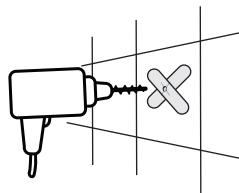

- 3** Place the wall hook against the wall and align it with your holes. When ready, insert screws into the top and bottom

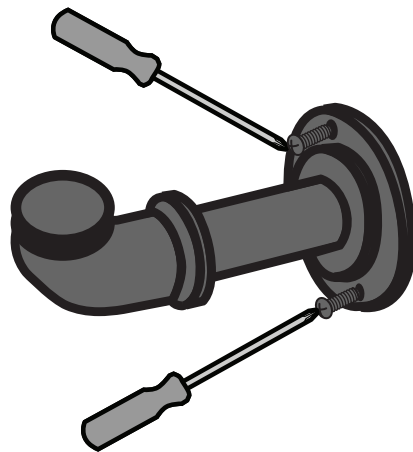

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.