

Window Film Installation and Measurement Guide


1 – Clean and dry window both inside and outside.

2 – Unroll the film on a clean, flat surface. Carefully measure your window before cutting. Cut the film at least an inch larger than the glass on all four sides. The excess will be trimmed once the film is applied. Keeping the film on a flat surface, select one corner of the film and slowly unroll the backing

3– Place window film on glass. Use squeegee tool to smooth the film, starting from top to bottom. Position it so that the excess one inch is overlapping the window on all four sides

4 – Carefully trim the excess film from window (use a ruler or similar guide to help keep the cutting line straight. We recommend using a utility knife. Gently pull the trimmed film away from the window. Repeat this process on all four sides


1

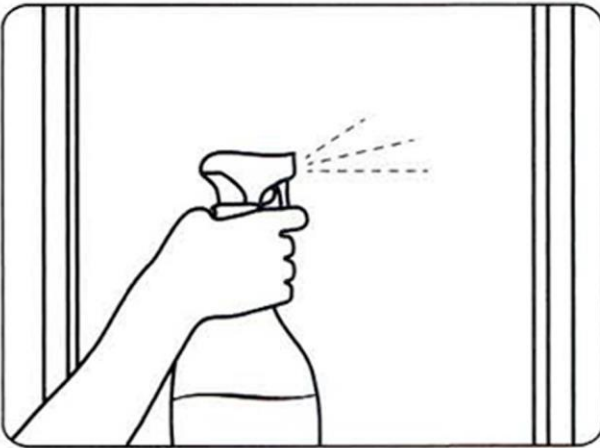

2



3

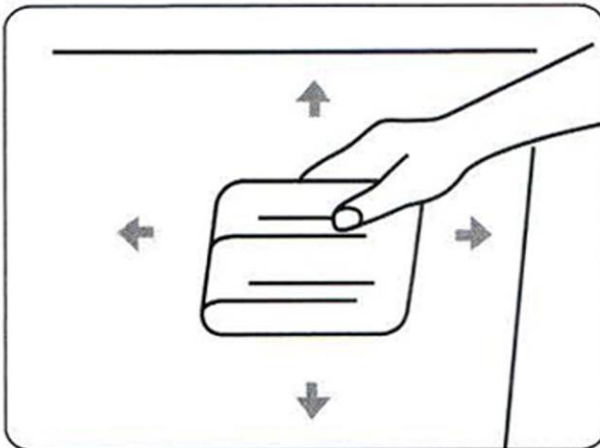

4

