



1 Measure & Cut

Measure 1/2 inch shorter than the floor to ceiling distance. Make two cuts toward the centerline, using tin snips. Use one continuous length, do not splice.

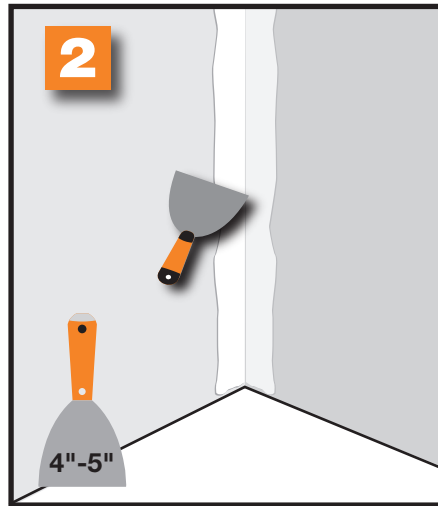


2 Apply Mud

Thin Joint Compound with water. Apply a generous, uniform layer 2" on both sides.

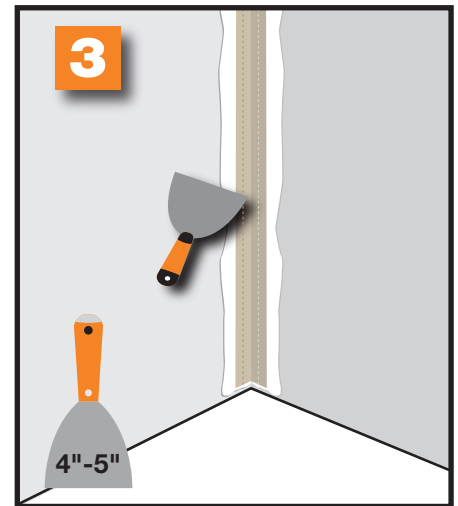


3 Set the bead

Using light, even pressure set the bead centered on the corner and tight to the ceiling. Smooth out any bubbles with a drywall knife.

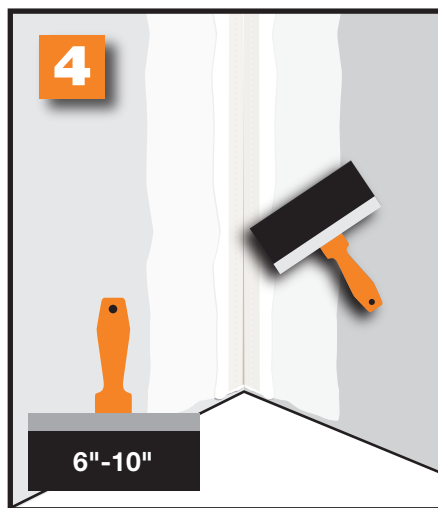


4 Top Coat Mud

Using a 6" - 10" drywall tapping knife, apply a top coat of drywall joint compound to each side. Feather the compound 8" - 10" from the corner. Allow to dry.

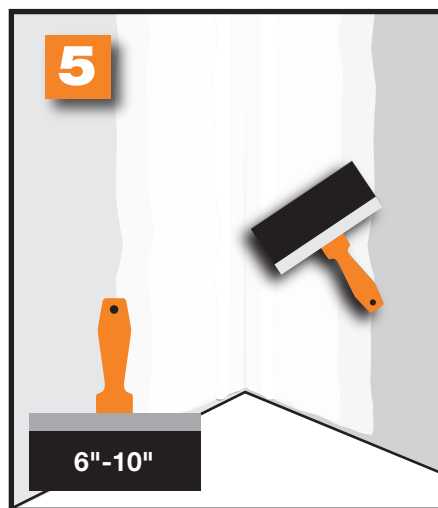

5 Skim Coat

Apply a thinner third coat of drywall joint compound to each side, feathered 10" - 12". Allow to dry.

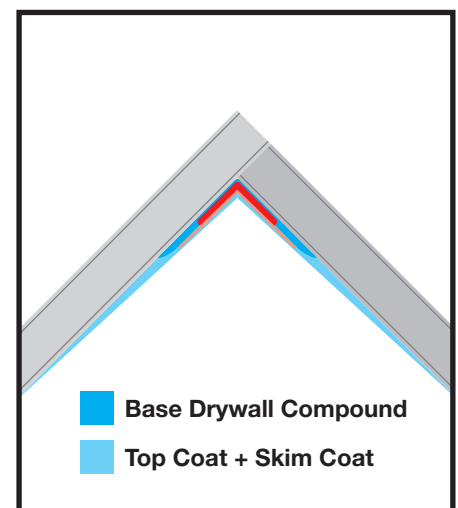

Top View

Overlapping drywall sheets form the corner. The feathering of the drywall joint compound smoothly covers the nails & corner bead.