


Parts and Recommended Tools

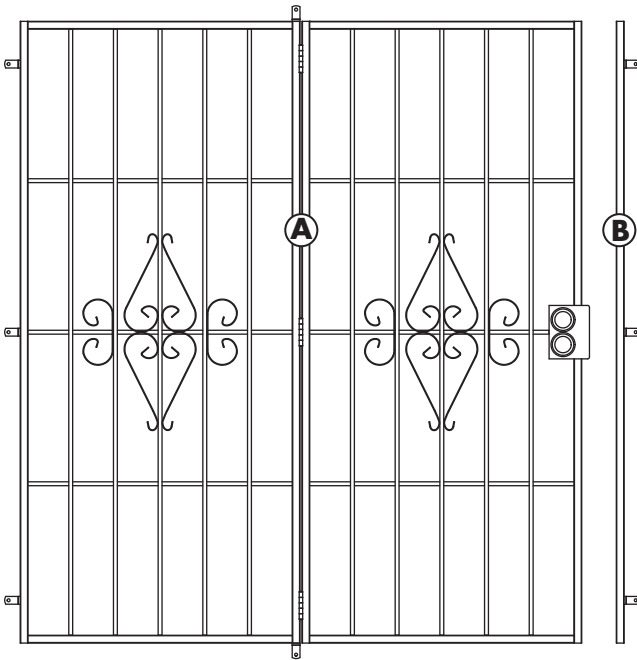

- A) Patio Security Door (1)**
- B) Lock-side Jamb (1)**
- C) 4" One-way Screw (8)**

Recommended Tool List:

- Measuring tape
- Pencil
- Level or string plumb line
- Drill and 3/16" drill bit
- One-way driver
- Safety glasses
- 2x4 Wood blocks
- 1x3 Wood blocks
- Wood shims
- Touch-up paint

It is also recommended to have a helper.

YOU WILL NEED:

Your choice of locksets, with 2-3/8" backset (sold separately)


1

Position the patio security door in front of opening. Align the front edge of lock-side panel with the inside edge of your lock-side mounting surface (see illustration). Make certain that the security door is vertically true (plumb).

Note: While also considering the lock-side jamb in this positioning, verify all holes in the fixed L-brackets will align with a mountable surface.


With a pencil, mark location to drill through the pre-drilled holes of the fixed panel L-brackets.

Where marked, pre-drill 3/16" holes. Fasten fixed panel to the house using the provided one-way screws. See recommended mounting order, in illustration below.

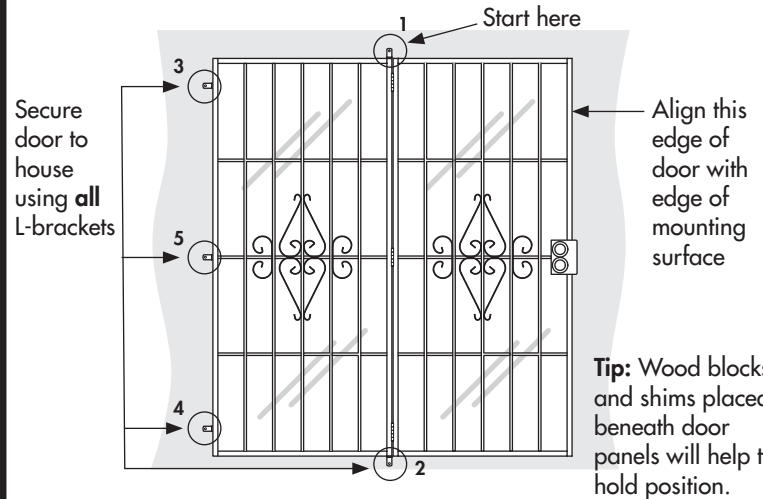

2

Attach your choice of locksets, with 2-3/8" backset (sold separately) to the active panel. Then, fully extend the lock bolts to the "locked" position.

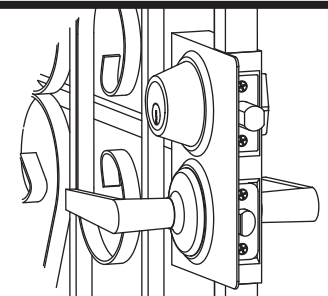

3

Align the lock bolt holes in the the lock-side jamb with the extended lock bolts, allowing approximately 3/16" space between the the door and the jamb, from top to bottom. Make sure the jamb is vertically true (plumb).

With a pencil, mark location to drill through the pre-drilled holes of the fixed panel L-brackets.

Where marked, pre-drill 3/16" holes. Fasten jamb to the house using the provided one-way screws.

