


HOME DECORATORS COLLECTION

PROVENCE MEDIA STAND

INV# 9938800510













ASSEMBLY INSTRUCTIONS








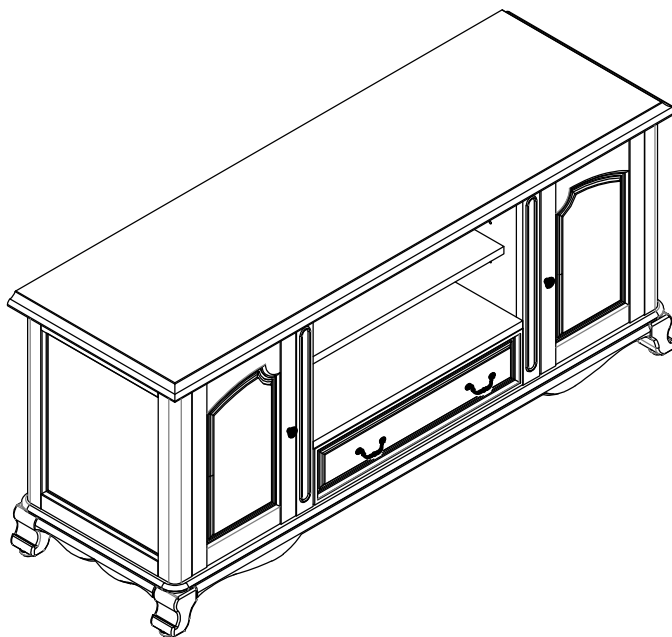







MADE IN CHINA

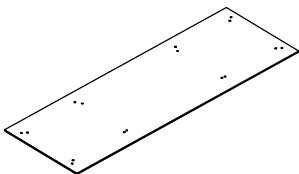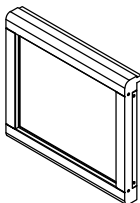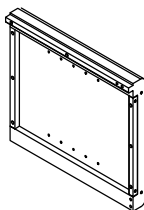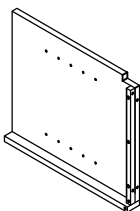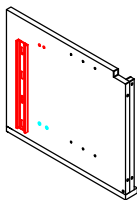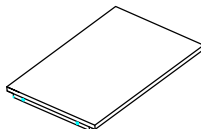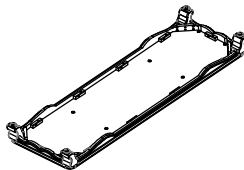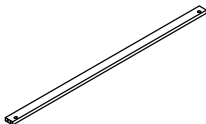

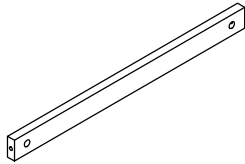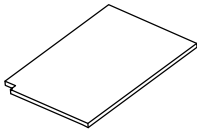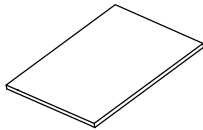
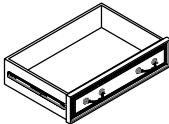
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<p>A</p>  <p>TOP PANEL-1PCS</p>	<p>B</p>  <p>LEFT SIDE PANEL-1PCS</p>	<p>C</p>  <p>RIGHT SIDE PANEL-1PCS</p>
<p>D</p>  <p>LEFT STAND PANEL-1PCS</p>	<p>E</p>  <p>RIGHT STAND PANEL-1PCS</p>	<p>F</p>  <p>FIXED SHELF-1PCS</p>
<p>G</p>  <p>LEFT DOOR-1PCS</p>	<p>H</p>  <p>RIGHT DOOR-1PCS</p>	<p>I</p>  <p>BOTTOM PANEL-1PCS</p>
<p>J</p>  <p>TOP BACK RAIL-1PCS</p>	<p>K</p>  <p>FRONT LEFT TOP RAIL -1PCS</p>	<p>L</p>  <p>FRONT RIGHT TOP RAIL-1PCS</p>



<p>M</p>  <p>FRONT MIDDLE RAIL-1PCS</p>	<p>N</p>  <p>SIDE ADJUSTABLE SHELF-2PCS</p>	<p>O</p>  <p>MIDDLE ADJUSTABLE SHELF-1PCS</p>
<p>P</p>  <p>MIDDLE BACK PANEL-1PCS</p>	<p>Q</p>  <p>DRAWER-1PCS</p>	<p>R</p> <p>Ø1/4"x1-1/4"</p>  <p>BOLT-20PCS</p>
<p>S</p>  <p>SPRING WASHER-20PCS</p>	<p>T</p>  <p>FLAT WASHER-20PCS</p>	<p>U</p>  <p>ALLEN KEY-1PCS</p>
<p>V</p>  <p>SHELF HOLDER-12PCS</p>	<p>W</p>  <p>CAM-LOCK-8PCS</p>	<p>X</p>  <p>CAM-BOLT-8PCS</p>
<p>Y</p>  <p>WOOD DOWEL-26PCS</p>	<p>Z</p> <p>Ø3x15</p>  <p>SCREW-8PCS</p>	<p>A1</p> <p>Ø3x15</p>  <p>SCREW-23PCS</p>

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

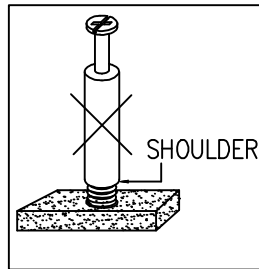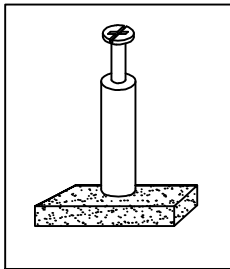


NOTE: TURN THE CAM-BOLTS SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

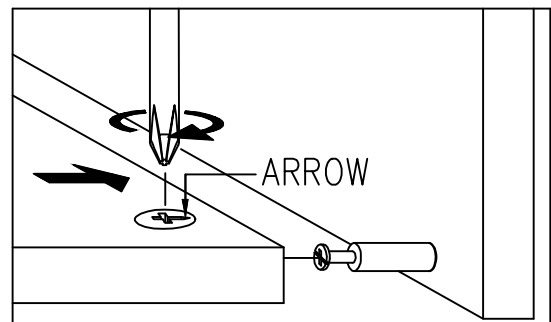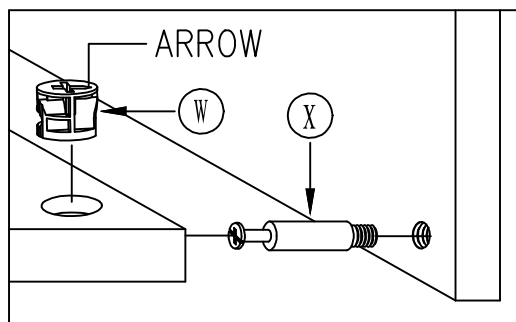


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTSS

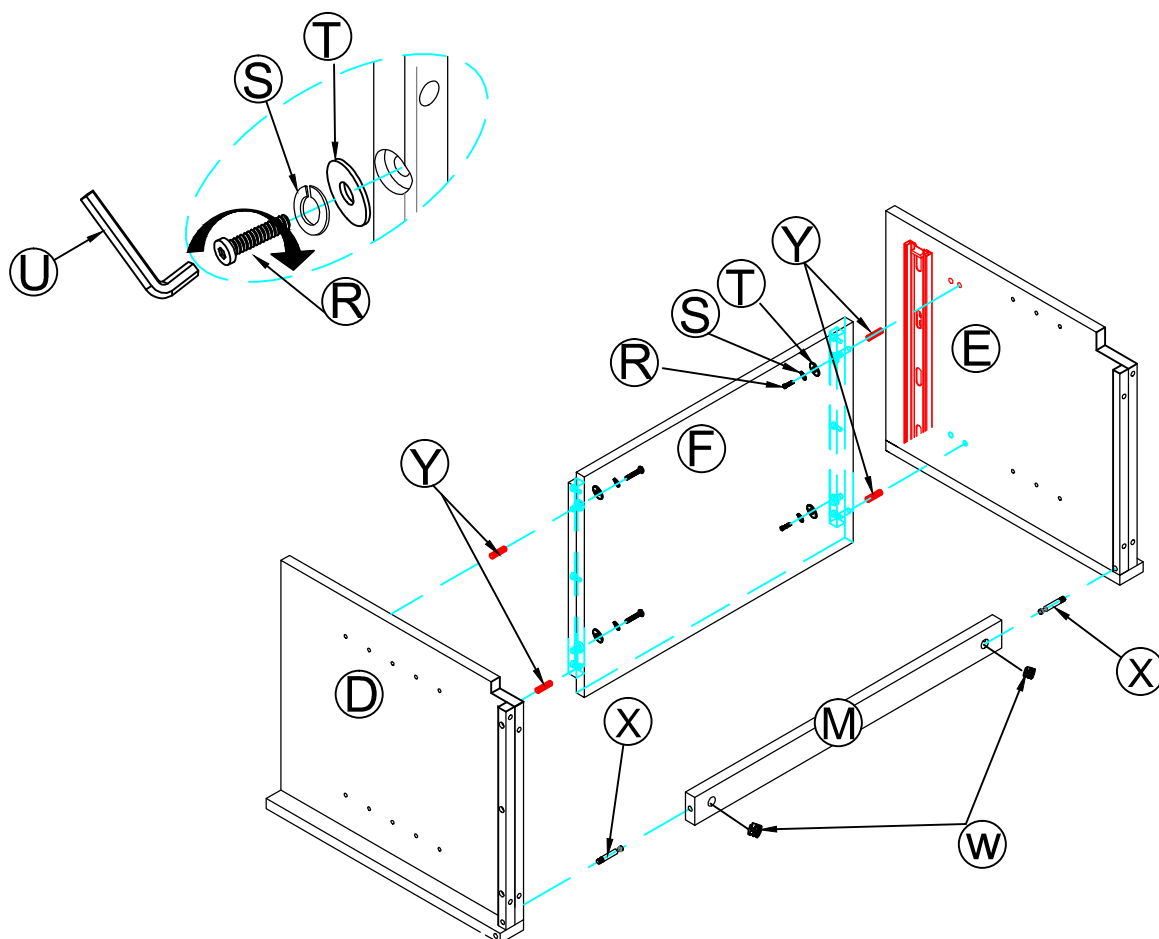


1). ASSEMBLE THE LEFT/RIGHT STAND PANELS/FIXED SHELF/FRONT MIDDLE RAIL (D/E).

- INSERT 4PCS WOOD DOWELS(Y) TO THE FIXED SHELF (F), THEN ATTACH THE LEFT/RIGHT STAND PANELS BY USING 4PCS FLAT WASHERS (T), 4PCS SPRING WASHERS (S) AND 4PCS BOLTS (R). TIGHTEN WITH ALLEN KEY (U) AS SHOWN.
- INSTAL 2PCS CAM-BOLTSS (X) TO THE LEFT / RIGHT STAND PANELS (D/E).
- PUT THE FRONT MIDDLE RAIL (M) INTO THE CAM-BOLTS (X), THEN USE 2PCS CAM-LOCKS (W) TO FIX.

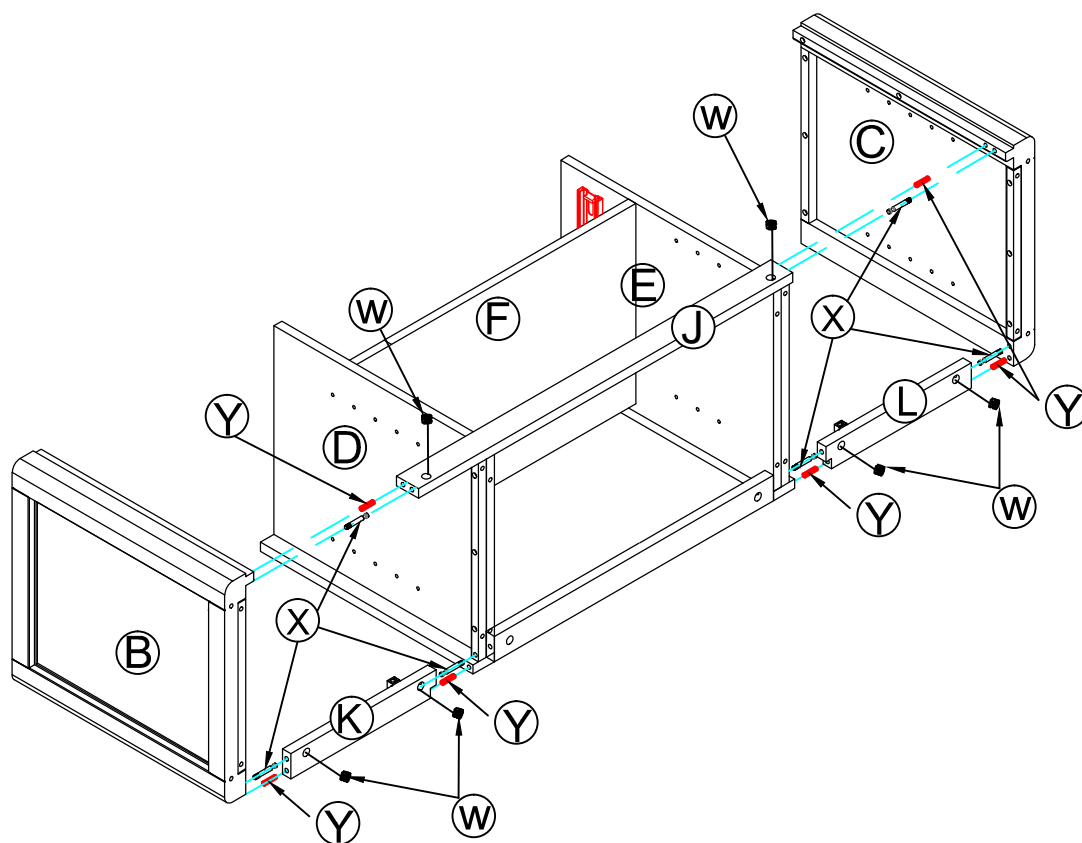

2).ASSEMBLE THE LEFT/RIGHT SIDE PANEL AND RAILS.


- INSERT 4PCS WOOD DOWELS(Y) TO THE LEFT/ RIGHT SIDE PANELS AND LEFT/RIGHT STAND PANELS (B/C/D/E).
- JOIN THE LEFT/RIGHT STAND PANEL (D/E) AND LEFT/RIGHT SIDE PANELS (B/C) BY USING 4PCS CAM-BOLTS (X).
- PUT THE FRONT LEFT/RIGHT RAILS/TOP BACK RAIL (K/L/J) INTO THE CAM-BOLTS (X), THEN USE CAM-LOCKS (W) TO FIX.

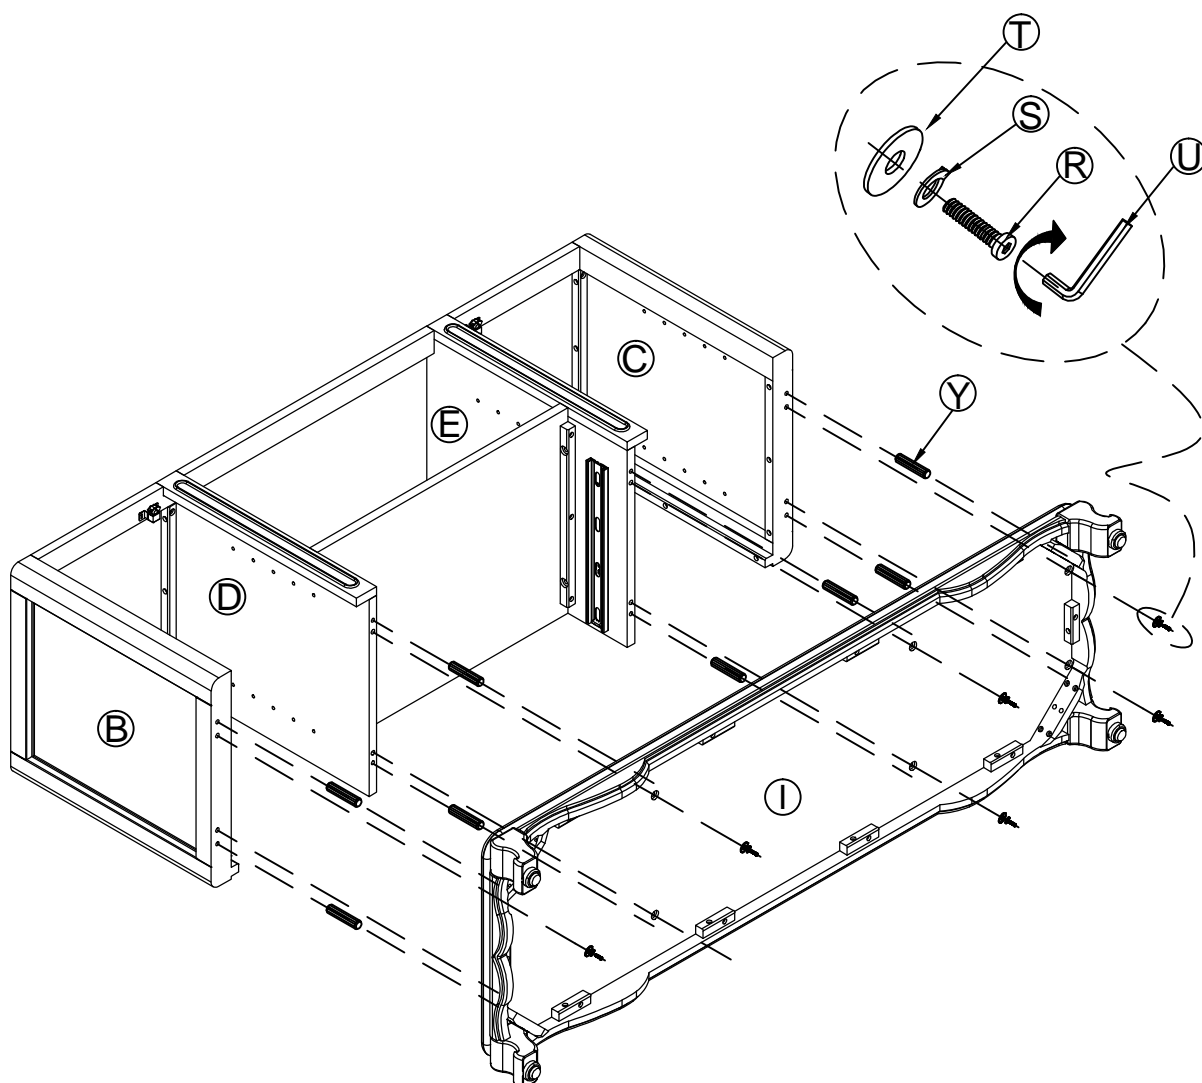

3).ASSEMBLE THE BOTTOM PANEL.


- INSERT 8PCS WOOD DOWELS(Y) TO THE BOTTOM PANEL (I), THEN JOIN THE BOTTOM PANEL(I) TO THE CABINET BY USING 8PCS SPRING WASHER(S), 8PCS FLAT WASHER(T) AND 8PCS BOLTS (R) .

SPECIAL NOTE: SUGGESTED TWO PEOPLE TO ASSEMBLE THIS STEP TO REDUCE RISK OF DAMAGING PRODUCT WHEN ALIGNING BOLTS.

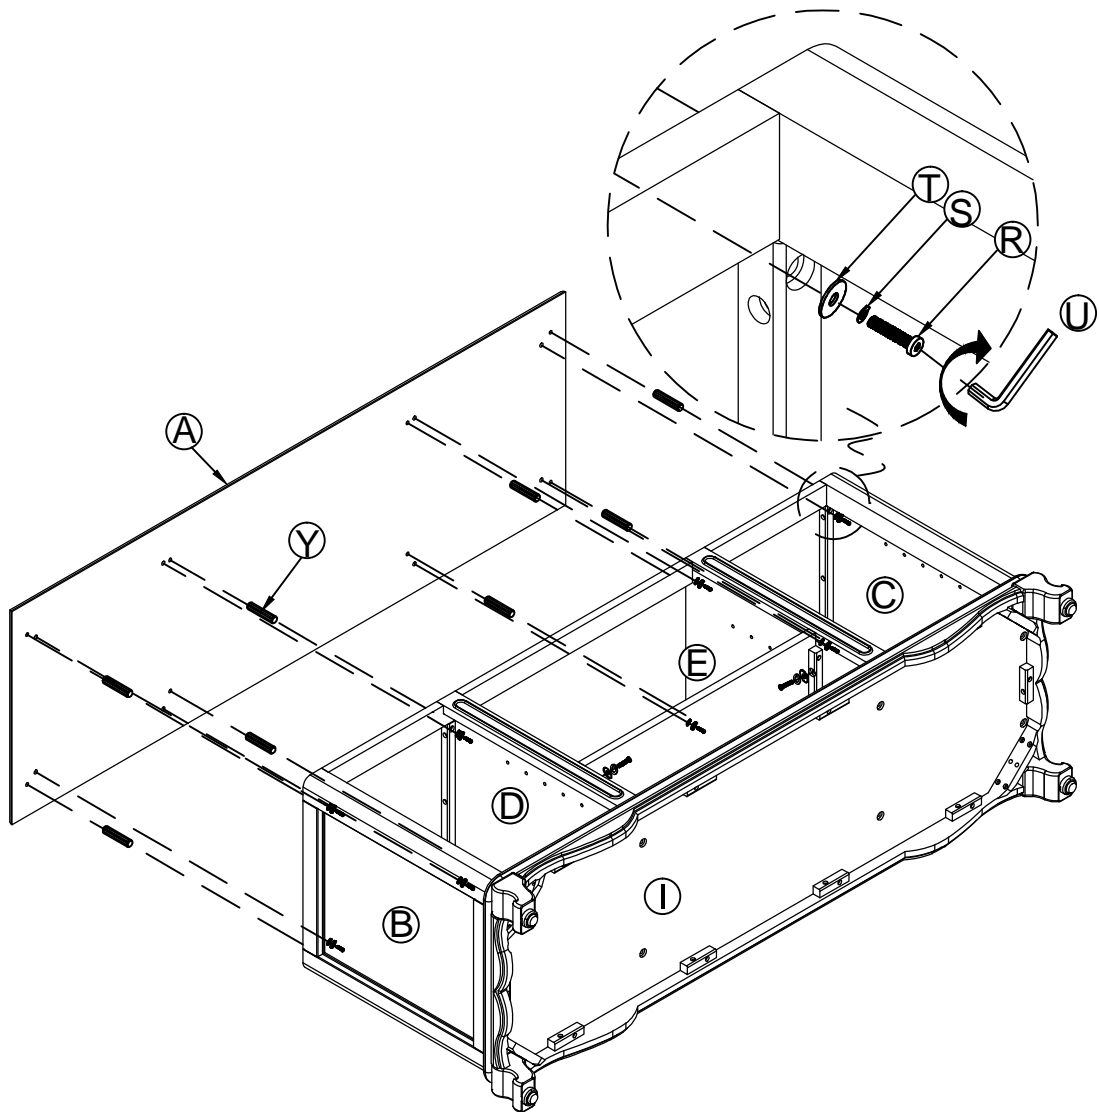


4). ASSEMBLE THE TOP PANEL

- INSERT 8PCS WOOD DOWELS(Y) TO THE TOP PANEL(A), THEN JOIN THE TOP PANEL(A) TO THE CABINET BY USING 8PCS SPRING WASHER(S), 8PCS FLAT WASHER(T) AND 8PCS BOLTS(R) .
SPECIAL NOTE: SUGGESTED TWO PEOPLE TO ASSEMBLE THIS STEP TO REDUCE RISK OF DAMAGING PRODUCT WHEN ALIGNING BOLTS.

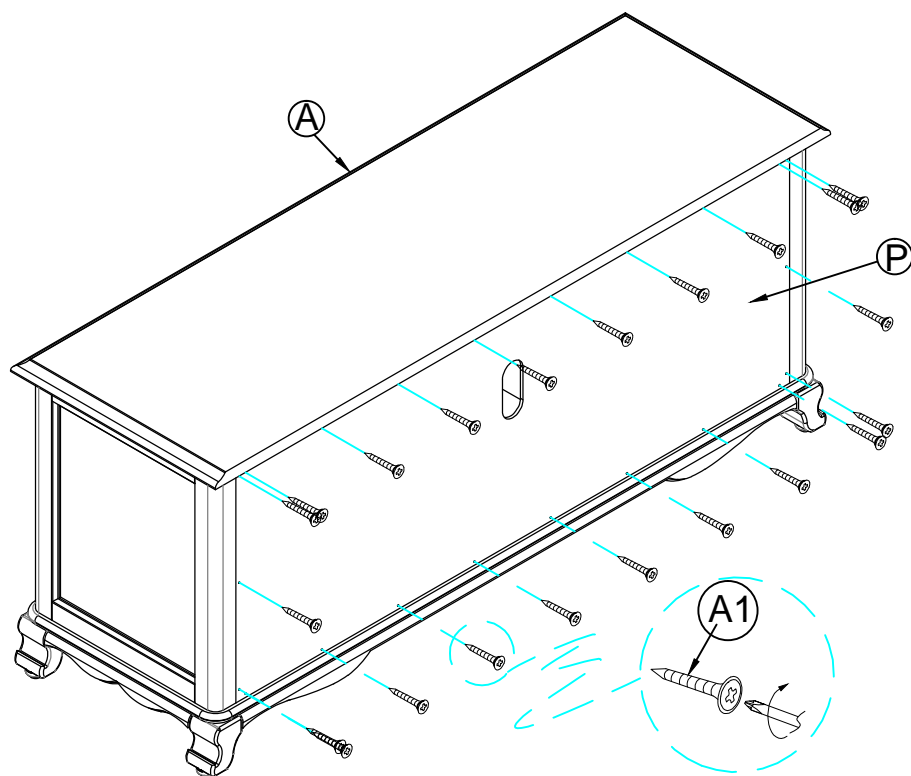


5).ASSEMBLE THE MIDDLE BACK PEANL

- JOIN THE MIDDLE BACK PANEL(P) TO THE CABINET BY USING 22PCS SCREWS (A1).

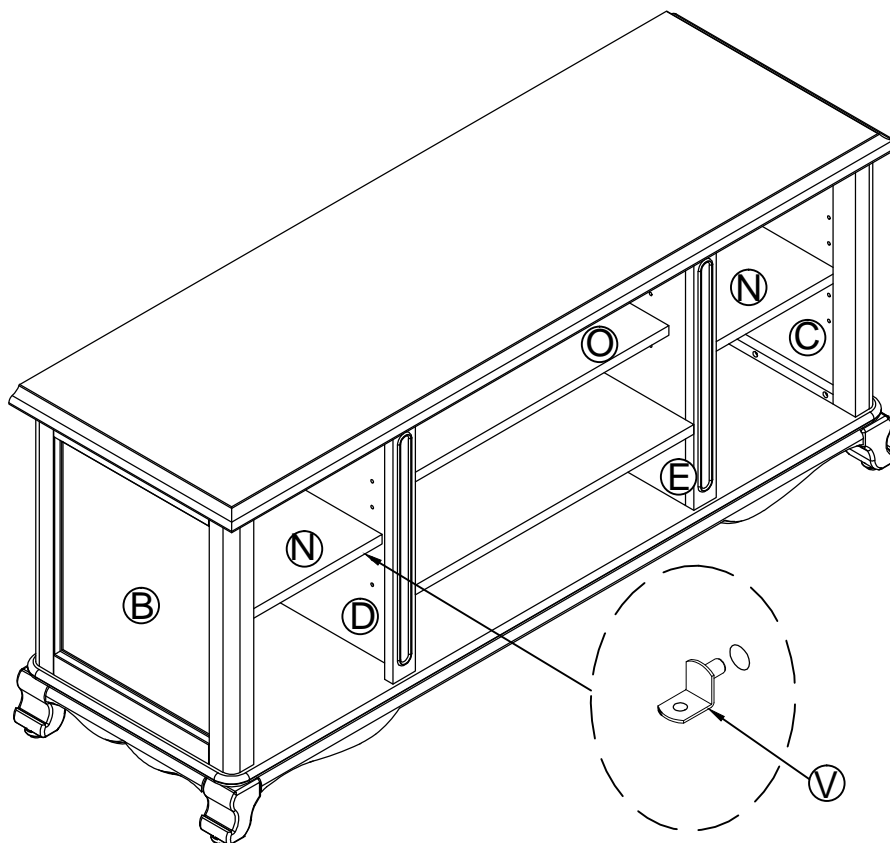




6).ASSEMBLE THE SIDE/MIDDLE ADJUSTABLE SHELVES.

- ATTACH THE 12PCS SHELF HOLDERS (V) ON THE LEFT SIDE PANEL (B), RIGHT SIDE PANEL(C), LEFT STAND PANEL (D) AND RIGHT STAND PANEL(E).
- PLACE THE SIDE ADJUSTABLE SHELVES (N) ON EITHER SIDE. THEN, PLACE THE MIDDLE ADJUSTABLE SHELVES (O) IN THE CENTER.

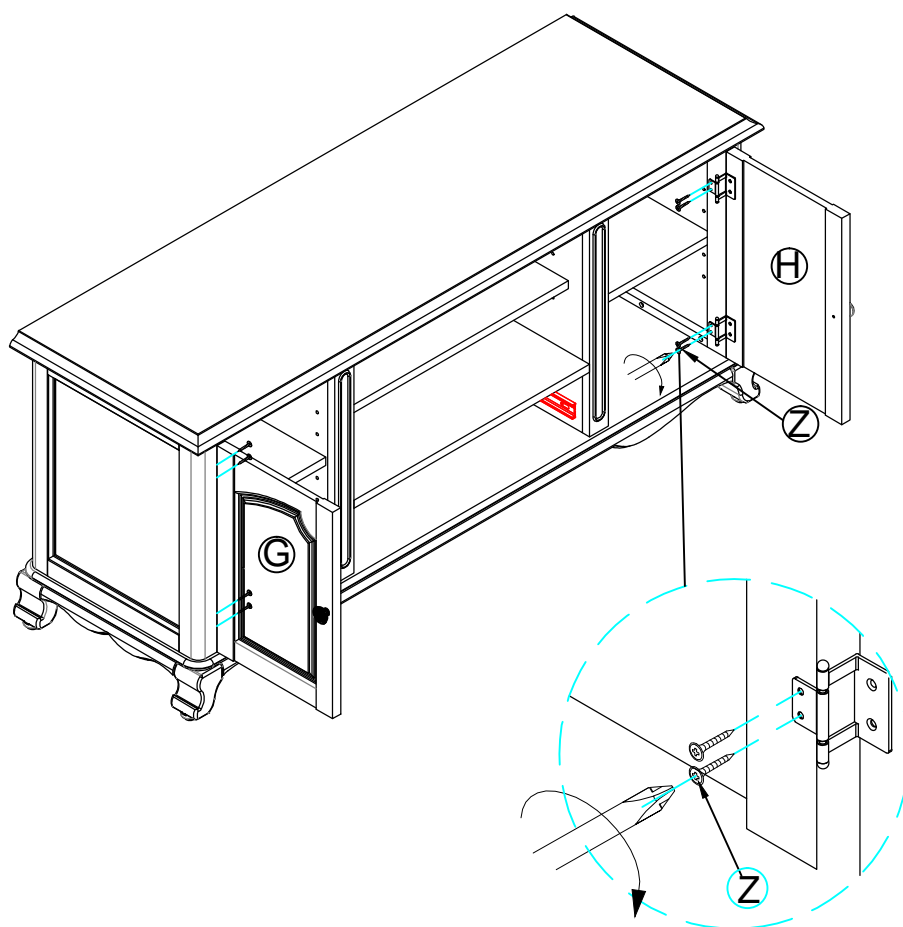

7).ASSEMBLE THE DOOR.

- ATTACH THE LEFT DOOR (G) TO THE LEFT SIDE PANEL (B) BY USING 4PCS SCREWS (Z).
- ATTACH THE RIGHT DOOR (H) TO THE RIGHT SIDE PANEL(C) BY USING 4PCS SCREWS (Z).

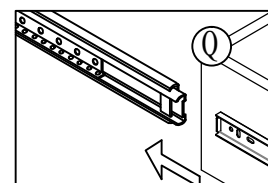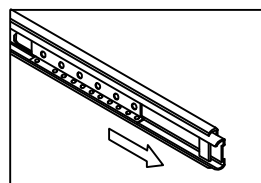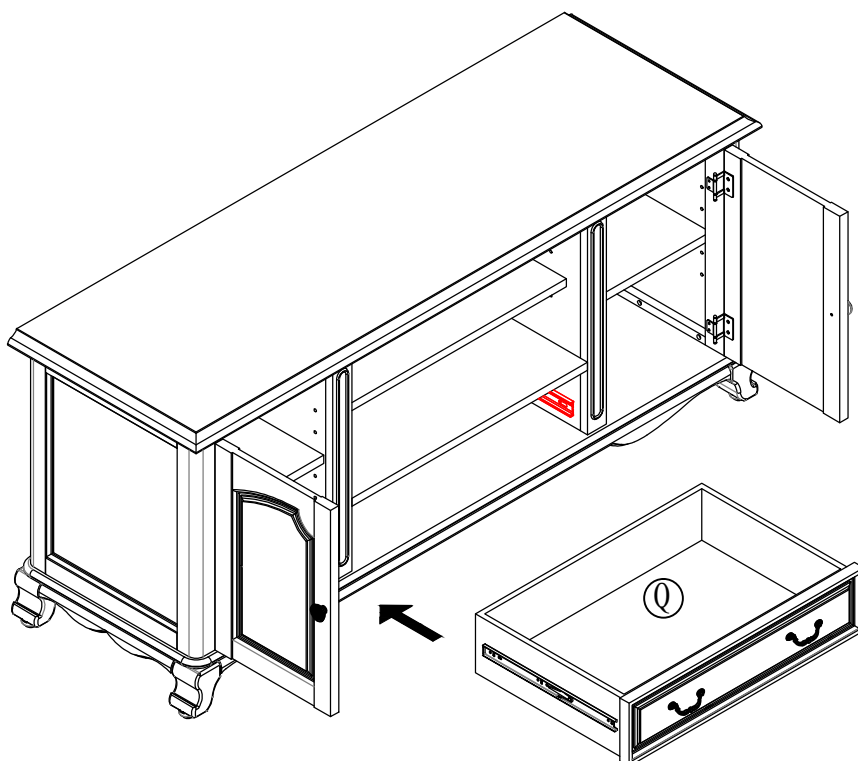

8).ASSEMBLE THE DRAWER

- EXPAND THE INTERIOR CABINET GLIDES. LINE UP THE DRAWER GLIDE TO THE CABINET GLIDE AND SLOWLY PUSH THE DRAWER INTO THE CABINET BODY ENSURING THE GLIDES INTERLOCK.