


Installation

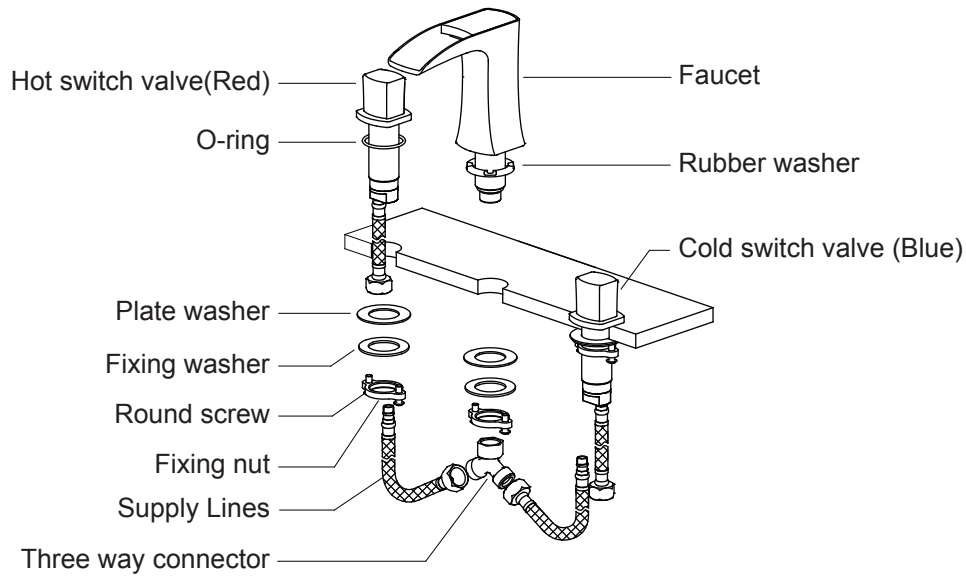

1. Fit the rubber washer into the bottom groove of the faucet, place the faucet into the installing hole on the countertop. Place the plate washer and fixing washer under the countertop and revolve the fixing nut. Check that the faucet is correctly positioned, then tighten the round screw. Screw the three way connector (make sure a plate washer inside) onto the bottom thread of the faucet. Install the supply lines attached hot switch valve (Red) and cold switch valve (Blue) into the installing hole on the countertop. Turn the hot switch valve in clockwise direction and cold switch valve in anticlockwise direction to off state. Place the plate washer and fixing washer under the countertop and revolve the fixing nut. Adjust the position of the two valves and keep the handle in the same direction as the diagram, tighten the round screw.
- 2.
3. Screw one end of the supply lines to the thread on the hot and cold switch valve. (See the above diagram)
4. Screw the other end of the supply lines to the thread on the three way connector. (See the above diagram)

